



## Replacing Discharge Pump

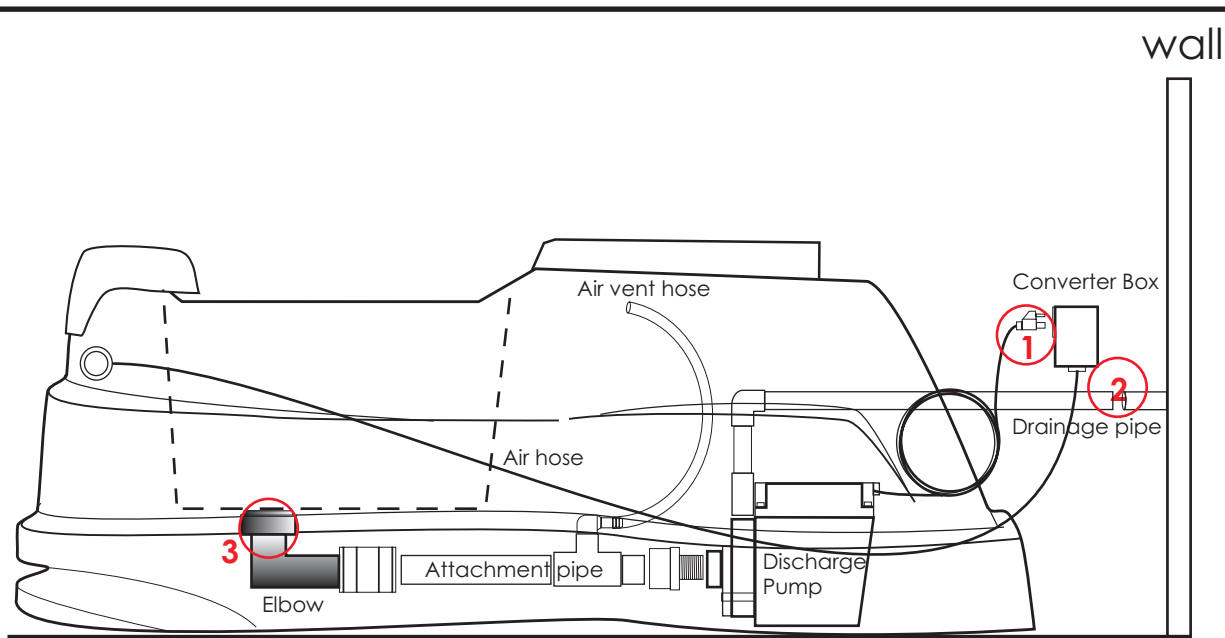

- 1) Unplug the power cord from Discharge Pump
- 2) Disconnect the drainage pipe
- 3) Disconnect Elbow, remove straps from the discharge pump,
- 4) Remove complete drain assembly along with discharge pump as shown as below

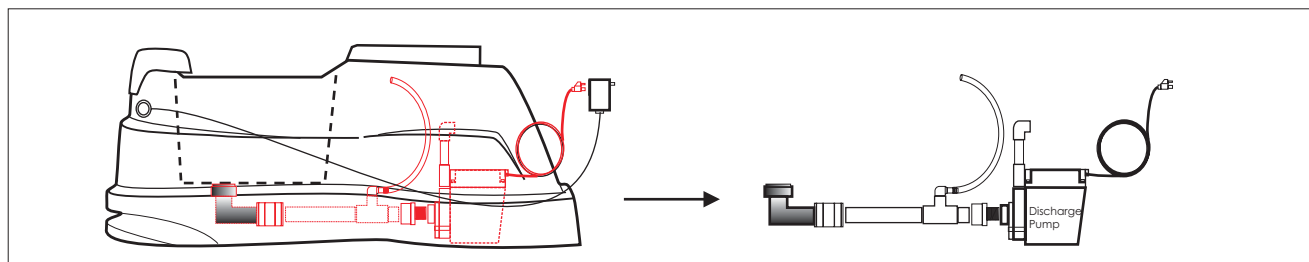

- 4) Remove Discharge pump
- 5) Replace with new Discharge pump
- 6) Re-connect elbow & drainage pipe
- 7) Re-connect complete discharge pump assembly

### When discharge pump humms but does not drain out the water:

- 1) Check if your pipe (elbow, attachment pipe, discharge pump, drainage pipe) is clogged
- 2) Turn off the power by pressing the discharge on/off button, then wait 5-10 seconds, then turn it back on
- 3) Disconnect the drainage pipe, then test draining out the water as an original condition

### When discharge pump does not humm:

- 1) Check power cord. Make sure your discharge pump power cord is connected to the converter box
- 2) Check converter box. Make sure your converter box is connected to your power source. If your converter box is connected to surge protector, please check your surge protector
- 3) Make sure your air hose from discharge on/off button to the converter box is properly attached