
Water Joy Whirlpool Pedicure Spa Manual

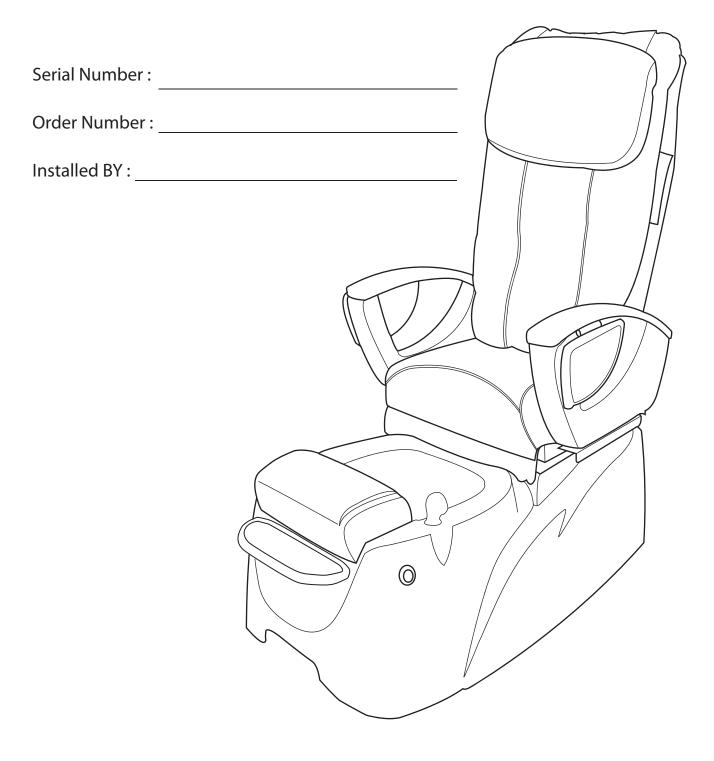





Important Considerations

Electrical Service

A 110V, 60HZ, 15AMP GFCI protected ground must be used to supply power to each indivisual pedicure spa. And the main circuit breaker MUST be at 25AMP for maximum of two unit.

Water Supply

All plumbing connections must conform to local codes. Water supply to the spa should be provided with adequate water pressure and water temperature.

- Water pressure

To fill the basin correctly up to level, Normal water pressure should be between 30 to 80 P.S.I.

- Water temperature

The hot water supply temperature must not exceed 140°F. Adjust your hot water accordingly. For hot and cold water supply fittings and drain fittings location, see below diagram. Carefully connect the water supply line to the appropriate fittings located on the rear of the pedicure spa.

Backflow Preventive Device

This Device is optional, therefore yot need to order seperately. Salontech does not guarantee the quality of this device.

- Specification


Backflow preventive device for faucet: Vacuum breaker comply with ANSI / NSF - 61 - 2000, ASMB A112.18.1 - 2000, ASSE1014 and CSA standard - B125.98

ANSI / ASME A112.18.3M (performance requirements for backflow preventive device and systems in plumbing fixture fittings) is applicable to plumbing fixture fittings with outlets not protected by an air gap. Included in the possible range of applications are fittings with hose connected outlets, fitting with pull out spout, hand held showers, shampoo fittings and deck mounted fittings. ASME A112.18.3M is now referenced in ASME A112.18.1M (plumbing fixture fittings) and CSA B125. Backflow preventive devices are listed to both standards with the Canadian Standard Association, IAPMO and UL.

ANSI - American National Institute. ASME - American Society of Mechanical Engineers. CSA - Canadian Standard Association. APMO - International Association of Plumbing and Mechanical Officials. UL - Underwriters Laboratory.

Drain Facilities


The pedicure spa drain must meet local plumbing codes. Check valve for Drain (not provided) Must be installed by a licensed plumber.

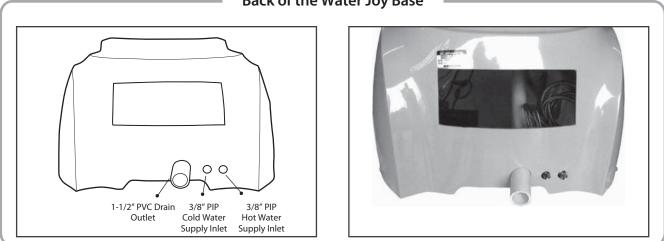


Back of the Water Joy Base




Identifying Components

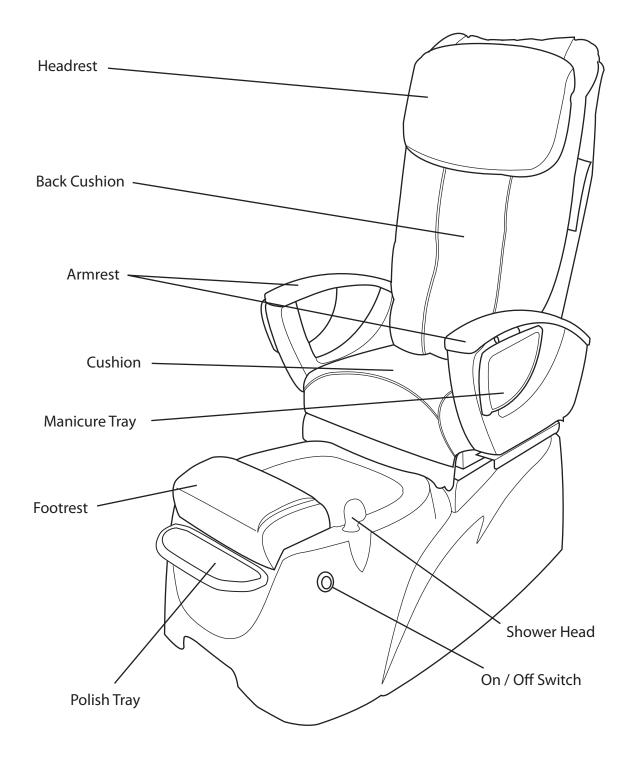

WaterJoy Specifications Hydro Therapeutic JJT Motor Jets with Dual Impeller System

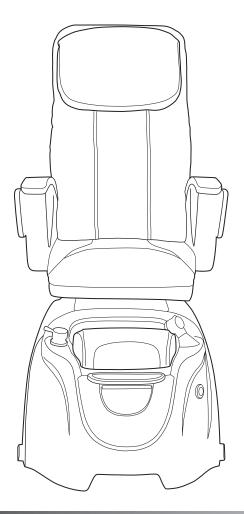


Specifications

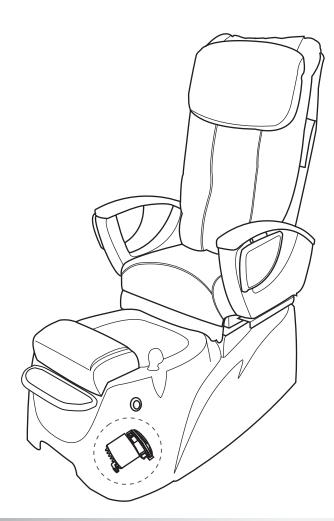

| Dimension & Weight | Water Joy (Base Unit) Water Joy (Chair) Stool | 29″W X 51″L X 16″H Wt. 165Lbs 22″W X 34 1.2″L(Incline), 50″L(Recline) X 44″H(Incline), 34″H(Recline) Wt. 125Lbs 19″W X 19″L X 22″H Wt. 13Lbs |
|--------------------|--|---|
| Capacity of Tub | | 4.25 US Gallon |
| Swithch | | On / Off Air activated switch |
| Whirlpool | JJT Dual Impeller Motor Jets | Hydro Therapeutic Motor Jet with Dual Impeller System |
| | Air Control | Air Induction System |
| Power Source | Motor Discharge Pump (optional) Massage System | 115V 1.2 Amp 60Hz 55W / Each Motor 115V 3.2 Amp 60Hz 110V - 120V 60Hz 90W 5Amp |
| Plumbing Source | Hot Water Cold Water Drain | 1/2 inch (fitting pre-installed) / 3/8 PIP Connection 1/2 inch (fitting pre-installed) / 3/8 PIP Connection 1 - 1/2 inch (see plumbing instruction) |
| Warranty | Unit Optional Item | 1 Year (see warranty) 180 Days |

* Due to continuous improvements on all of our products, specification, characteristics, packing, color and design are subject to change without notice

Water Joy

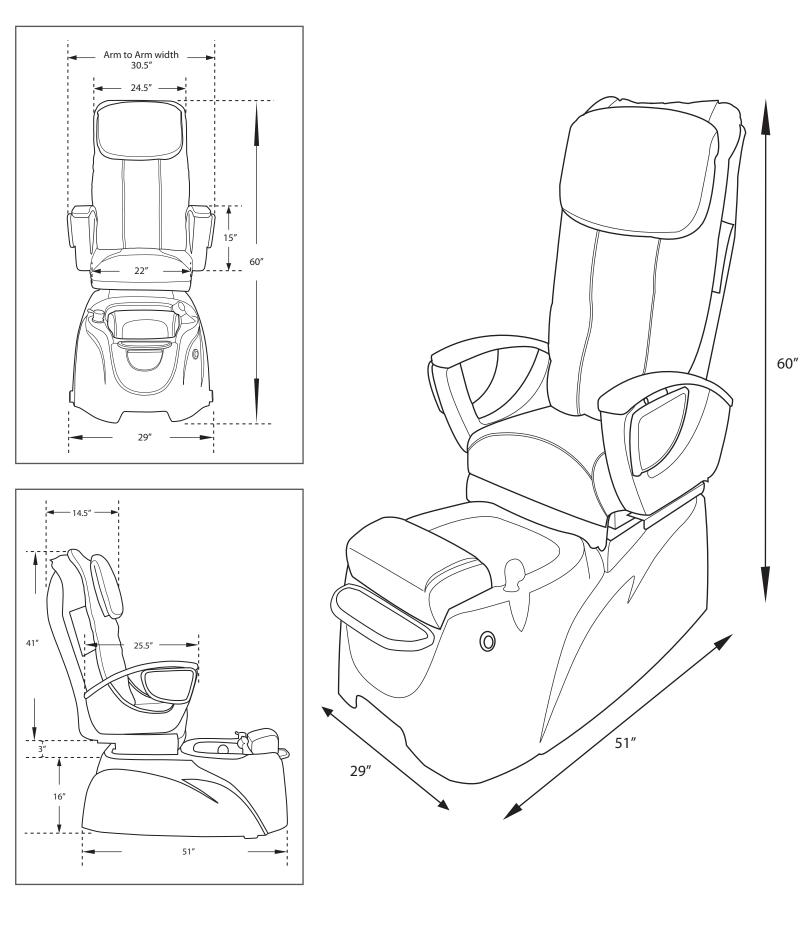

INSTALLATION SPECIFICATONS SUMMARY


Warning: Failure to comply with federal, state or local codes and ordinances will result in warranty being null and void.

As stated, the pedicure spa installation must comply with all plumbing and electrical codes. A licensed plumber and licensed electrician must complete the applicable connections of the pedicure spa.

LOCATION AND SUPPORT


Select a level location. The floor structure beneath the pedicure spa must be capable of supporting the occupied pedicure spa. For the seat back to full recline, the pedicure spa base must be mounted 22 inches from the wall as shown below:

How to use adjustable footrest

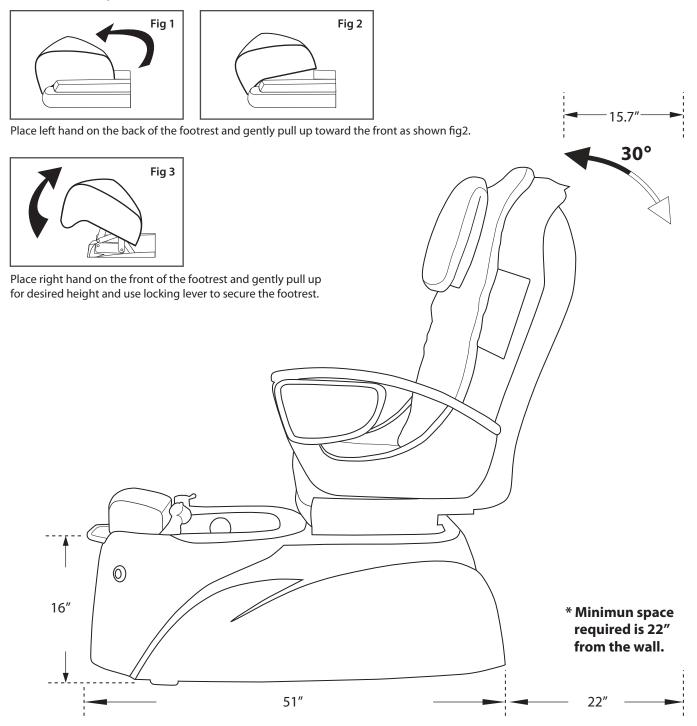



NOTE: The requirement for vaccum breaker varies from state to state and province to province. Please consult with the licensed plumber.

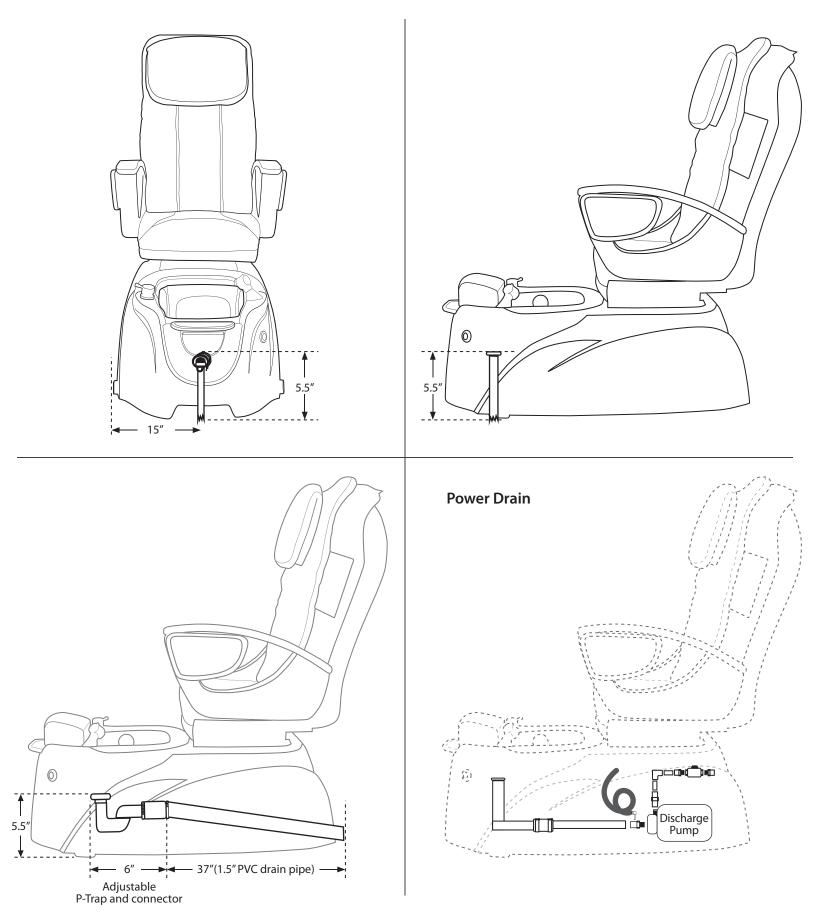

Water Joy

Massage System

Important Safety Instructions Warning: To reduce risk of burns, fire, electric shock or injury: READ ALL INSTRUCTIONS BEFORE USE; burns will result from improper use; please be careful handling this product.

Close supervision is necessary when unit is used by, on , or near children and the disabled. Use This unit only for its intended use as described in this manual. Do not use any attachments not recommended by MFG.

- Keep the cord away from heated and wet surfaces.
- Do not use outdoors.
- Do not operate where aerosol products are being used or where oxygen is being administered.
- Never operate If it has a damaged cord or plug, or dropped in the water. To disconnect, press power button to turn off, then remove the plug from the outlet.
- Allow 30 minutes break time between operations.
- Do not place any heavy object on the chair and do not let children play with it.
- The maximum weight capacity for the massage chair is 250lbs.

Your massage chair is simple to operate using the handheld controller included with your chair.

Before you use your chair, we recommend that you familiarize yourself with the remote control and the basic massage functions.



1. Controller operate



| BACK | NECK | UPPER | TIMING | G | Button |
|--|--|---|---|--|----------------------|
| Carry on automatic massage around in carrying the waist mainly | To carrying on automatic massage around the neck shoulder mainly | Adopt the various tactics to carry on automatic massage to different position of the upper part of the body, the massage position covers the whole upper part of the body. | Three modes of timing: 10 mins, 20 mins and 30 mins. | To start or stop massage of the upper body, the button does not work when the massage system is at its position of recovery. | Adjust massage balls |

Method of usage

(1)Upper body manual massage, lower body massage

| | Fixed position (fixed) massage | | dotent |
|---------------------------|----------------------------------|---------------------------|----------|
| راً eboso | Small area(partial) trip massage | BACK BACK | s tsəi. |
| nassage 🖄 | Upper body(overall) trip massage | | gack |
| 3 width options available | wath arrest 3 width opt | WIDTH | Width |
| 5 speed options available | speed 5 speed op | SPEED | Speed |
| Speed, Width, Strength | 10 | Knocking 📢 | |
| Speed, Strength | Ð | Kneading & Flapping | |
| Speed, Width, Strength | Ŋ | Flapping | роц |
| Speed, Strength | 23 | Kneading 🔊 | θM |
| Speed, Width, Strength | ð | press | |
| Adjust massage balls | Display status | Button | Function |
| | age: | upper body manual massage | upper b |


(2)Lower body air pressure manual massage:

| Strength | Mode | BUTTOCK |
|--|--|---|
| NIGHT | NODE | armox |
| Alusting the intensity of airbags, two levels for your choice | 4 options of buttock airbag modes A, B, C ,D | ON/OFF button of buttock airbag massage |

.

Water Joy

Discharge Pump

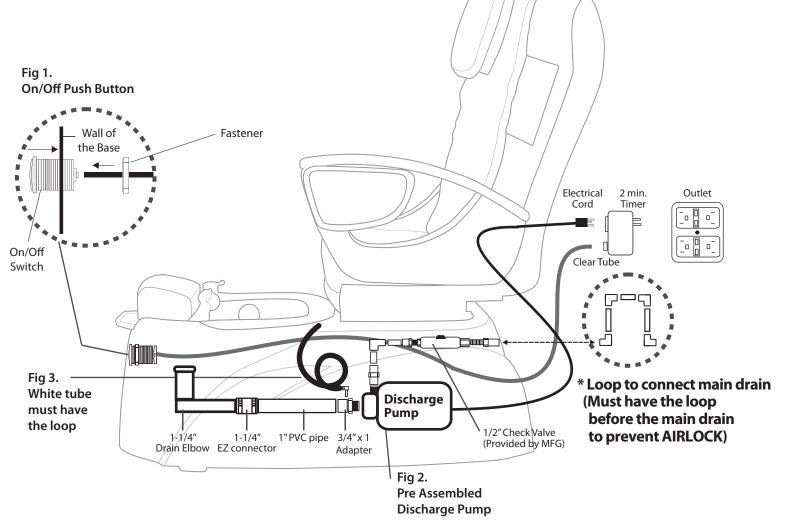

Discharge Pump Installation Instruction


1. Make a hole (size 1-3/8") for the on/off switch as shown Fig1. Pre drill required.

2. Place 1/8" clear hose into the rear of the switch and on/off switch into the hole.

3. The discharge pump kit is made to fit into the pedicure unit as shown is Fig2.

- 4. Connect EZ connector to the drain elbow.
- 5. Plug discharge pump outlet into black 2 minute timer.
- 6. Plug black 2 minute timer into the wall outlet.

7. It is very important that tip of white tube remain above the water level with one big loop as shown in Fig3.

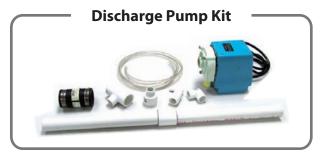

Operation Instruction

Please DO NOT run dry

- 1. Turn to open the drain plug wait 2 seconds.
- 2. Press on/off switch to activate the timer.
- 3. After the water has drained out from the basin. Press the on/off switch again to stop.