

Distributed by SpaSalon.us

www.spasaloon.us

STAR PEDICURE SPA



Specification: Model # LS-5000B (LS-510L-209-3803VA BG)

Tub: HH-005A Fiberglass Tub,
Color # 209 Light Salmon
Water Pump: Pipeless Jet System
Air Button: AB-003
Air Control: AC-002
1 Jet: Jet-002
Overflow: M-004 1-1/2" Drain pipe.
Faucet: L001-2
Sprayer: B-006
Stand: D-005
Water Spout: K-005
Footrest: G-001
PU Foam: G001-1R Round Burgundy
Spa Chair: LS-3803VA Spa Massage Chair, Input ~120V 60 HZ 180W.
Serial No.:

Please read and follow instructions carefully!

Receipt & Inspection

Thoroughly inspect each shipment immediately upon arrival. It is important that you notify the driver of any damage and insist on a notation directly on the face of the freight bill. Failure to note damage on the face of the freight bill may impede and/or prevent any claims that you may have against the carrier.

If concealed loss or damage is found, you must notify the carrier at once and request an inspection. **DO NOT DISCARD THE SHIPPING CARTON.** If you give the carrier a clear receipt for goods that have been damaged in transit, you do so at your own risk and expense.

Important Precautions

RNT INT'L INC. requires that you contact your local, qualified plumber to install your new Lonestar Pedicure spa. It can't operate efficiently or safely unless it is provided with adequate electrical power, sufficient water pressure, proper water temperature and required drain facilities. Information on these important subjects is contained in this manual. We urge you to read it carefully to make sure these requirements are met.

Precautions

- 1) Excessive water temperature is dangerous and should be checked before use. Maximum operating water temperature should not exceed 100 deg.F (38 deg. C) and the maximum supply water temperature should not exceed 150 deg. F (65 deg. C).
- 2) Always enter and exit the pedicure spa slowly and carefully.
- 3) Never bring and/or operate any electrical devices into or near the spa.
- 4) Do not stand in the whirlpool tub!

Warning!

Do not use if you are diabetic, Have poor circulation, or if any area of your feet or leg are inflamed or have open wounds. Consult a physician before using if you have any kind of fungal infection, swelling, fracture, or persistent pain.

Massage should be pleasant and comfortable

If you experience pain or discomfort, discontinue use immediately and consult a physician.

Installation Summary


The installation must comply with all plumber and electrical codes. A licensed plumber should complete the plumbing of the spa.

Note: Failure to comply with federal, state or local codes and ordinances will result in warranty being null and void.

Location and Support

Select a level location where the floor structure beneath the spa is capable of supporting the occupied spa

For the seat back to fully recline, the spa base must be a minimum distance from the wall : 20 Inches

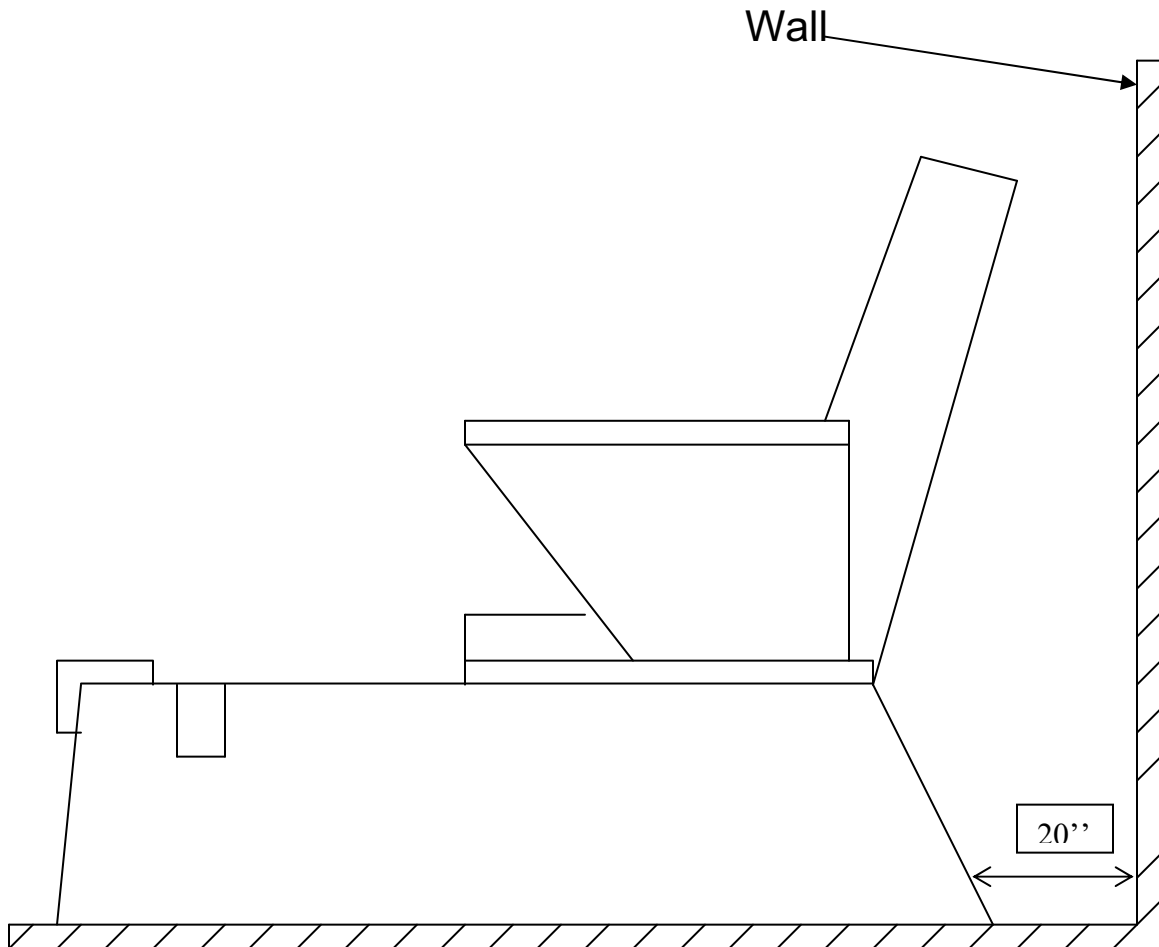

TESTING THE PEDICURE SPA

After the spa has been installed and the plumbing and electrical connections have been made, clean the tub with Lonestar spray and wipe dry with a clean towel.

Follow these instructions to test the footspa:


- 1) Turn the "Chrome drain handle" counter- clockwise to close the drain.
- 2) Fill the tub to the "water fill line" using warm water.

- 3) Turn the “whirlpool on/off switch” to the “on” position. This will turn the whirlpool pump on.
- 4) Check for leaks underneath the spa.
- 5) Turn the “whirlpool on/off switch” to the “off” position. This will turn the whirlpool pump off.
- 6) Turn the “chrome Drain Handle” clockwise to open the drain.

Note: If the power drain pump is not used, the water will drain out automatically, otherwise follow steps 7 & 8 to complete the water draining.

- 7) Push the “Discharge on/off Button”. This will turn the power drain pump on and start draining the water out of the tub.
- 8) The power drain pump will automatically turn off after 2 minutes, or you can push the “Discharge on/off Button” to turn the power drain pump off.

Inside Tub View:

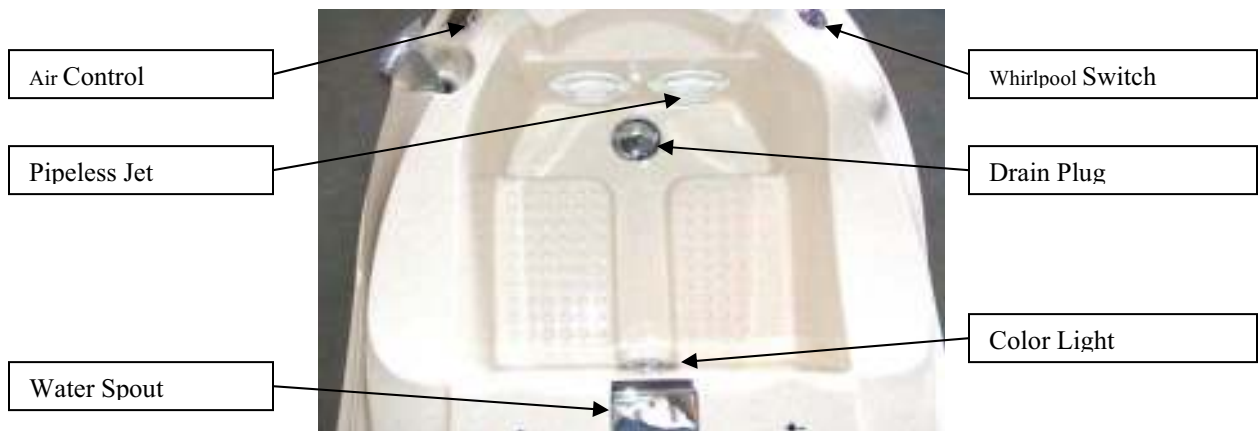

Front View:



CLEANING AND DISINFECTING THE WHIRLPOOL SPA

Between each customer

- 1) Drain all water and remove debris from the spa.
- 2) Clean the spa with soap or detergent and water.
- 3) Spray the surfaces and walls of the spa with sprayer.
- 4) Wipe the spa dry with a clean towel.

Daily flushing of the whirlpool system

A requires that the spa be thoroughly cleaned after the last pedicure of the day in the follow manner:

- 1) Remove the suction fitting cover with a screwdriver and turn the jets cover counter- clockwise to take out.
- 2) All debris trapped behind the screen needs to be removed.
- 3) The inlet behind the screen needs to be cleaned with soap or detergent and water
- 4) Before replacing the screen, clean it with a chlorine bleach solution of 1 teaspoon of 5% chlorine bleach to 1 gallon of water.
- 5) Totally Clean Suction Cover, Jets cover and inside.
- 6) Replace the jets cover and suction fitting cover. Don't over tighten the mounting screw.
- 7) Don't run the spa whirlpool jets without the Jets cover and suction fitting cover in place
- 8) Fill the tub basin about 5 gallons water.
- 9) Turn the whirlpool jets on.
- 10) Add 3 teaspoons of low-foaming dishwasher detergent and 2 ounces of bleach to the tub basin.
- 11) Run whirlpool for 10-15 minutes and drain the tub basin.
- 12) Clean the exterior of the footspa with a soft cloth and mild detergent.

Every other week cleaning of the whirlpool system

In addition to the daily cleaning, the follow cleaning procedures must be done every other week:

- 1) Fill the basin 5 gallons water.
- 2) Turn the whirlpool jets on.
- 3) Add 3 teaspoon of low-foaming dishwasher detergent and 2 ounces of bleach to the tub basin.
- 4) Run whirlpool for 10-15 minutes. Let the water sit overnight in the tub (6-10 hours).
- 5) Run the whirlpool jets for 5 minutes and drain the tub basin.
- 6) Follow the "Daily flushing of the whirlpool system" instructions.

Cleaning and disinfecting records

A record must be made of the date time of each cleaning and disinfecting as required in the above procedures, and indicate whether the cleaning was a "daily" or "Bi-weekly". This record should be made available when requested by customer or inspector.

Failure to follow these cleaning instructions may result in voiding warranty coverage!

Please read this operating instruction carefully

Please keep this manual in perfect condition

Thank you for purchasing our massage chair. To ensure optimal function and safety, please read this manual carefully.

Important safety instruction

For use of this item, make sure to follow basic prevention measures including the following points:

Dangerous! To reduce electric shock risk to minimum:

1. Remember to unplug the power after each use.
2. Remember to unplug the power before cleaning.

Warning: to reduce the risk of burning damage, fire, electricity shock, or bodily harm:

1. Please make sure that the plug is completely inserted in the socket to reduce short circuit.
2. Please remember to unplug the chair if not in use. Please close all the massage functions before unplugging the chair.
3. Disabled people or those who can't express themselves must be strictly and continuously supervised while using this chair.
4. This item should only be operated according to this manual.
5. Please don't stand on the chair.
6. Please don't allow small children to use or play around the chair.
7. If the supplied cord is damaged, it must be replaced by the manufacturer or an authorized service agent to avoid damage or injury.
8. If the chair becomes damaged, splashed or dropped into water, or fails to operate, please contact the dealer and send it to an authorized service center for repairs.
9. Regularly inspect the cloth lining for excessive wear or tear. If there are any tears or holes on the cloth, please stop using the chair and send it to an authorized repair center.
10. Please keep this item safely away from heat sources, humidity, sharp objects, corrosive chemicals, and flammable objects.
11. This item is for indoor use only.
12. The plug of this item can only be connected to a suitable grounded socket. Please refer to grounding instructions. The plug should be accessible after installation.
13. To avoid electric shock or bodily harm please don't open or disassemble any part of this item. There are no parts of the chair that can be repaired by users themselves.

Safety prevention measures

Warning: to avoid bodily harm

1. Pregnant women, people of poor health and those who feel pain in their neck, back, waist, or hip should consult doctors before use. People with heart pacemakers or other personal medical devices should consult manufacturer of the device and doctors before use.
2. Please sit down after finding position of the massage rollers. Don't put any part of your body between the rollers, otherwise roller's massage action may cause harm. Also do not put your hands or feet into the gap between the back and the seat, back and armrest or other active parts to avoid bodily injury.
3. Do not use massage mechanism against bare skin. Although you may receive a stronger massage effect, skin irritation may result.
4. Remove all jewelry prior to using this chair.
5. Do not massage the head, belly, elbow or knees. Please be cautious when massaging shoulder areas.
6. Make sure to check the neck kneader's position. If the neck kneader is not in a good position, please adjust neck's position key to suitable position so there won't be any accidents or injuries.
7. Maximum massage time is 15 minutes (automatic stop function after 15 minutes). A massage of more than 15minutes may cause an uncomfortable feeling.
8. If you feel nausea or pain during the massage, please stop the massage, you may press "stop" key at any time, it will stop massage immediately.
9. Please don't sleep while massaging, massage after drinking is forbidden.
10. When back of the chair is in a reclined position, please don't sit on it or press heavily on it, as it may flip upside down.
11. Don't allow children or pets to play on it -especially during massage.
12. If power problems occur, please unplug the power immediately.

Operation prevention measures

Warning: to avoid damage to the chair

1. User's maximum weight is 120kgs; weight excess may cause damage to massage machine or permanent damage to other parts.
2. Please don't crush or drop the control set. Don't pull control cable or electric wire. Be careful not to clamp the cable between armrest and back of the chair.
3. Please don't touch cloth material of the chair with sharp things, and be careful not to drop cigarette, ash or lighters on the chair. Chair exposure in the direct sunlight may fade the cloth material.
4. If there is abnormal function in the chair, please shut off power and ask the designated repair center to check the chair. Don't repair it by yourself.
5. Don't repeat pressing any keys in very short time in case of any abnormal functions.
6. Noise coming from inside the chair when it is turned on is normal; it's the item's internal structure.

-
7. Make sure there are no obstacles behind the chair. Maximum declining degree is 137° . Please decline slowly and gradually to avoid touching the wall or other things that can make the chair function improperly.
 8. If there is strong pressure when massage rollers go up and down, safety circuit inside the chair may restart and immediately stop working to protect the massage chair. To avoid this from happening please raise your body slightly.
 9. Each time when finishing the massage please turn off the power and unplug the chair.

Grounding instruction

To reduce the risk of electric shock, proper grounding is required for the chair. This item is equipped with a grounded plug and special grounding bolt; insert the grounded plug into a grounded socket with proper installation and suitable local voltage, or connect the special bolt to reliable grounded objects with grounding wire.

Dangerous!

Incorrect grounding may cause electrical shock. If you have any questions about this item, please consult a licensed electrician. If the plug sent along with the chair doesn't match your socket, please don't modify the socket. Ask technicians to install a suitable one. Modification from the original manufactured specifications will void all warranties expressed or implied

Please don't use a plug adapter.

Change fuse

In cases of an electrical shortage the fuse may burn out. The user can open the fuse cap with a screw driver and replace it with an appropriate fuse and put the fuse cap back on.

If there are any questions please consult a licensed electrician.

Parts name and function






The “A” set of buttons control the movement of the chair forwards and backwards.

The “B” set of buttons control the degrees the chair reclines.


1803A、BM63L

Parts name and function

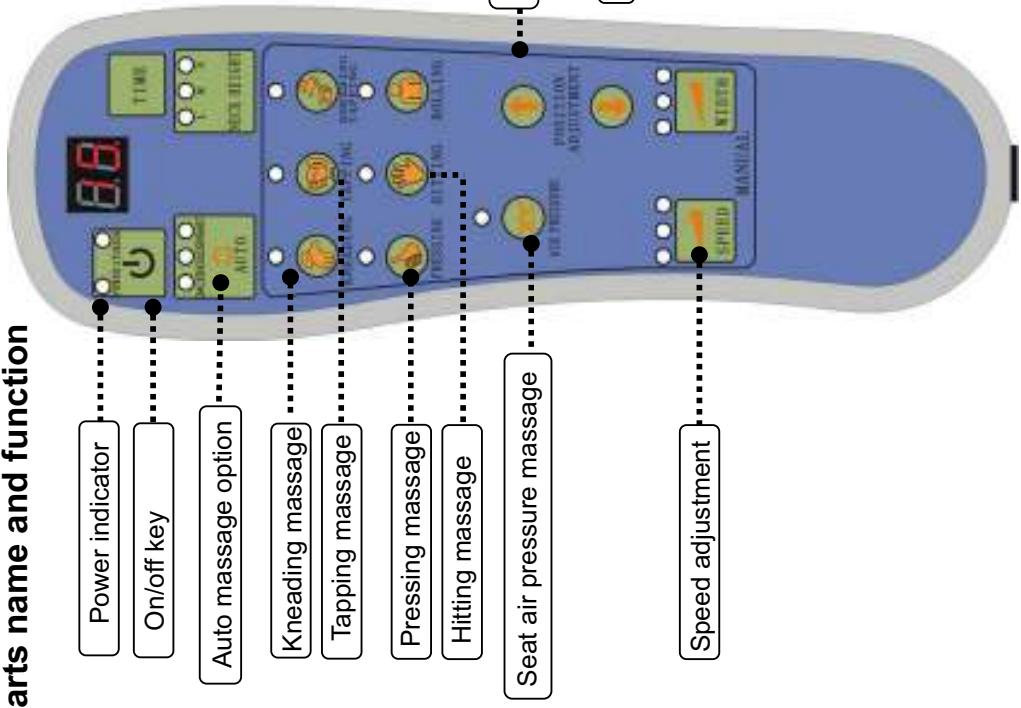

1803V

remote control

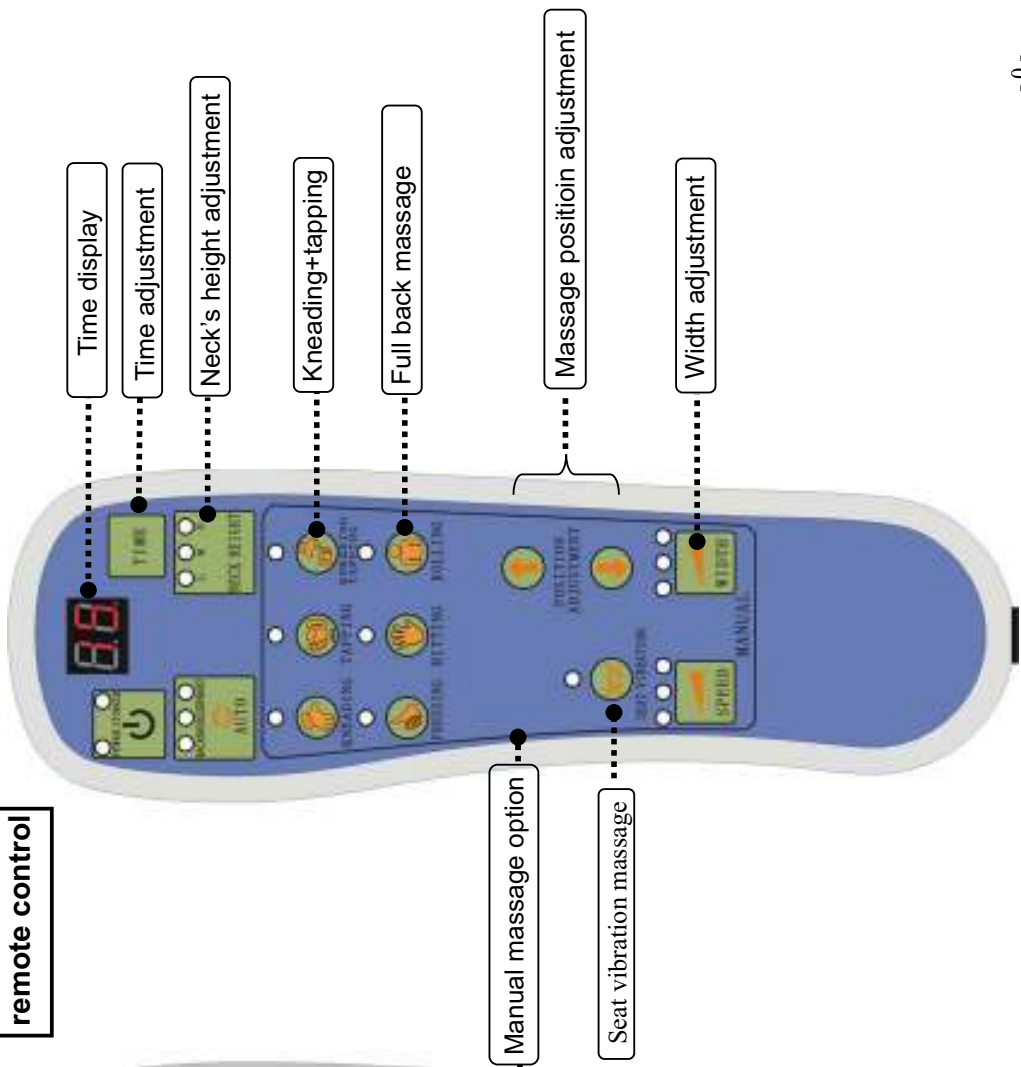

Environment For Operating The Chair

- Please do not operate this item in damp areas such as bathroom to prevent electrical shock or other accidents.
- Please place this item on a flat surface.
- Please make sure to leave 16 in of space behind the chair, so the backrest can recline.
- Do not operate this item in direct sunlight or in a place with high temperature, Exposure could fade or harden leather.
- This item may cause abrasion to the floor. We recommend that a floor mat or carpet be placed under the chair in order to minimize abrasions and also to reduce noise from the chair

Before using this item

1. Check the surrounding:

- Check if there are any objects behind the chair
- Check if there is enough space (at least 40cm) so the chair can be reclined.

2. Check item:

- Check if there is a cleft on head pad, central back pad. Also check cloth material.
- Check if the supply cord is broken and if there is dust on the plug.

3. Turn on the power

- Make sure the voltage conforms with the required specification of this item
- Insert the plug into the power socket
- Turn on the power switch on the side of the chair backrest.

Please note:

Check the massage roller position before you sit down.

Operation instruction of foot spa massage chair

- Here is the operation instruction for the foot spa massage chair. For details, please refer to operation instruction of remote control.

1. Open this item after a complete check

- After turning on the power, the massage rollers will go automatically up to the storage position. If they are not already in this area (top of the backrest), storage indicator will flash.
- Storage indicator stops flashing and power indicator turns on when the rollers are in storage position.

2. Press “on/off” key

- Neck’s position indicator turns on, showing that the setting massage range is the entire course on the back.

3. Press “neck’s height adjustment key”

- You may adjust the neck’s position according to your actual neck height by pressing this key, when you do this the massage roller will slightly tap your back to remind you of its position. Neck massage range will be limited within your setting to avoid any injury to your head.

4. Press other keys on the remote control to choose massage

functions you need.

When you think the massage strength is too weak you may remove the head pad to get a stronger massage.

Automatic massage

- Very suitable for those whose whole bodies feel tired.
- Very suitable for those who need a simple automatic massage.

Manual massage

To choose fixed massage function or needed massage area.

Operation instruction

5. Adjust the angle of the backrest and seat

(1) MANUAL TYPE

- Backrest leans backward: up--pull the handle beside the right armrest, and lean back into the chair to move the chair backwards. Then the backrest will lean backwards and down to your ideal position, release the handle, the backrest will be locked.

Backrest lean forward: up-pull the handle beside the right armrest, make body little up, then the backrest will automatically lean forward to your ideal position, release the handle, the backrest will be locked.

- Seat adjustment: up--pull the rail-lock handle on the side, slightly move your body forward or backward with a little strength, the seat will move following your body, the seat also can turn around 360° .

(2) AUTO TYPE

- Backrest adjustment: press “backrest angle key” on the control, the backrest will automatically go forward or backward to your ideal position; release the key, the backrest will be locked.
- Seat adjustment: press “forward/backward key” on the control, the seat will automatically go forward or backward to your ideal position; release the key, the backrest will be locked.
Auto type,the seat can't turn around.

6. Turn off the power to finish massage

- Press “on/off” key to stop massage and massage rollers, backrest, and leg rest will go to the storage position.
- Shut off the power and unplug the chair.


During massage, if massage rollers carry more weight, this item will immediately start the internal safe protection circuit to stop all massage activities. Accordingly, control indicators will flash continuously. Buzzer will sound and no keys will respond at this moment.

- “Kneading indicator” flashes, showing that kneading machine is overloaded.
- “Tapping indicator” flashes, showing that tapping machine is overloaded.
- “All the course indicator” flashes, showing that up/down machine is overloaded.

If the above points occur, please shut off power switch and wait for 10 minutes. Re-open the switch to operate once more. If you feel massage roller going too slow, please slightly raise your body (for people with over 100kgs weight, this situation will occur more frequently. Please take care of this item, otherwise parts might get damaged)

Control Operation

- All the massage functions can be operated by the remote control. Before use, please make sure that there are no children or pets near the chair.
- If the operation is correct, buzzer will send out one beep sound. If the operation is incorrect, it will send out two or more beep sounds.

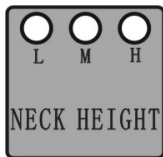

Height	Status
Lowest	● ○ ○
Low	● ● ○
Medium	○ ● ○
High	○ ● ●
Highest	○ ○ ●

- on
- off



Control Operation

1. Press “on/off” key

- If the massage rollers are in storage position, power indicator and shoulder position indicator come on.

2. Press “time adjustment” key

- Press time adjustment key to adjust working time. Default time is 15mins. Max. working time is 30mins.

3. Press “neck’s height adjustment” key

- Press up/down key for neck position to adjust rollers’ range according to your body height. This can avoid the massage motion from hurting the user’s head.
- Total of 5 different heights for you to choose.
- 3 indicators combine to show different roller ranges on neck.

4. Press “auto massage option” key

- Press back, shoulder or waist automatic key, Massage rollers will automatically change functions, speed and width based on internal massage program in order to get perfect massage effects, including:
 - * Back: Full massage on back
 - * Shoulders: Focus massage on neck and shoulders
 - * Waist: Focus massage on waist.

In auto mode, manual function keys and function adjustment keys have no response; please press “back, shoulder and waist” keys or press “stop” key to close auto function.

5. Press "manual massage option" key

- You may choose "kneading, tapping, pressing, kneading + tapping, hitting and entire course" key separately to choose massage mode that you like.

Control Operation



- Kneading: rhythmical strong kneading-relaxation. Especially for relaxation of stiff muscles.



- Tapping: feels like fists that eliminate the feeling of stiff muscles.



- Pressing: imitates thumbs of massage professionals to press on special points.



- Kneading + tapping: combines kneading with tapping perfectly and completely.



- Hitting: imitates palms of massage professionals to hit stiff muscles intermittently.



- The entire course: massages the whole back to stretch fatigued muscles.
※ Special mention: entire course massage combined with kneading, tapping, pressing, kneading + tapping and hitting function will give the back complete massage.


- 1803A Seat air pressure

Slight air pressure massage on hip has special effects on fatigued muscles on hip .



- 1803V: vibration:

With this function, you may keep continuous or interval massage to promote blood circulation on muscles of the hip

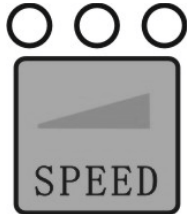


Speed	Status
Lowest	● ○ ○
Low	● ● ○
Medium	○ ● ○
High	○ ● ●
Highest	○ ○ ●

● on
○ off


6. Press "speed adjustment " key

- Press speed adjustment key to adjust massage intensity of kneading, tapping, pressing, k+t, hitting.
- Total of 5 speeds for you to choose.
- 3 indicators combine to show different speeds.

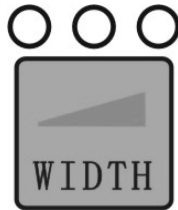

7. Press "width adjustment" key

- Press width adjustment key to choose width of tapping, pressing and hitting.
- Total of 3 widths for you to choose.(18/14/10cm)

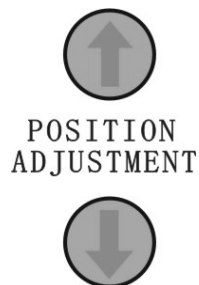

8. Press "massage position adjustment" key

- Press "massage position adjustment" key to adjust rollers' up/down position, it is suitable for massage care on a certain area.

Cleaning And Maintenance

Synthetic Leather

- Clean the leather with a piece of soft, dry cloth (cloth containing any cleaners or to use.)
- If the leather becomes dirty, please mix water with neutral 3%-5% detergent and dip the cloth into the water for cleaning the leather surface. Then wash the cloth to remove detergent and scrub the leather with a piece of dry cloth. Let it dry naturally(don't dry the wet leather with an electric dryer.)
- If leather has been contacting ethylene resin for a long time it might fade.

Cloth Cover

1. Use a piece of cloth with medium detergent liquid to clean cloth cover.
2. Use a soft brush dipped with medium detergent to brush dirty cloth material. Be sure not to brush it too much, it might cause damage to the cloth.
3. Dip a piece of soft cloth into clean water. Use it to wash the item and let it dry naturally.

Cleaning Of Plastics Parts

1. Dip the cloth into medium detergent liquid.
2. Use a piece of cloth with clean water to scrub this item and dry it naturally.
 - For cleaning of the remote control, please use a slightly damp cloth to scrub the surface.
 - Don't use any solvents to clean as they may cause discoloration.

Caution:

- Be sure to unplug the chair when cleaning this item.
- After cleaning this item, make sure to dry hands before plugging the power again.
Otherwise, it may cause electric shock or burn.

Specifications

- Power supply: AC 110V~, 60Hz
- Power consumption: 150W
- Massage area on back:
 - up/down: about 35 cm
 - left/right: about 18 cm
- Backrest decline angle: approx. 110~135°

Troubleshooting Data

Malfunctions	Causes and Solutions
<p>This item can't be operated at all.</p>	<ul style="list-style-type: none"> ● Electric wire has been taken off. ● Power key is still on OFF mode. ● Massage roller is on the way of storage. It will work after the roller comes to the storage position. ● Electric wire or plug is broken. It should be replaced by manufacturer, appointed repairman, or qualified technicians. ● Fuse is broken. Please replace it with a new one of same specification. ● For internal circuit troubles, please send it to appointed repair place for check.
<p>Massage roller stops working while in operation; control indicator keeps flashing; buzzer gives out continuous alarm.</p> <ul style="list-style-type: none"> ● Kneading indicator flashes: Relative operating mechanism of kneading has problem. ● Tapping indicator flashes: Relative operating mechanism of tapping has problem. ● The entire course indicator flashes: Relative operating mechanism of up/down has problem. 	<ul style="list-style-type: none"> ● Over pressure and overload on the massage roller make internal circuit start to protect itself, please reduce load and shut off the power to restart the item in 10 seconds. ● Internal massage mechanism is damaged. Inspection circuit uses its protection way. Please ask appointed department to check. ● Broken cloth wraps or prevents massage roller from moving, so the protection circuit starts its protection function. Please ask appointed department to check.
<p>Too much noise</p>	<p>Long-term use may cause mechanism abrasion. It's normal. Please ask the appointed department to check.</p>
<p>Control mechanism becomes too hot</p>	<p>Extended use of control may generate excessive heat. If overheating occurs please send the unit to an authorized service center</p>
<p>Electric wire or plug is abnormally hot</p>	<p>Immediately stop use and send it to the Authorized repair facility.</p>