

INSTRUCTION MANUAL

Contents

Introduction	1
Safety & Precaution	2
Pedicure Spa Parts	3
Assembly Instructions	4
Operation Instructions	9
Control Panel	11
Aftercare Instructions	13
Warranty	14

Thanks for your purchase of our product: TOYA Pedicure Spa.

Please read the operation manual before using the product.

Please put the operation manual in the place easy for you to read and you can read it at any time.

Introduction

Product Name: TOYA
Product Code: 5450

The Toya pedicure spa comes with four-wheel driven muted massage system which gives you the experience of ultimate relaxation. Please take time to read this entire manual before assembly and use. If you have any problems or have questions regarding your pedicure spa, please contact our technical support on: 1.888.400.2648

Safety & Precaution

Important Requirements

The Toya pedicure spa requires that you contact a local, licensed plumber to install your new pedicure spa. Installation must be in compliance with all your building codes. Your pedicure spa cannot operate efficiently or safely unless it is provided with adequate electrical power, sufficient water pressure, proper water temperature, and required drainage capabilities. Subsequent inspections and approvals that may be required are the responsibility of the purchaser.

Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:


Read all instructions before using the pedicure spa

1. Use the pedicure spa only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
2. Never operate the pedicure spa if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
3. Never drop or insert any object into any opening.
4. The unit must be connected to an electrical supply circuit that is protected by a ground fault circuit interrupter.
5. Do not block jets during whirlpool operation.
6. To reduce the risk of injury, do not permit children to use this unit unless they are supervised at all times.
7. The pedicure spa is for indoor use only. Disconnect power supply cord before servicing and cleaning.
8. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.



Warning

1. Excessive water temperature is dangerous and should be checked BEFORE use.
2. Maximum temperature of the water should never exceed 100 degrees F.
3. Always enter and exit the pedicure spa slowly and carefully.
4. NEVER bring and / or operate any electrical devices into or near the pedicure spa.


Pedicure Spa Parts

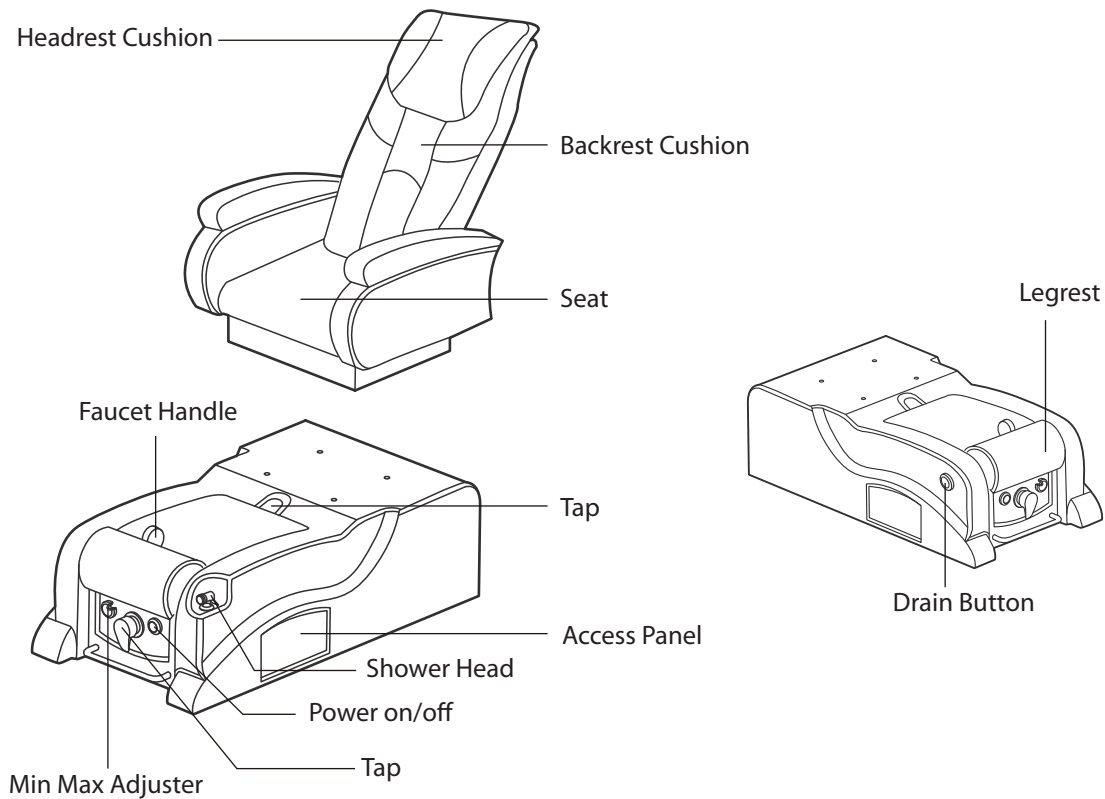


Assembly Instructions

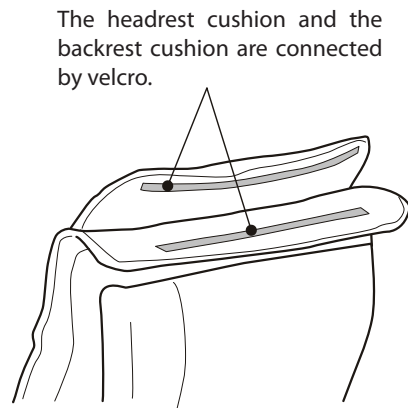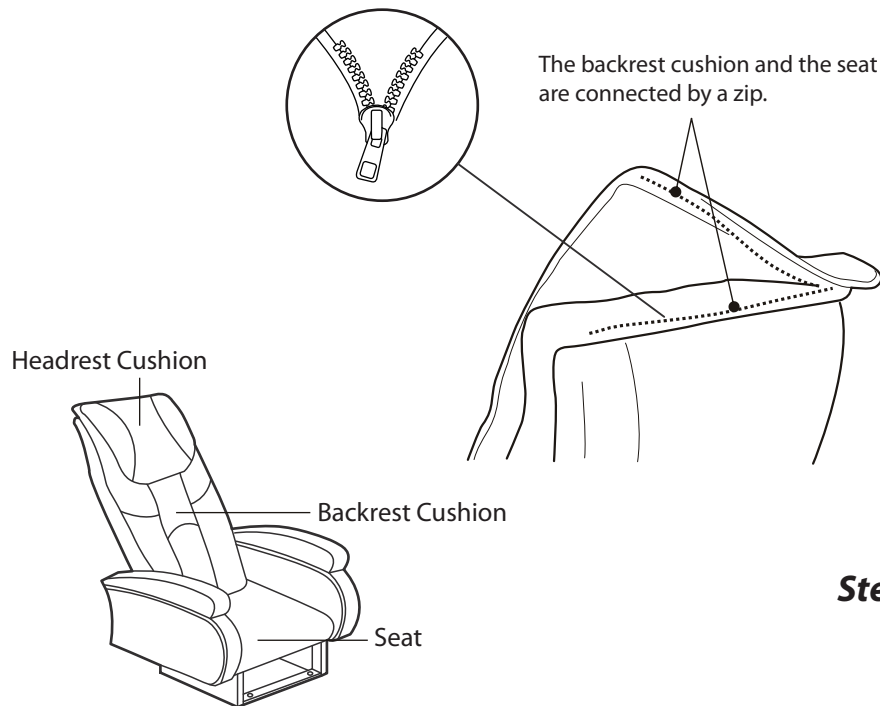

Step 1

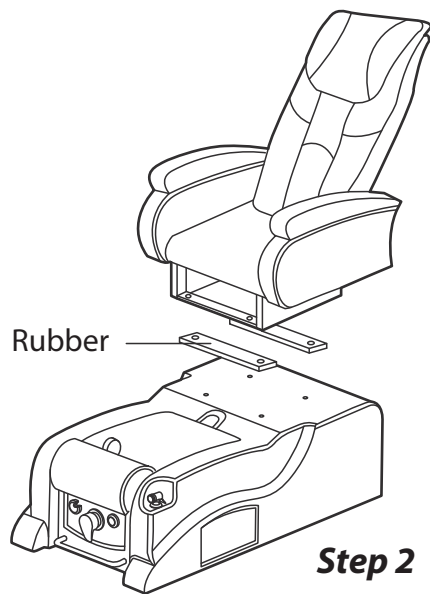


Step 2

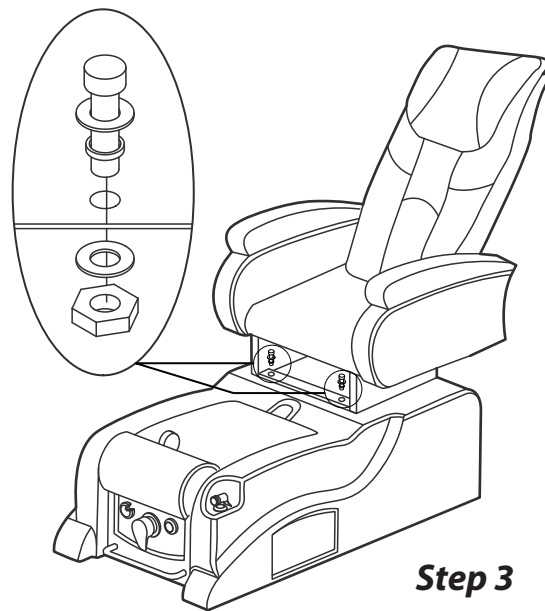


Step 3

Align the seat with the pre-drilled holes on the base then tightly secure with the nuts and bolts provided. (use the alan key provided)
Need two person assembly.

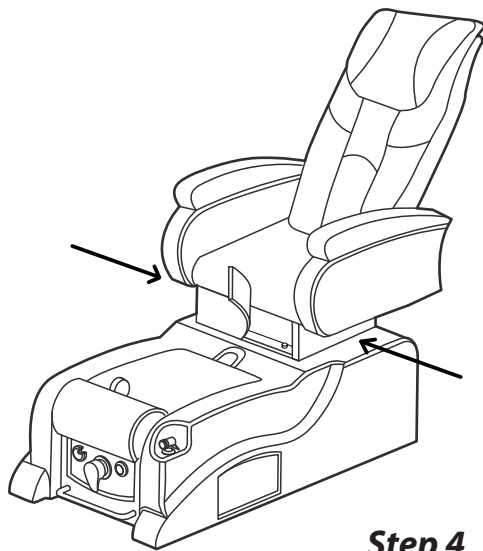



Step 4

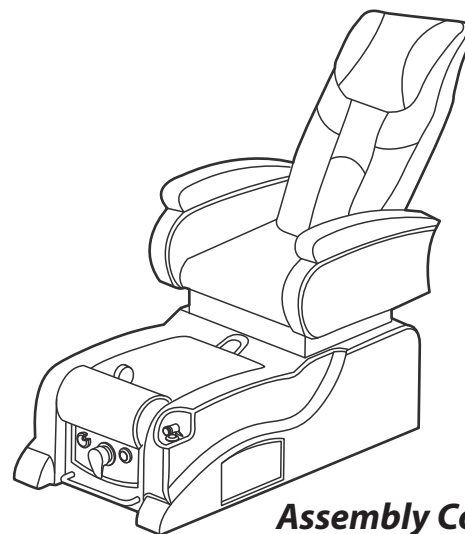




Assembly Complete

Attach the covers for the seat to the front and both sides of the seat.

Waste Pipe Connection

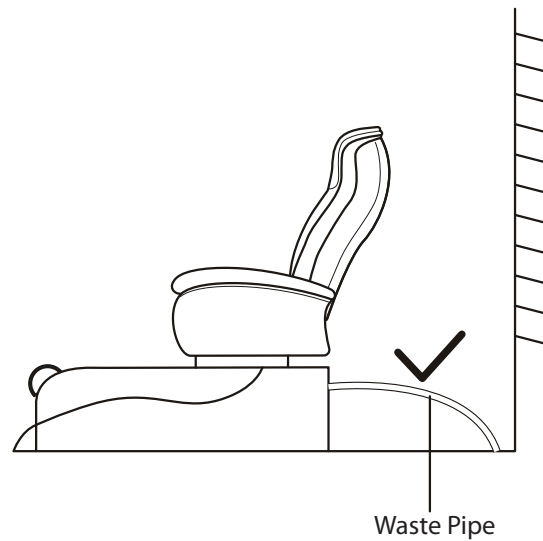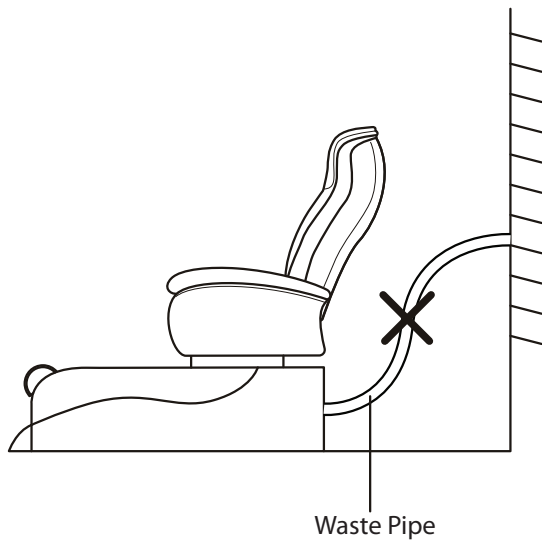

NOTE: waste pipe must be on a downward flow.

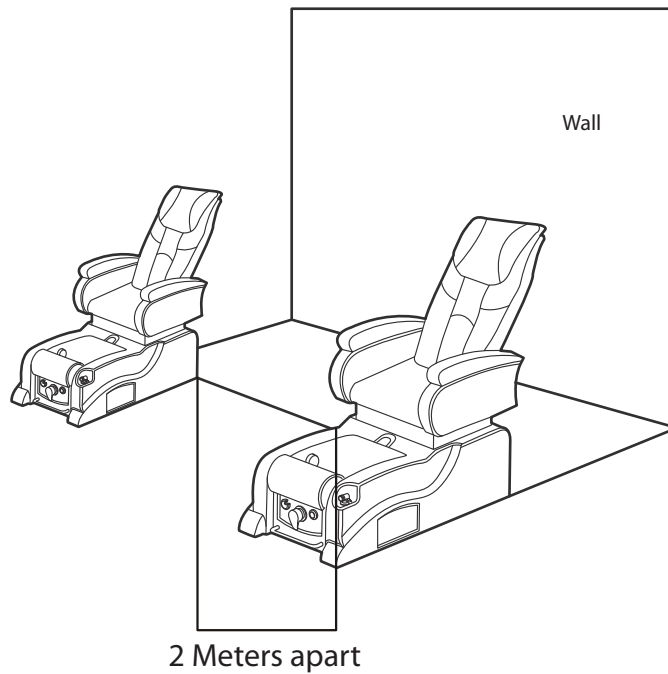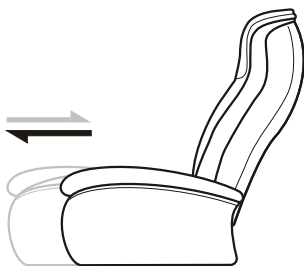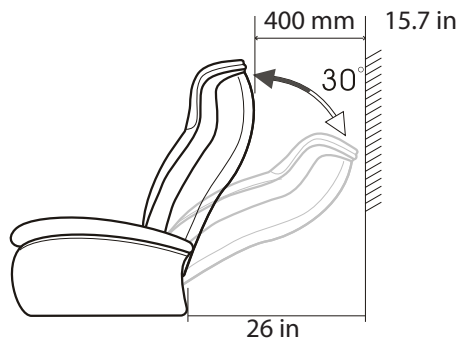

Operation Manual

Filling Spa

- a. Lift the tap located on the front of the spa.
- b. Adjust water temperature by moving the tap left or right.
- c. Fill the spa to the height of the client's ankles. Caution there is no overflow protection.


Water Movement On/Off

- a. To start the Jacuzzi jets, press the "Power On/Off" button located on the front panel of the spa.
- b. To control the air flow use turn the adjuster to either min or max.

Drain Water


- a. To drain the water from the Toya pedicure Spa, turn the faucet handle in the foot bowl located on the left hand side.
- b. Press the drain button on the side panel.

Operation Manual

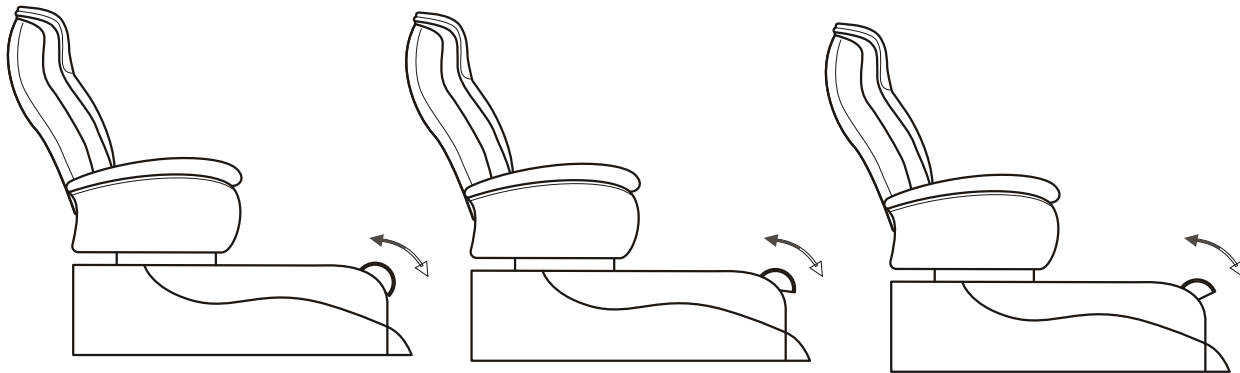

Adjust Legrest
Lift the Legrest to meet customer's needs.

Control Panel

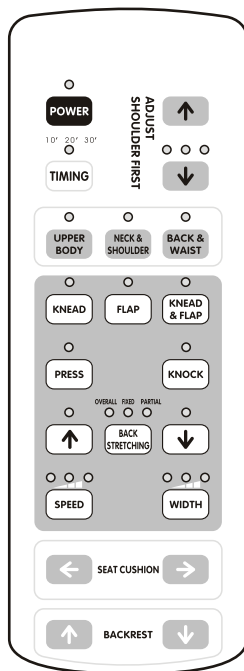

POWER

Power: to start or stop message of the upper body. The button will not work when the massage device is at its position of recovery.



Adjust Shoulder First: when you start the massage functions of the upper body, the massage device begins to move downward to suit the position of your shoulder. For specific body size, you can press the upward or downward button to adjust the massage hands slightly within a small range to suit your shoulder. Five positions available for the shoulder area with respective indicators turning on or off.

TIMING

Timing: to set the massage time, three period for choice: 10 minutes, 20 minutes, 30minutes.

UPPER BODY

Upper Body: the massage device works with various techniques at different body zone of your upper body.

NECK & SHOULDER

Neck & Shoulder: the massage device mainly automatically covers your neck or shoulder.

BACK & WAIST

Back & Waist: the massage device mainly automatically covers your back and waist.



Back Stretching: to select full-range, partial or fixed massage. (overall, fixed, partial)



Up Arrow: when fixed massage has been chosen, press this button to move the massage device upward to suit precise massage points, not available under auto state.



Down Arrow: when fixed massage has been chosen, press this button to move the massage device downward to suit precise massage points, not available under auto state.



Speed: for speed and massage treatments selection. Five speed options available. The indicators are as follows:(black stands for on)



Width: when massage treatment of flapping, shiatsu, or knocking has been chosen, press this button to adjust the width of the massage hands, three options, not available under auto kneading state.

KNEAD

KNEAD FUNCTION

FLAP

FLAP FUNCTION

KNEAD
& FLAP

KNEAD & FLAP FUNCTION

KNOCK

KNOCK FUNCTION

PRESS

PRESS FUNCTION



SEAT CUSHION

Press the button continually and the seat frame will move forward, release your finger and the movement will stop.

SEAT CUSHION



Press this button continually and the seat frame will move backward, release your finger and the movement will stop.

BACKREST



Press this button continually and the backrest frame will move downward, release your finger and the movement will stop.



BACKREST

Press this button continually and the backrest frame will move upward, release your finger and the movement will stop.

Aftercare Instructions

Caring for the cushion and covers

Soak a piece of soft cloth in lukewarm water in which a small amount of mild detergent has been added. Then thoroughly wring it out before cleaning off any spots or grime.

Caring for the remote control

Wipe dirt off the remote control with a dry cloth. Never use a moistened or wet cloth as it may result in mechanical failure.

Caring for other plastic parts

Soak a piece of soft cloth in lukewarm water in which a small amount of mild detergent has been added. Then thoroughly wring it out before cleaning off any spots or grime. Then wipe with a dry cloth so that no detergent residue remains. Do not use alcohol based or other household cleaning products or abrasives because they can scratch or crack the finish and / or cause colour to fade.



Caution: When cleaning or caring for the product, make sure to unplug the product from the wall outlet first. Do not plug or unplug the power cord with wet hands.

Warranty

12month warranty starting from the date of purchase, which is liable to the original buyer only.

The warranty is under the condition that the goods shall be received free of defects, in its original condition when purchased and manufactured faults. Damage resulting from general wear and improper usage will not be covered under the warranty.

Exclusions

1. Damage to pump parts and / or motor parts due to obstruction in plumbing lines etc.
2. Staining, fading or discolouration of plastic surfaces due to exposure and / or the use of harmful cleaning agents or chemicals.
3. Staining, fading or discolouration caused by improper or poor water additives not related to the maintenance of proper water are not covered by this warranty.
4. Staining, fading or discolouration of the seat, armrests or footrests.
5. Freight damage, misuse, neglect, accidents, natural disaster and abuse.
6. Unauthorised repairs.