



1

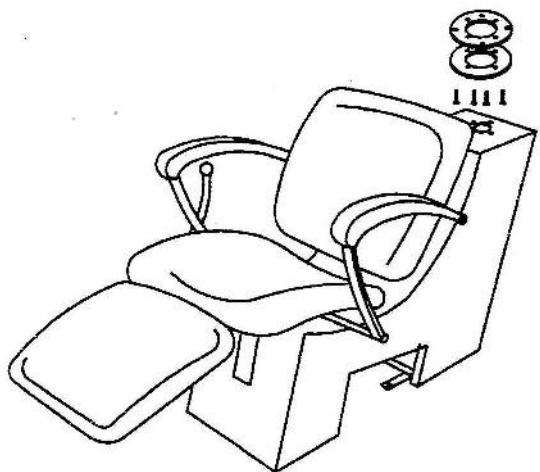

1. Open the back cover of base, unscrew the nut (M14) and two washer (one is round and the other is square) which connect the tilting mechanism and base. then remove the tilting mechanism.

2

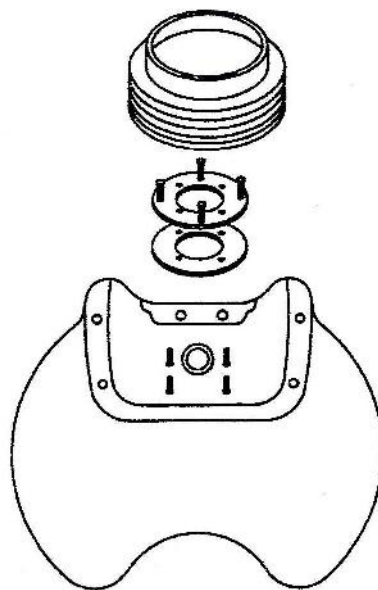


2. Turn over the basin, remove the nut (M17) fitting on the screw of basin and put the tilting mechanism on the basin and then tighten the nut to fix the mechanism to the basin.

3



3. Put the basin with mechanism on the base and make sure the screw of mechanism is in the hole of base. Then adjust the angle of basin to expected position. Then fix the basin to the base with nut and two washers which are removed in first step.

4

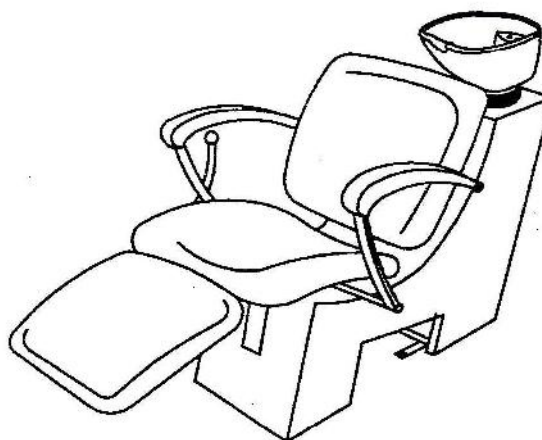

4. Install the fixtures as in instructions and connect the pipe with the drain and make sure no leaking. At last fix the back cover of base.