



Janus

4888

INSTRUCTION MANUAL

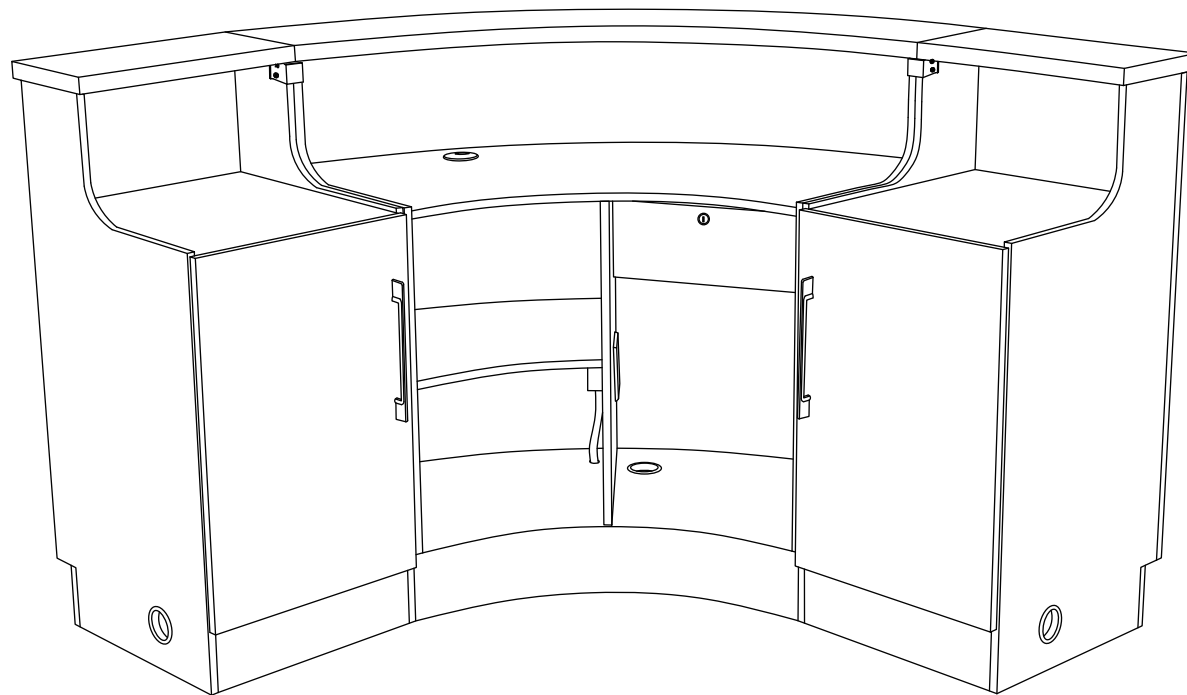


 List of Parts & Tools




x1

101001

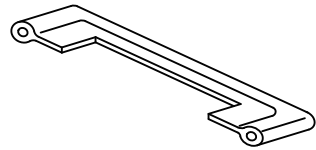


x2

101002

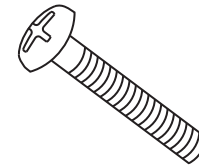

x4

123423

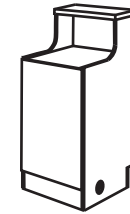


x1

101003




x1

101004

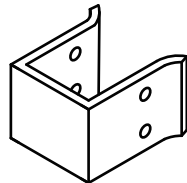


x4

 101005



x16

121425

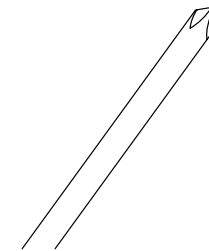

101006

