**Dorset Pedicure Chair** User Manual





### **Dorset Pedicure Chair** User Manual

# IT IS IMPORTANT THAT YOU READ AND FOLLOW THESE INSTRUCTIONS.

### Introduction

Thank you for purchasing Belava Dorset Chair. The Dorset chair is designed for professional use in nail salons, hair salons, spas, podiatrist offices, medical spas or anywhere pedicure services are offered.

The Dorset is a state-of-the-art product that uses disposable liners without having you to worry about sanitizing the footbath for each client. Simply dump the used water out at a nearby sink, toss the used disposable liner then insert a new liner and be ready for your next customer in no time.

Please take time to thoroughly read this entire manual before use. If you have any problems or have questions regarding your pedicure chair, please contact Belava's Technical Support Department at **1-888-708-7131** Monday through Friday 9:00AM to 5:00PM PST. After hours calls are recorded and attended to the next business day.

### Important requirements

Your pedicure chair cannot operate efficiently or safely unless it is provided with adequate electrical power. The heater/massager for pedicure and the heater/vibrator for the chair's cushion confirm to UL STD 1647.

### Precautions

- Excessive water temperature is dangerous and should be checked before use.
- Maximum operating water temperature should not exceed 105° F
- Always enter and exit the pedicure chair slowly and carefully.
- This pedicure chair & nail tech stool each have a weight capacity of 300 pounds.
- With proper care, you can enjoy your Dorset pedicure chair for many years come.

### Health Risk Warning

 
Nail technicians should advise clients to consult their physician before using the pedicure chair if there is any evidence of health issues. If the client experiences any pain or discomfort, immediately discontinue the use of the pedicure chair.

## **Dorset Pedicure Chair** — Features —

Includes two (2) complimentary arm rest pillows







Built-in drawer with Trio Foot Spa





Adjustable foot rest

## **Dorset Pedicure Chair** — Specifications —



- Dorset Chair (H x W x L) 44" x 28" x 32"
- Height of seat to floor: 24"
- Backseat width: 26"
- Bottom seat length: 18"
- Open drawer length: 25.5"
- Footrest legth: 6"
- Chair Capacity: 300 lbs.
- Chair weighs: 120 lbs.

### **Dorset Pedicure Chair** — Specifications —



Power Requirements: 120V DC Adaptor, 1.5 Amps, 50-60 HZ (USA)

**Note:** Due to continuous improvements, all specifications are subject to change without notice. All dimensions and weights are approximate.

## **Dorset Pedicure Chair** — Operating & Maintenance —

**Care & Maintenance -** With proper care, your Dorset Chair will provide years of superior performance and satisfaction. A periodic (annual minimum) inspection of chair components and fasteners should be made to ensure that the chair is structurally intact and functioning properly. Damaged and broken parts should be replaced and loose fasteners tightened.

▲ **WARNING** - Failure to properly inspect and service this chair according to the maintenance instructions may lead to personal injury or product damage. Inspect chair annually for damaged or broken parts and tighten any loose fasteners. For help or additional information visit www.belava.com or call 818-708-7131.

**Cleaning & Maintenance for outside Bamboo -** With a dry towel make sure to wipe off any spilled water on bamboo and platform

**Cleaning Cushion -** The chair is upholstered in high quality upholstery vinyl, which guarantees you long useful life when properly taken care of. While this vinyl is sturdy, it should be prevented from contact with sharp objects, which may leave marks or holes. Use regular cleaning solution to clean the surface; you can use auto upholstery buffing solution to restore the shine of the vinyl. **AVOID:** Contact with alcohol and acetone.

Cleaning Trio Foot Spa - Please read enclosed separate operating manual.

**Adjustable Foot Rest** - To adjust footrest simply turn knob to be able to adjust footrest's position by adjusting up and down to desired height. One you have the correct height for the footrest tighten knob to lock the footrest in position.

**Operating Foot Massager -** Please read enclosed separate operating manual.

Operating Massage & Heat Remote for Chair - Please read page 6

### **Dorset Pedicure Chair** — Specifications —

### POWER -----

Activates Massage System

- Turn On: Press PWR.
- Turn Off: Press PWR again.
   15 and 30 minute Timers: Green light = 15 minute Timer. Hold down Power: Amber light = 30 minute Timer.
- Unit may also be turned on by pressing either ZONE key.
   To restart after Timer shuts off:
- Press PWR or either ZONE key.

### HEAT -----

Activates Heat.

- Press LO (Amber light) to turn Low Heat on.
- Press HI (Red light) to turn High Heat on.

Works with massage or independently.

### 30 minute Timer

To continue after Timer shuts off, press

LO or HI button again.

(Green light indicates active Zone)

- Activates Massage System
  Zone 1 once to activate massage. Press again to deactivate.
- Zone 2 once to activate massage. Press again to deactivate.

The location of each zone varies with individual chair styles.

#### INTENSITY -----

Controls massage motors INTENSITY during all modes. Press (+) to increase and (-) to decrease Intensity.

#### -- MASSAGE MODES

(Green light indicates active Mode) SELECT -

Lets you choose zones for steady massage.

- Press SELECT.
- Press either or both Zones to activate.
- Press either or both Zones to cancel.

#### PULSE -

Massage turns On and Off to provide a pulsing action.

- Press PULSE.
- Press either or both Zones to activate.
- Press either or both Zones to cancel.

#### WAVE -

Massage moves up and down in a wave-like action.

- Press WAVE.
- Press both Zones to activate.
- Press any other MODE to cancel.

### **SPEED**

Controls pulsing frequency of massage motors in PULSE mode and controls the velocity as it cycles through in WAVE. Press (+) to increase and (-) to decrease speed.

**NOTE:** Constant wand lights indicates that there is active power in the wand and will dim down after 10 seconds of non-use.

### SAVE THESE INSTRUCTIONS!