Safety Precautions

READ AND FOLLOW INSTRUCTIONS CAREFULLY SAFETY PRECAUTIONS

WARNING THIS PRODUCT IS FOR INDOOR USE ONLY. DISCONNECT POWER SUPPLY CORD BEFORE SERVICING

HEALTH RISK WARNING

Technician should advise clients to consult their physician before using the pedicure chair if there is any evidence of health issues. If the client experiences any pain or discomfort, immediately discontinue the use of the pedicure chair.

WARNING Do not use if you are diabetic, have poor circulation, or if any area of your feet or legs is inflamed or has an open sore. Consult your physician before using if you have any kind of fungal infection, swelling, fracture or persistent pain.


IMPORTANT REQUIREMENTS


Your pedicure chair cannot operate efficiently or safely unless it is provided with adequate electrical power. The heater/massager for pedicure and the heater/vibrator for the chair's cushion confirm to UL STD 1647.

PRECAUTIONS

- Always enter and exit the pedicure chair slowly and carefully.
- This pedicure chair & nail tech stool each have a weight capacity of 300 pounds.
- With proper care, you can enjoy your pedicure chair for many years come.

Opening/Closing Chair Drawer

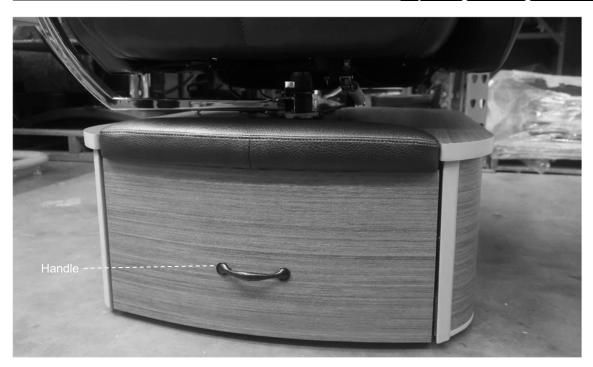

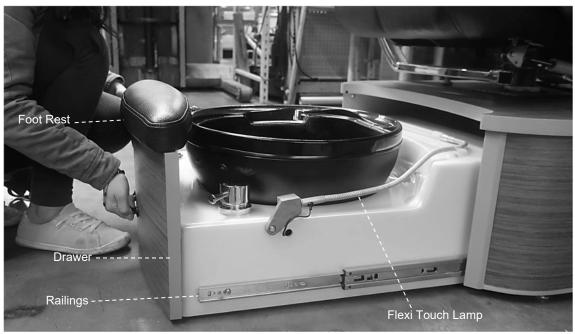


TO OPEN: Grab the handle and gently lift to open the drawer

TO CLOSE: Make sure the foot rest and the Flexi Touch Lamp is adjusted all the way down, grab the handle and gently lift to close the drawer

WARNING: Always make sure to lift from the handle before opening and closing the drawer. If you just open and close the drawer with force (without lifting) you will cause the railings to break and misalign.

Operation and Care - Water Faucet and Drainage

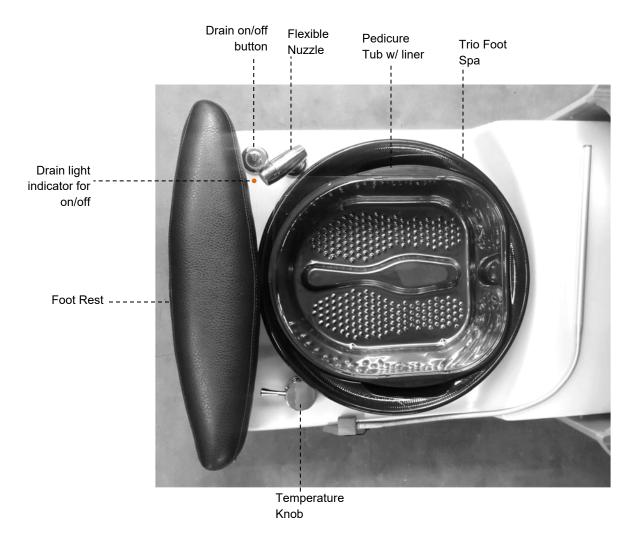

Use Temperature Knob to adjust water temperature from Hot ("H") or Cold ("C")

▶ PRECAUTIONS: Excessive water temperature is dangerous and should be checked before use. Maximum operating water temperature should not exceed 105° F

Water Faucet and Drainage



FLEXIBLE NOZZLE: Grab the handle and gently press down to release water into the TRIO Foot Spa with Pedicure Tub and Liner





DRAIN ON/OFF BUTTON

TO TURN ON DRAIN PUMP: Before dumping the water down the drain, press down on the drain button and release to activate the drain pump (Orange light should turn on). Lift pedicure tub to dump the water into the drain.

TO TURN OFF DRAIN PUMP: After the water goes down the drain please make sure to turn off the drain pump by pressing down on the drain button (Orange light should not appear when off).

CAUTION: Always make sure the drain pump is OFF once the water has drained. Never leave drain pump on when chair is left unattended and overnight.

Flexi Touch Lamp






TURN ON FLEXI TOUCH LAMP: Lift Flexi Touch Lamp as seen in the image above. Touch the sensor marked in red to turn on. Lamp has three levels of brightness.

TO TURN OFF FLEXI TOUCH LAMP: Touch the sensor four (4) times to turn off.



Flexi Touch Lamp has a flexible support which can bend to illuminate your pedicure service when foot rest is adjusted at different height levels.

Plumb Chair Pipe Location

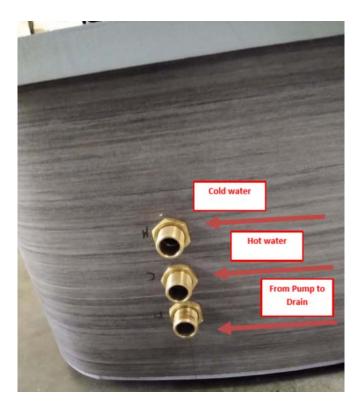

Plumbed Chair Pipes for Cold Water, Hot Water and Drainage are located at the back of the platform.

Connections for Plumbed Chair









Use <u>Stainless Steel Braided</u> Hoses for Washing Machine with the $\frac{1}{2}$ " diameter hose and $\frac{3}{4}$ 4" fitting at the end of the hose.

We found plenty of choices and brands on Amazon or Home Depot sites, below is the link to one of the (no recommendations – just a source sample).

https://www.amazon.com/Washing-Machine-Hoses-Stainless-Braided/dp/B015WOKUJ4

