


Langara

4104

INSTRUCTION MANUAL



List of Parts & Tools

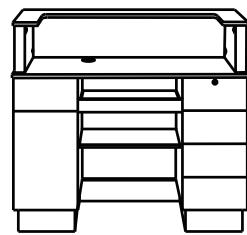


x1

101001



x6

101002

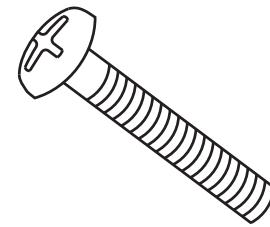

x12

101003

Step 1

