


# Libra 8710 INSTRUCTION MANUAL

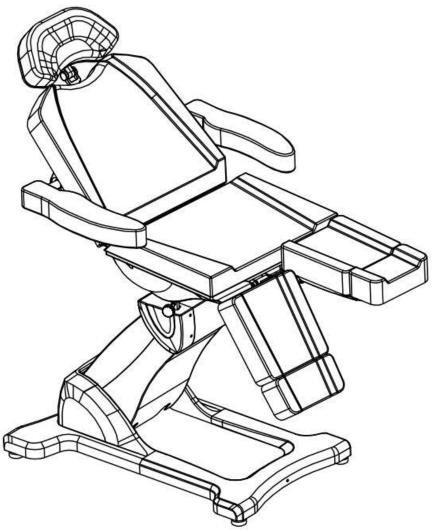


	USA	UK
N.W.	190 lbs	86kg
Max load capacity	400 lbs	180kg
Input voltage	AC 110V/60HZ	AC 230V/50HZ
Output Voltage	DC 24V	DC 24V

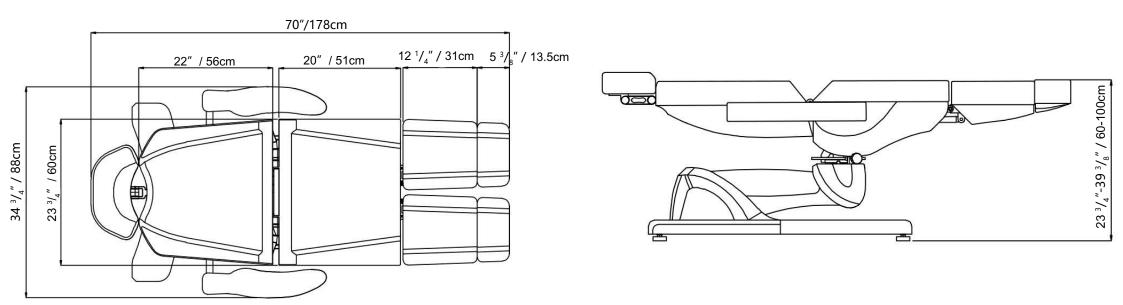

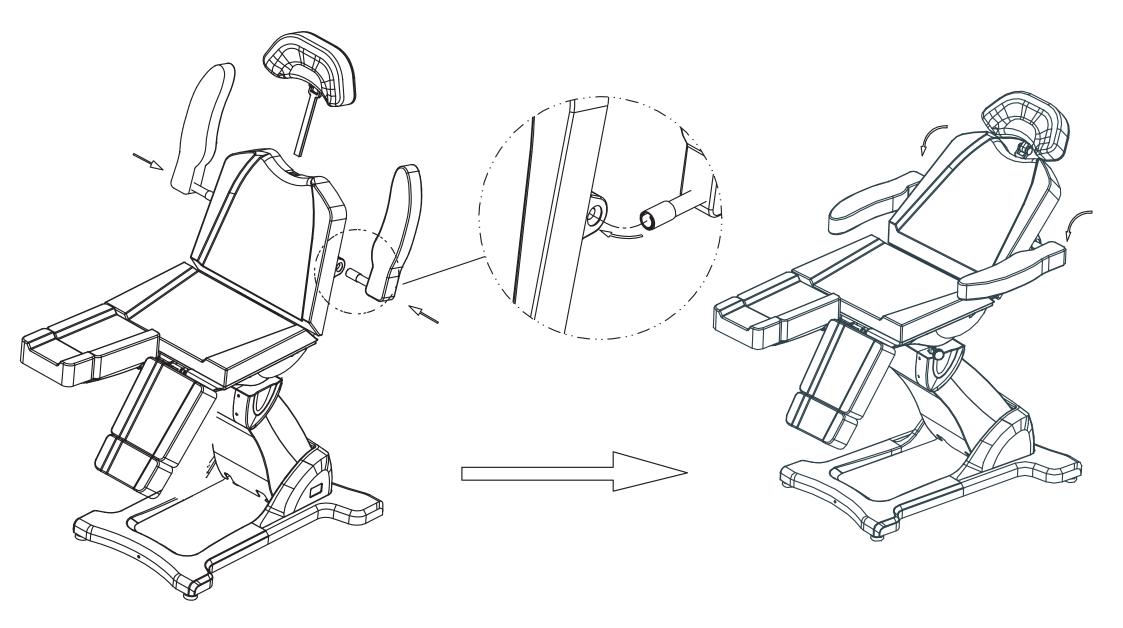


## Remote

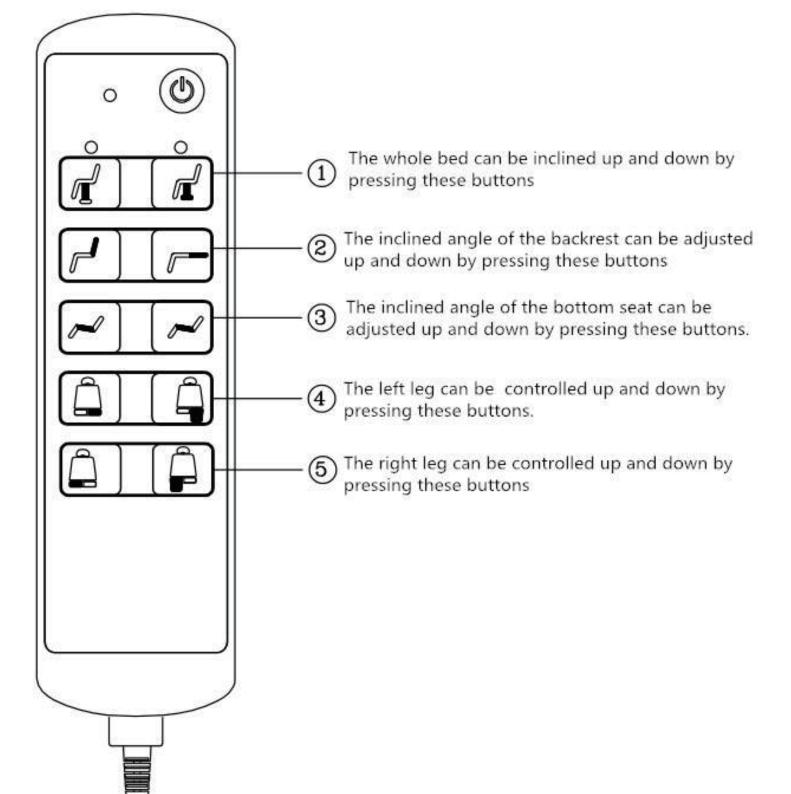

The instruction

(1) The height adjustment


The whole bed can beinclined up and sown by pressing these buttons:  $\begin{bmatrix} -1 \\ -1 \end{bmatrix} \begin{bmatrix} -1 \\ -1 \end{bmatrix}$ 

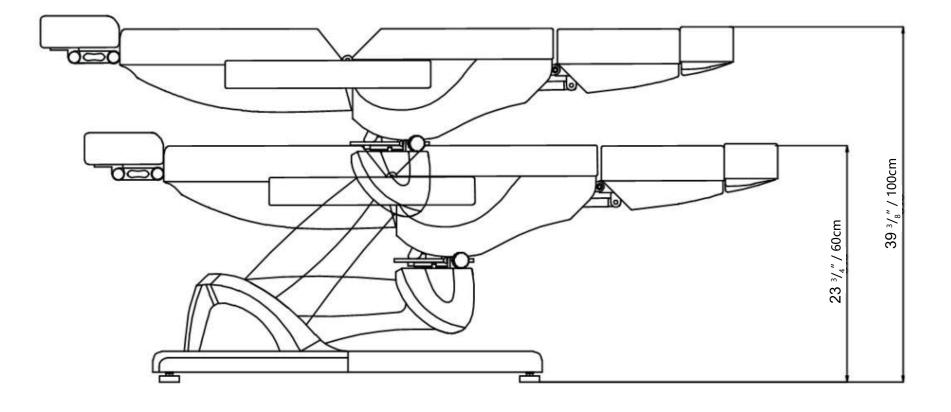


(2) The backrest adjustment

The inclined angle of the backrest can be adjusted up and down by pressing these buttons:


# 

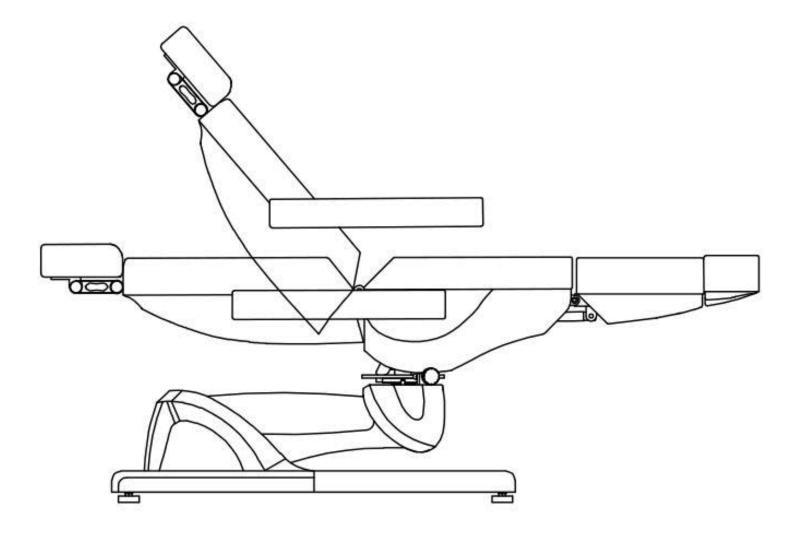

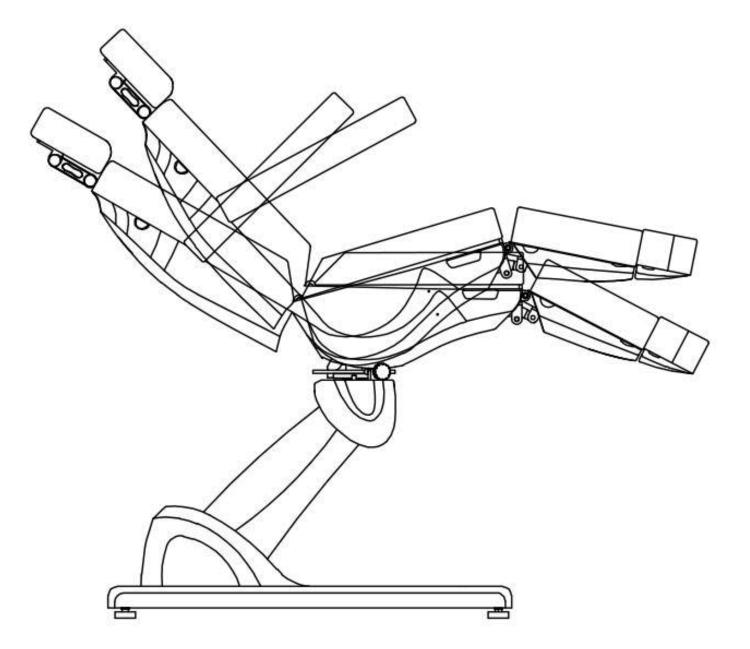


### (4) The footrest adjustment


The footrest can be controlled up and down by pressing these buttons:

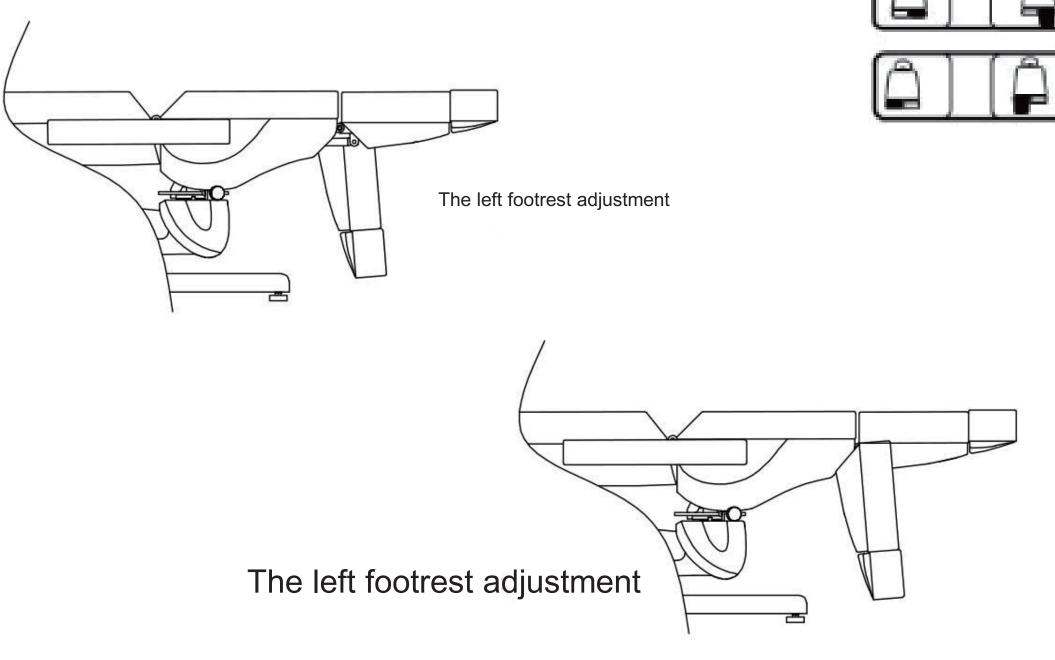

#### (5) Thepillow adjustment

The inclined angle of the whole pillow can be adjusted if you press the button A. And the retroflexion of thepillow can be adjusted individually f you press the button B.

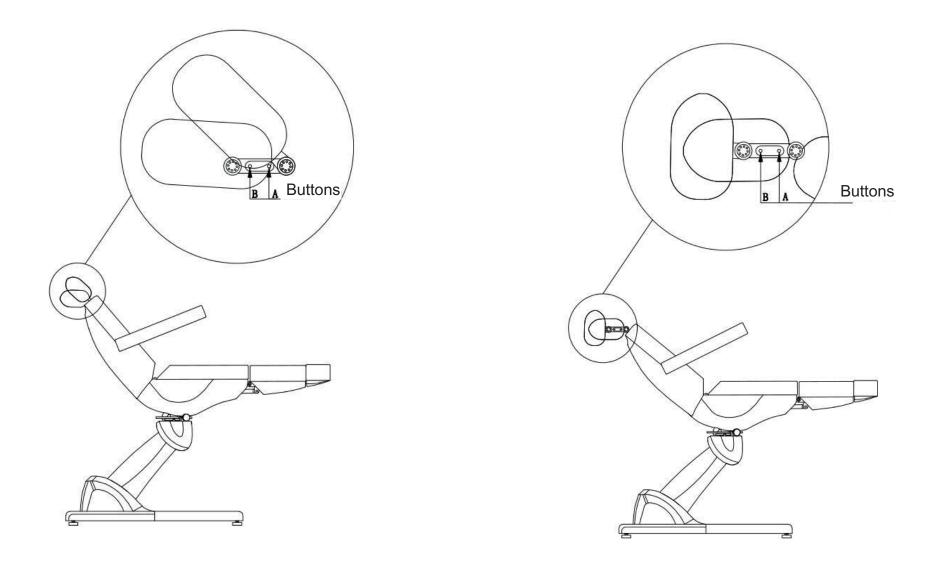

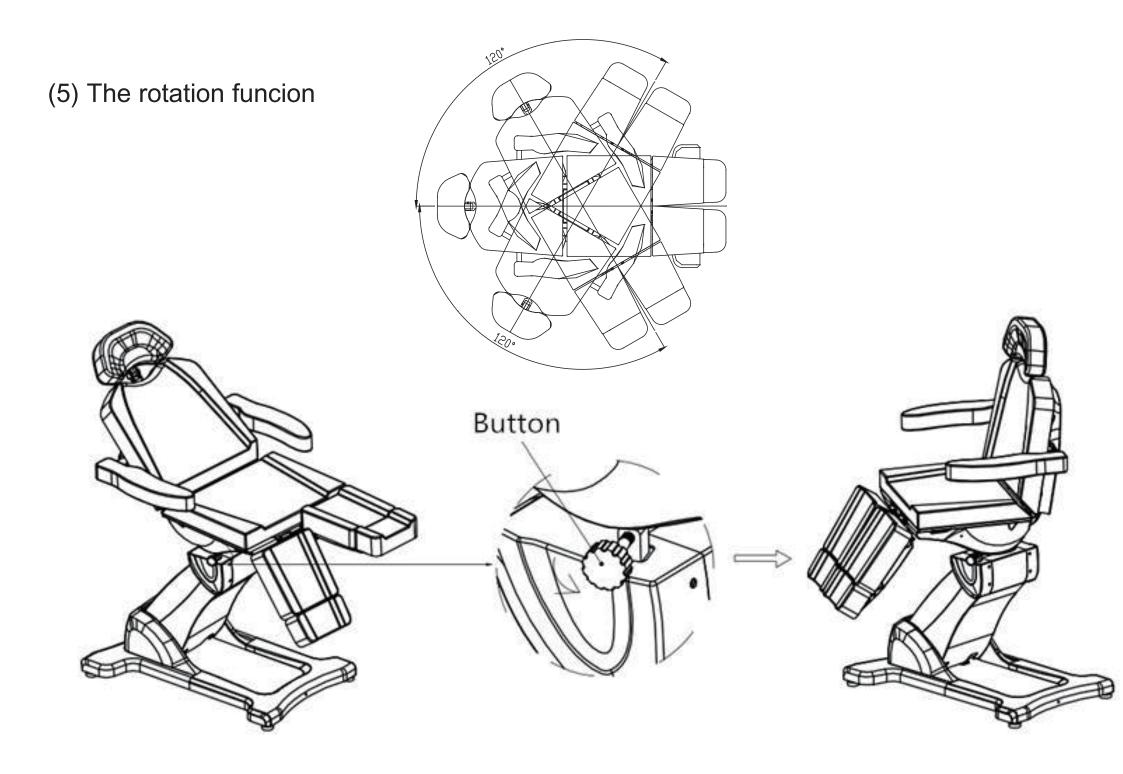

#### Maintenance

1. Daily cleaning

You can wipe out the dust by using soft dry towel.

2. Eliminating thestubborndirt

As we all know, it is hard to eliminate the stubborn dirt by using normal dry towel. In this case, you can use soft towel with diluted neutral detergent to clean it first. And then you can usedry towel to scrub.

- It's prohibited to use benzene, diluent, gasoline or other solvent.
   These solvents may damage the leather or it may cause the corrosion of the products appearance.
- 4. Storage and operating environment

Don't put the product under the strong sunlight and moisture environment. Otherwise it may cause the damages of the product.

5. It is allowed to use this product under the temperature from -5°C to 50°C and the humidity from 45% to 85%.

#### Fault diagnosis

If there is something wrong when you use the product, please try to check and eliminate the wrong operation as followings.

Phenomenon	Diagnosis	Operation of elimination
Press the button on the remote but without any responses.	<ol> <li>The function of control button has reached to maximum.</li> <li>To check if the power plug is connected.</li> <li>To check if each connecting plug of the transformer is connected.</li> </ol>	<ol> <li>Try to press other control button.</li> <li>Disconnect the power plug and connect it again.</li> <li>Disclose the chassis.</li> <li>Discharge the plug and connect it again.</li> </ol>
Letting out noises and shaking while going up and down	Screw loosen	Tighten all the screws

Remarks: It will be not informed if the improvements of the product do not influence appearance and function.