


Meteor


1198

INSTRUCTION MANUAL

EN

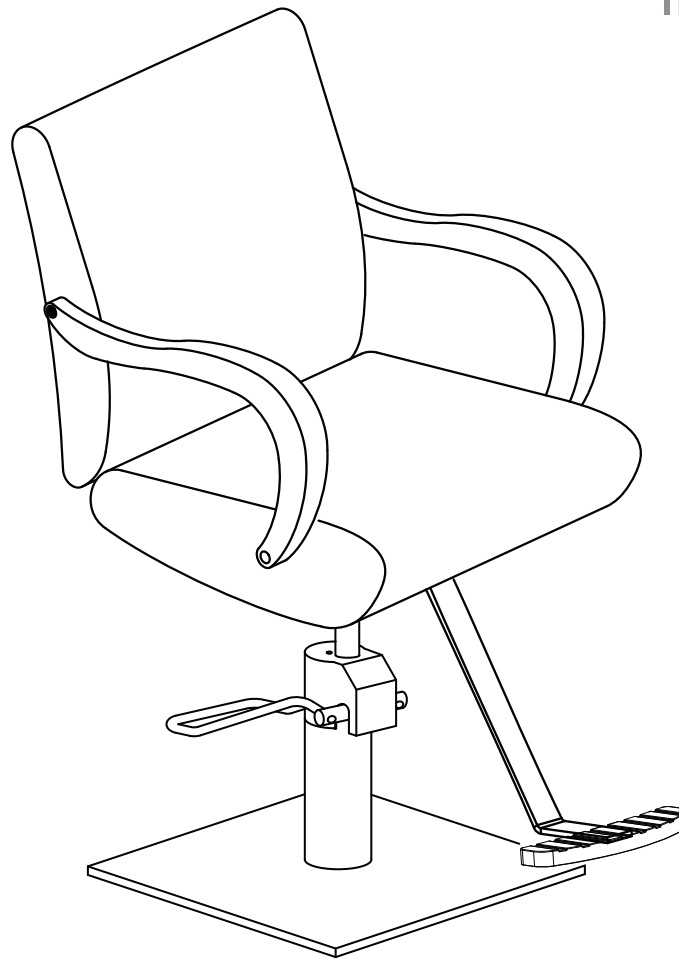


List of Parts & Tools

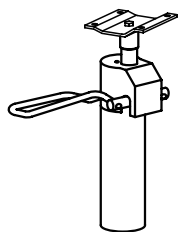


x1

Pump

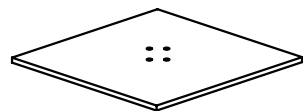


x1

Base

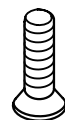


x4

M8x20mm

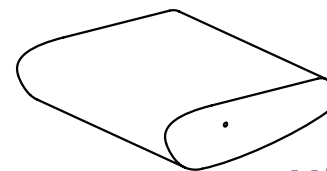


x1

Seat

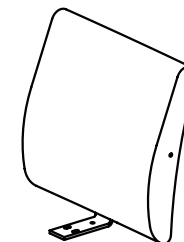


x1

Back

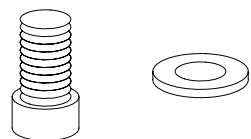


x3

M8x25mm

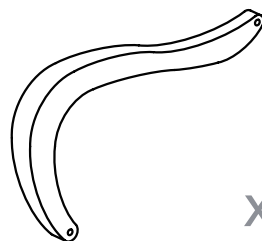


x2

Arm

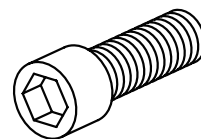


x4

M8 x 40 mm

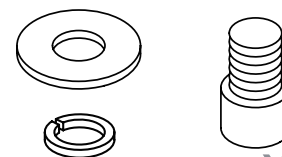

x4

M8x16mm

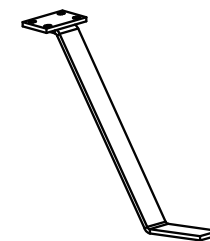


x1

Footrest post




x1

Foot pedal

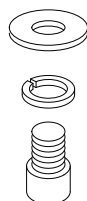


x4

M8x20mm

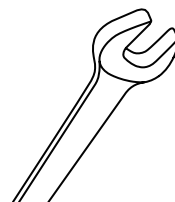

x1







17mm

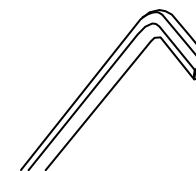









x1

6mm

Step 1

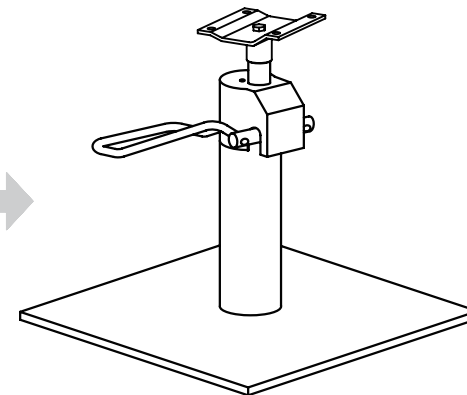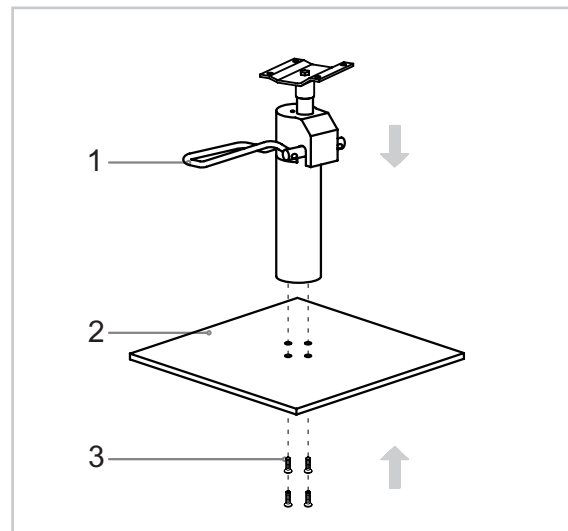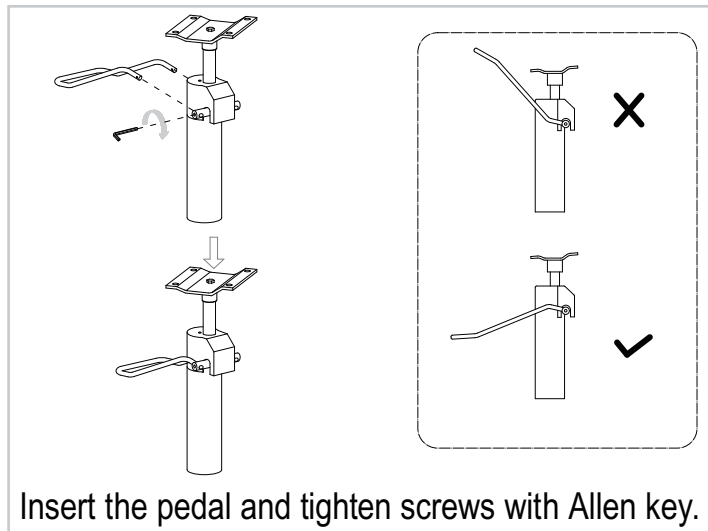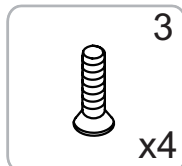
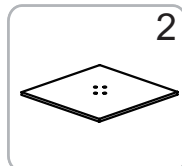
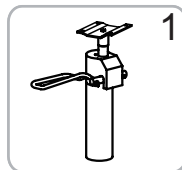


Step 2

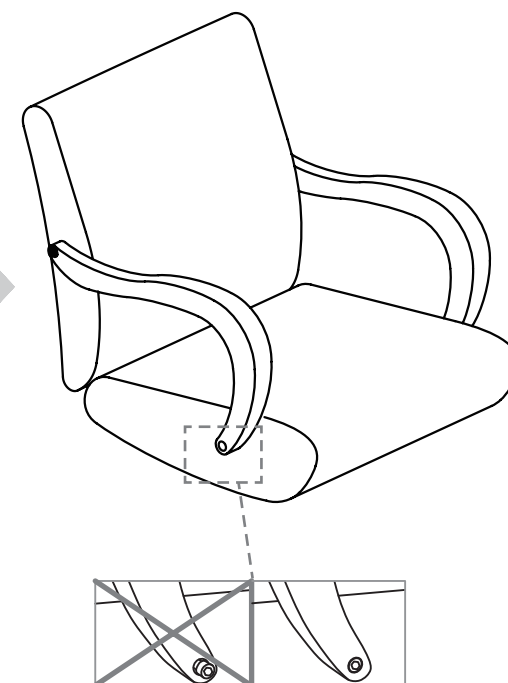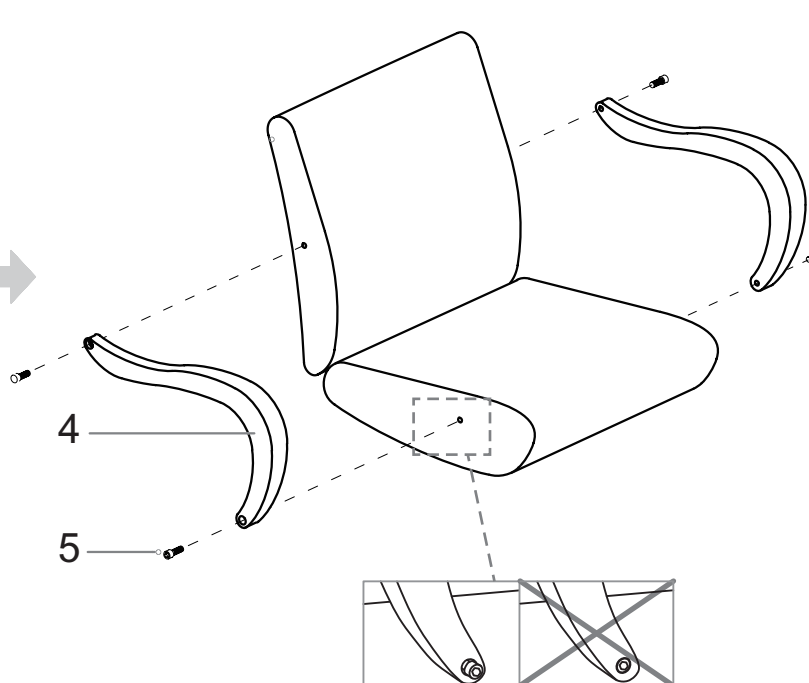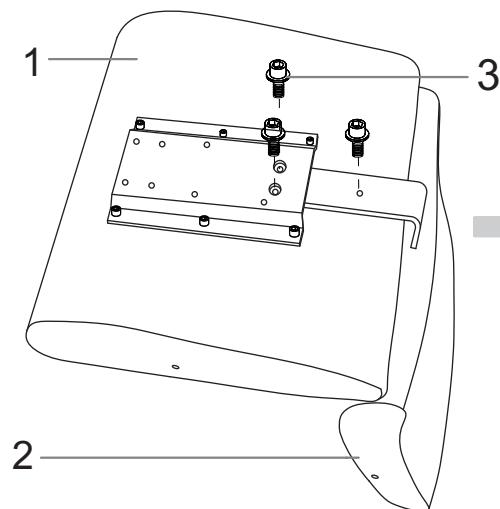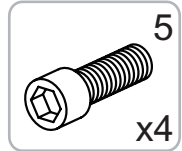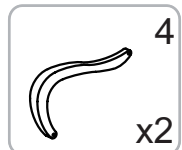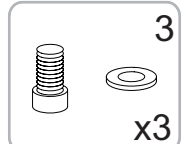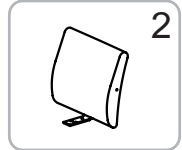
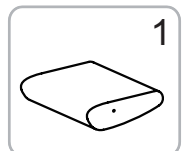


※ Do Not Tighten Screws All The Way Until Entire Assembly Is In Place

Step 3

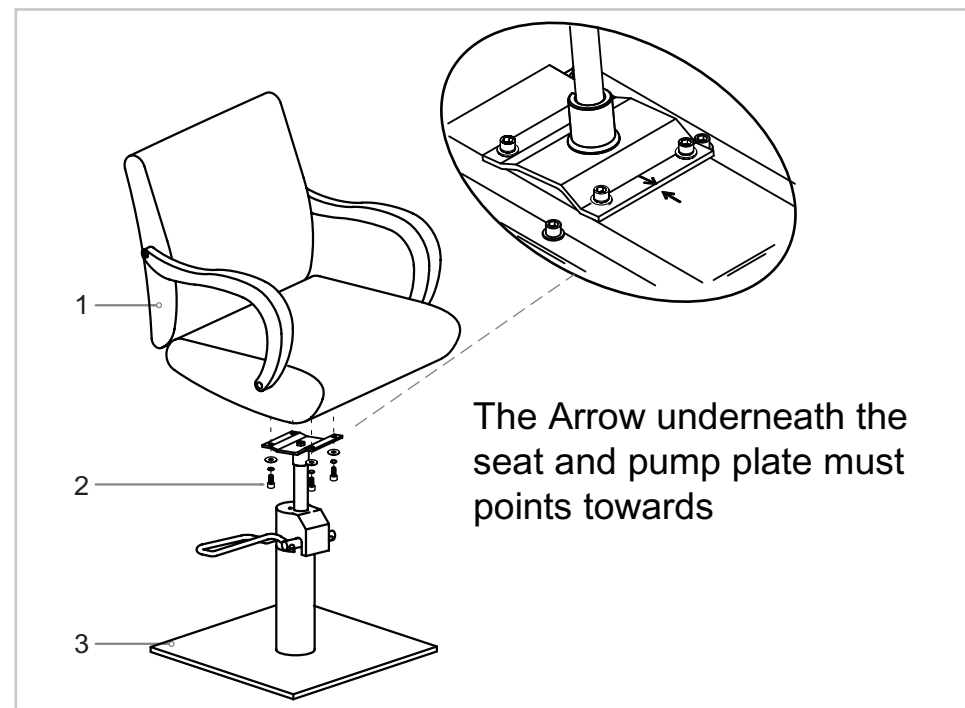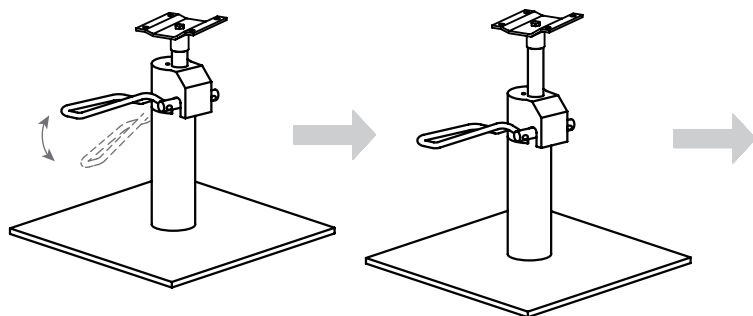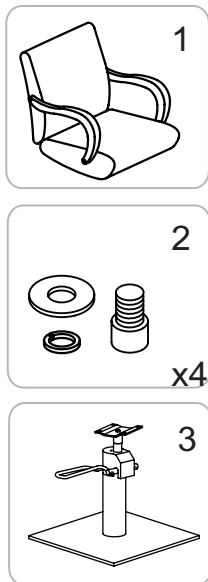

Step 4

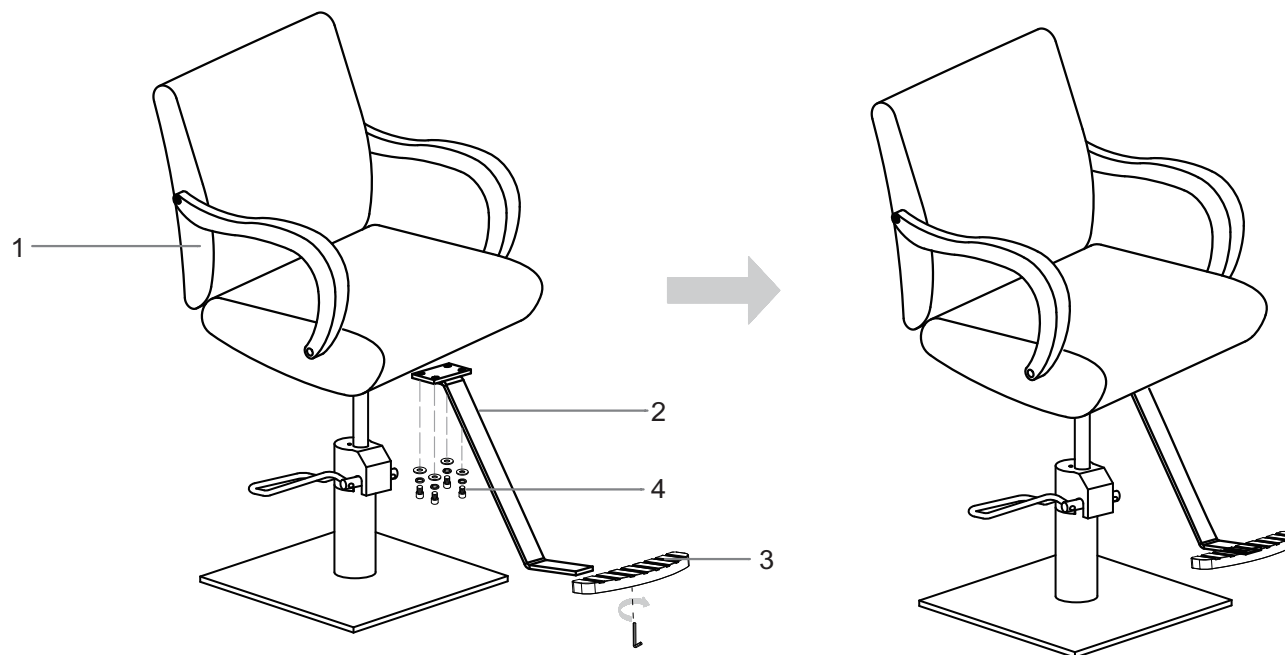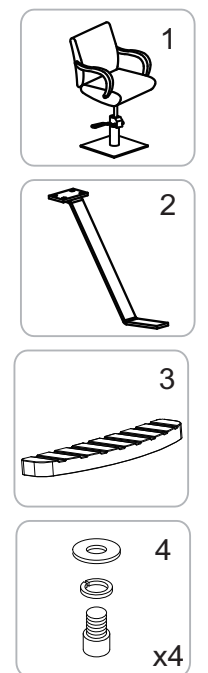

※After an initial period of use, check all fastenings for any loosened screws etc. If found, please tightened appropriately.