



ANODIC

1837
INSTRUCTION MANUAL

EN

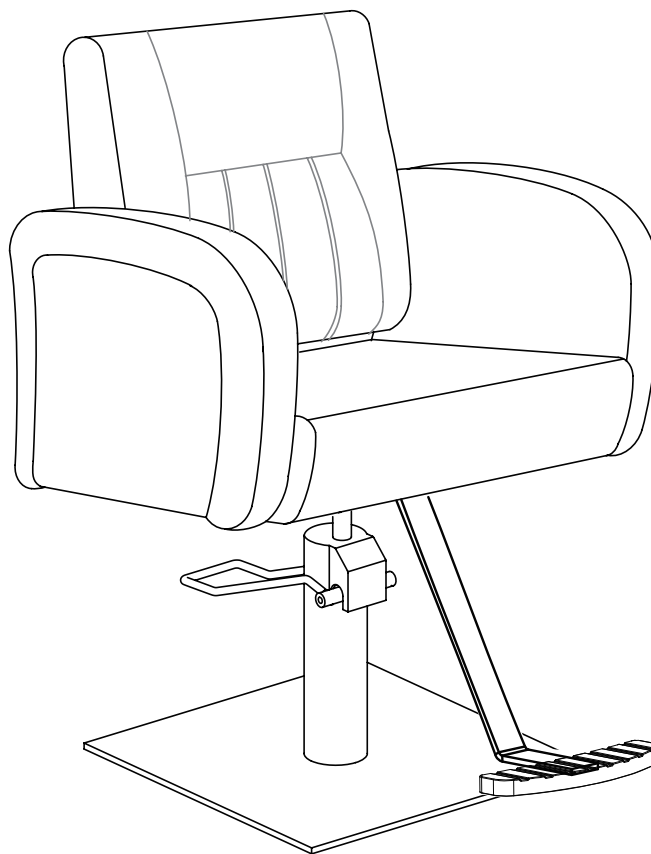


List of Parts & Tools

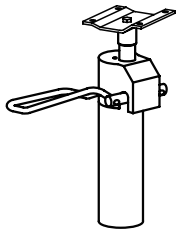


x1

Pump

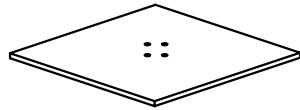


x1

Base

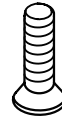


x4

M8x20mm

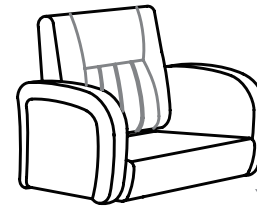


x1

Seat

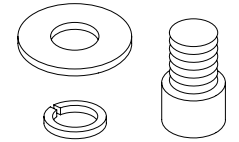


x4

M8 x 16 mm

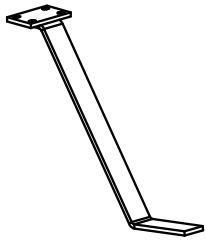

x1

Footrest post

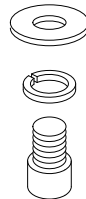

x4

M8x20mm



x1

Foot pedal



x2







M8x12mm







x1

6mm







Step 1

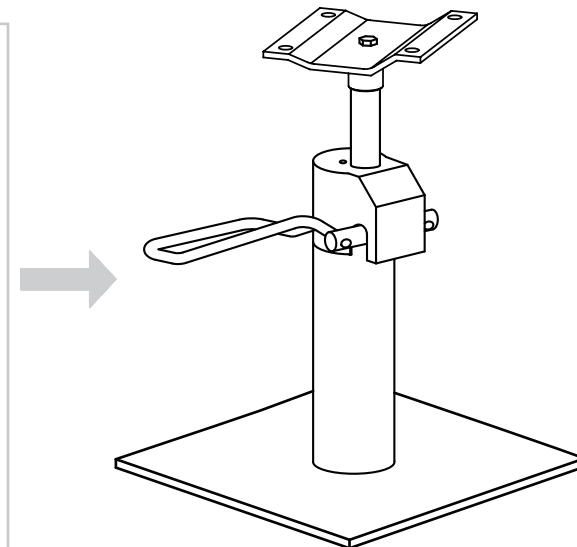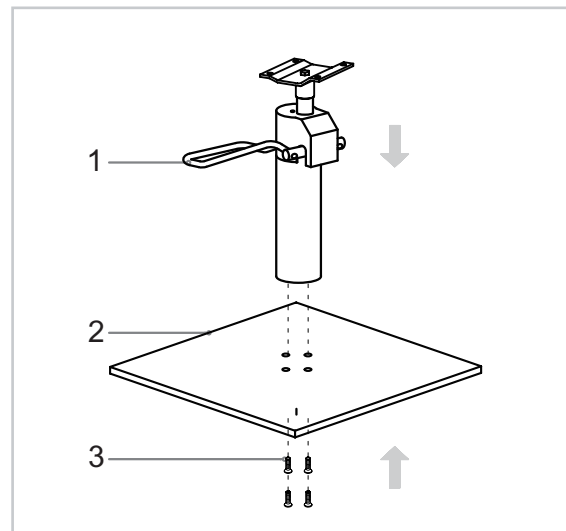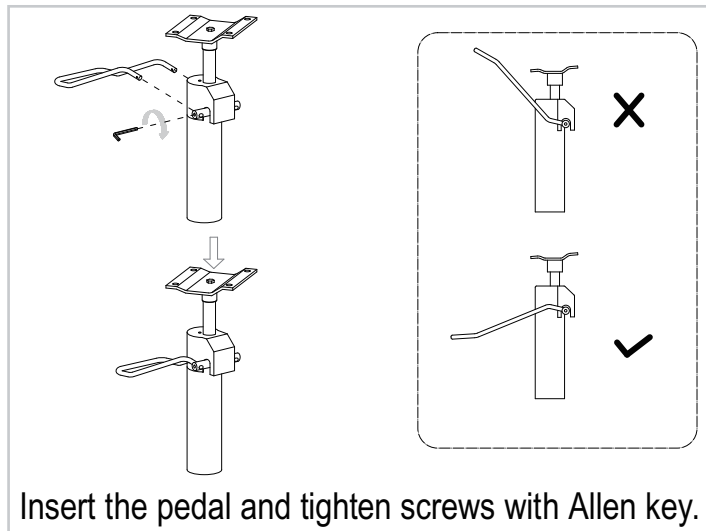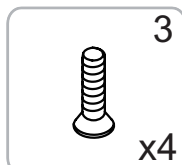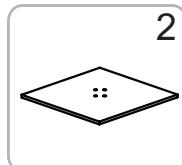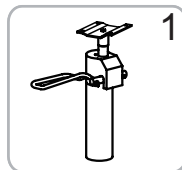

Step 2

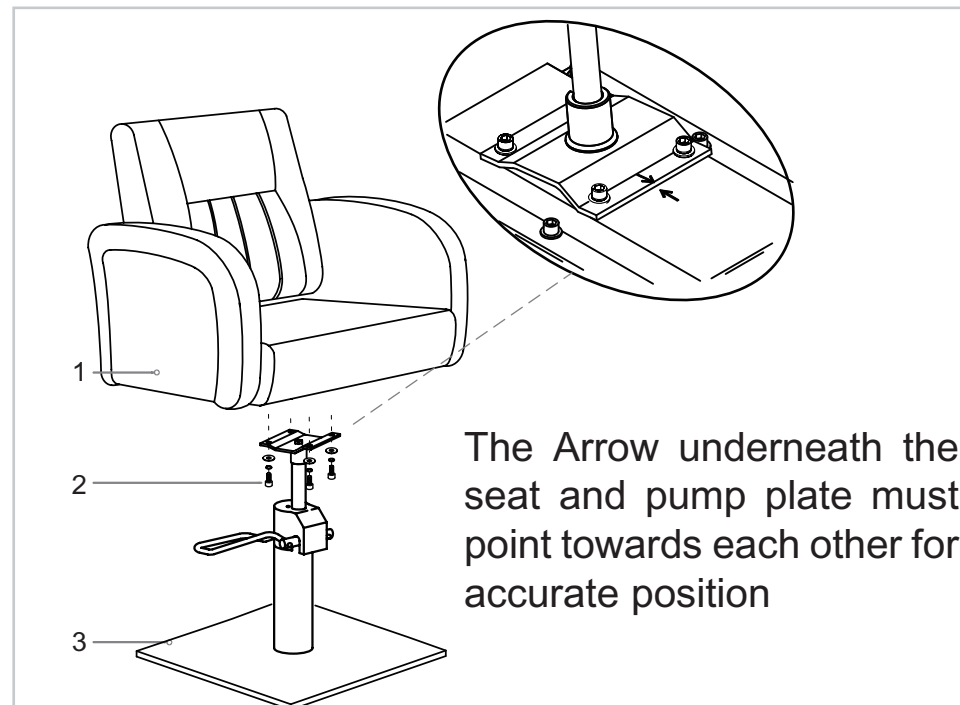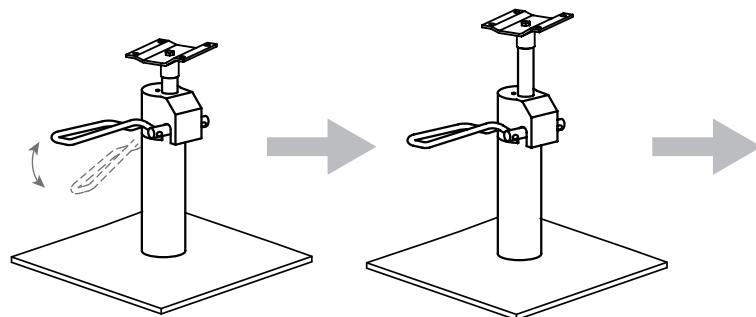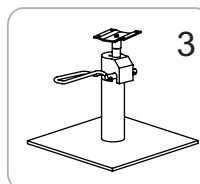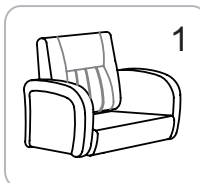

Step 3

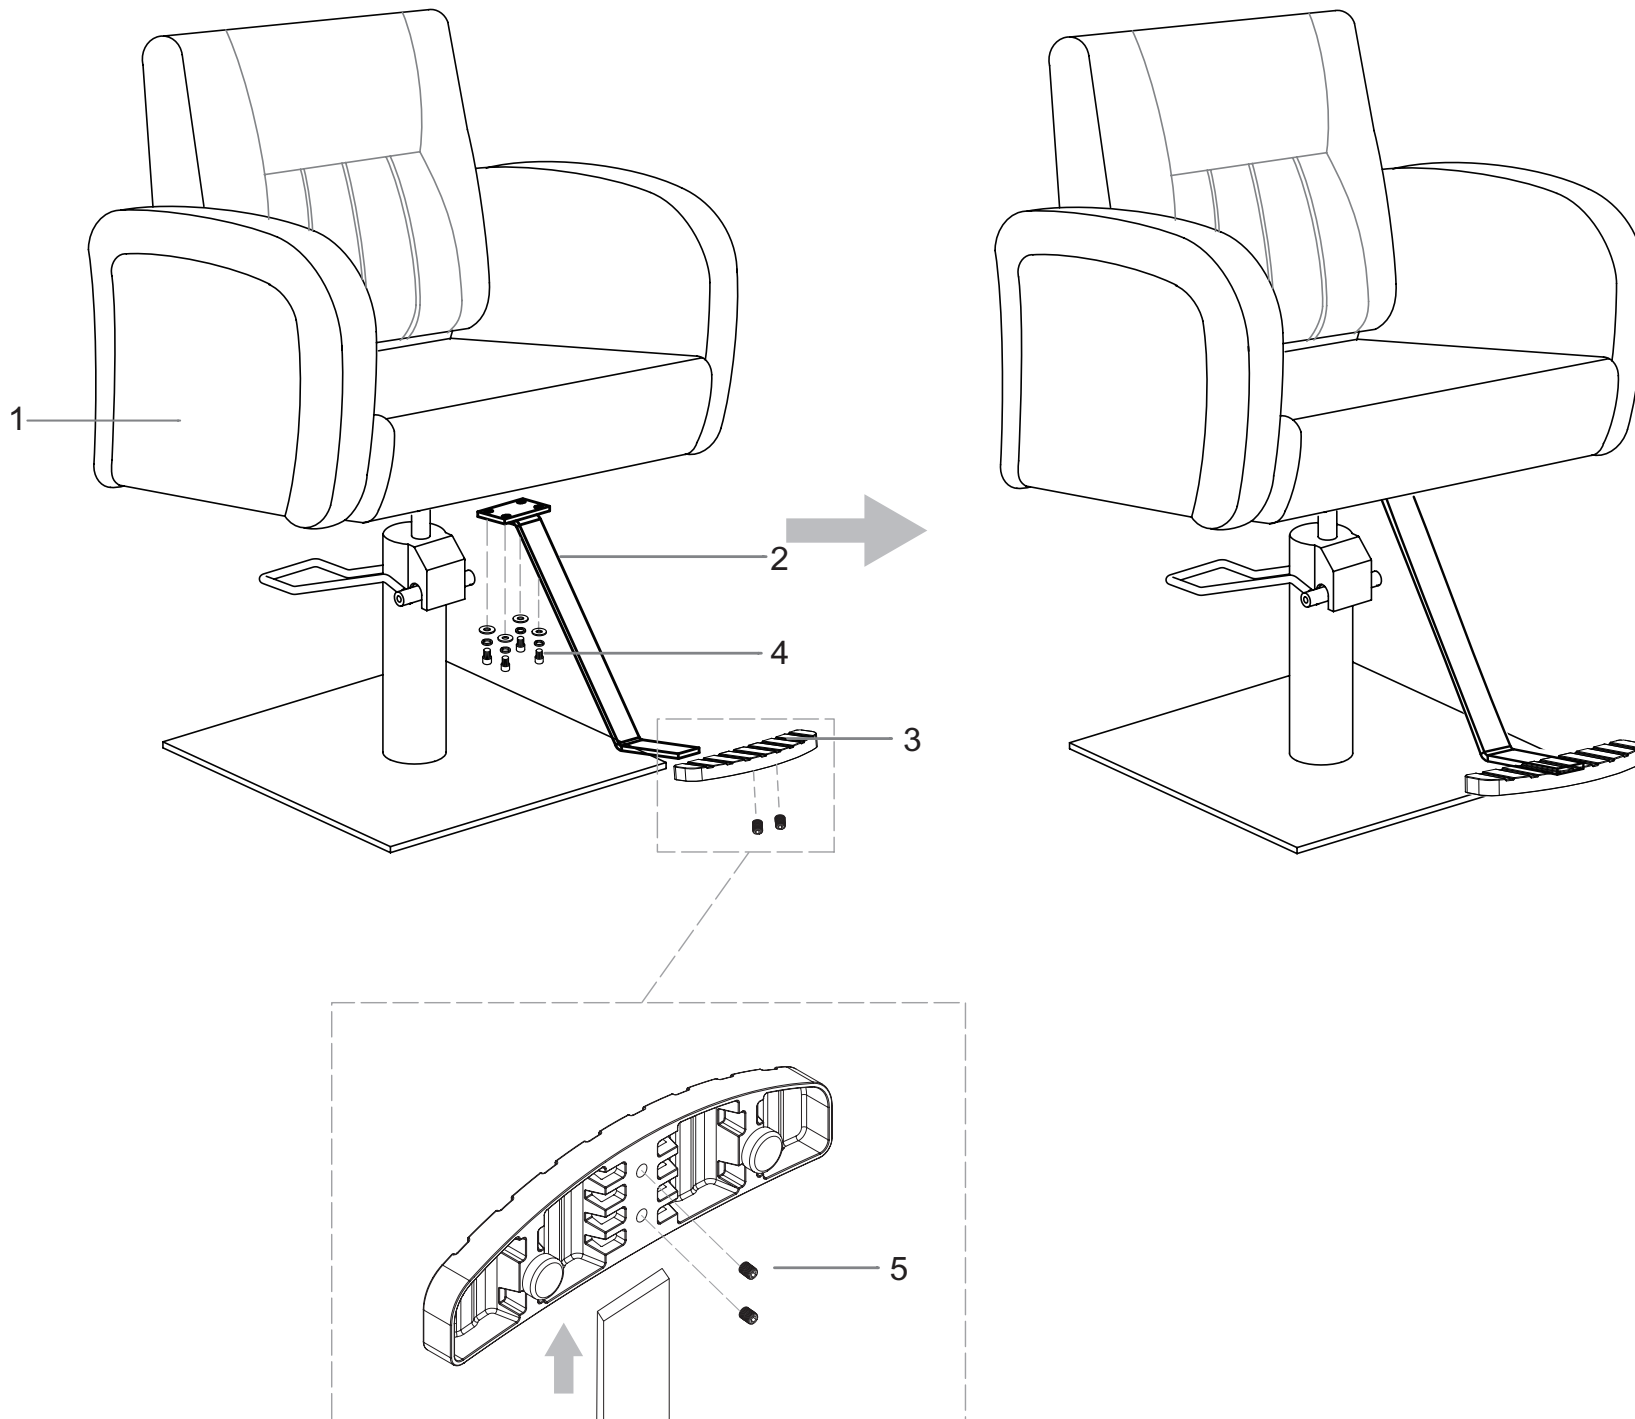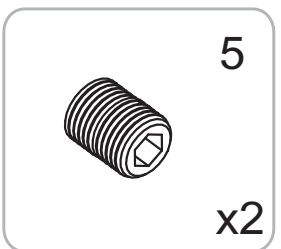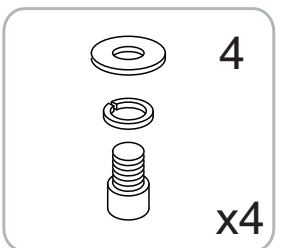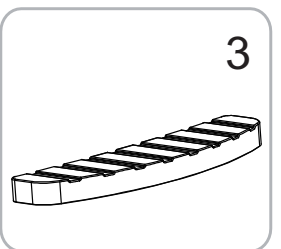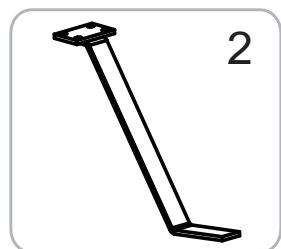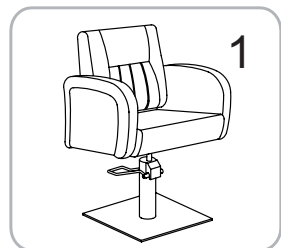

※After an initial period of use, check all fastenings for any loosened screws etc. If found, please tightened appropriately.