


BLAYNEY


1068

INSTRUCTION MANUAL

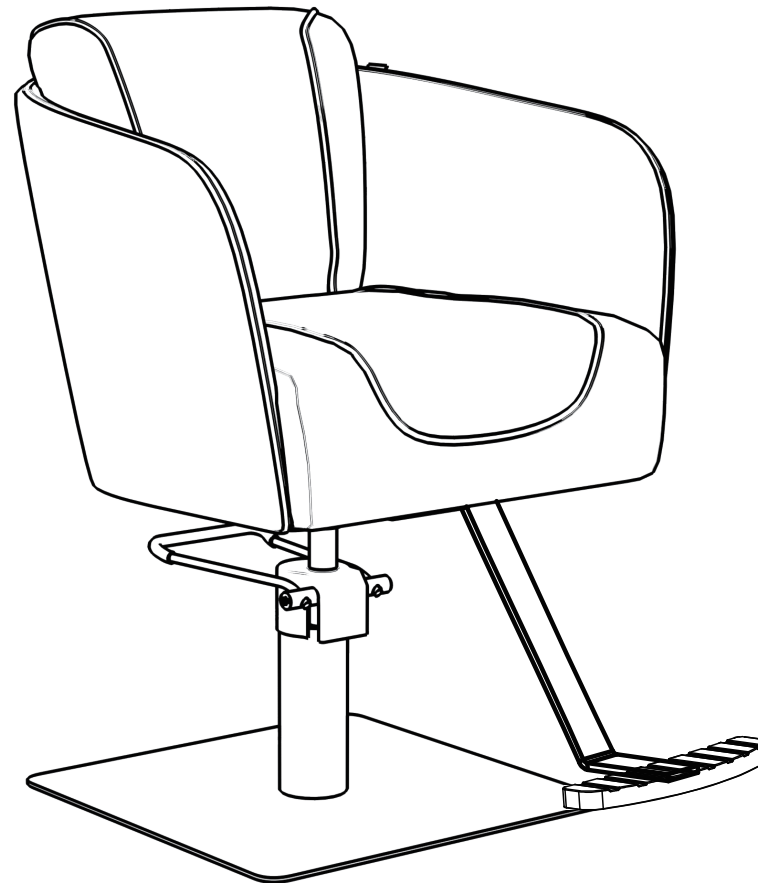


EN

List of Parts & Tools

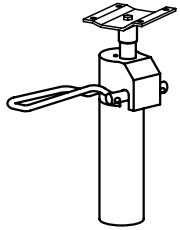


x1

 Pump




x1

 Base




x4

M8x20mm

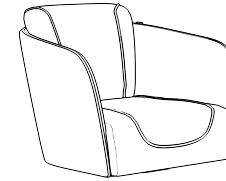


x1

Seat

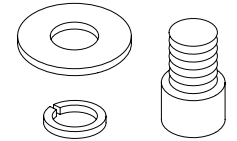


x4

M8 x 16 mm

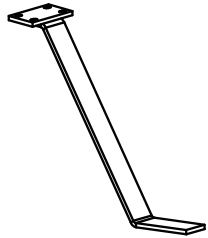


x1

 Footrest post



x4

 M8x20mm




x1

Foot pedal




x2

M8x12mm

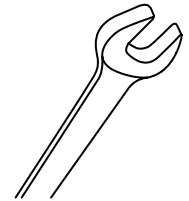

x1







17mm

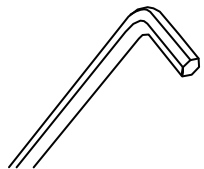






x1

6mm






Step 1

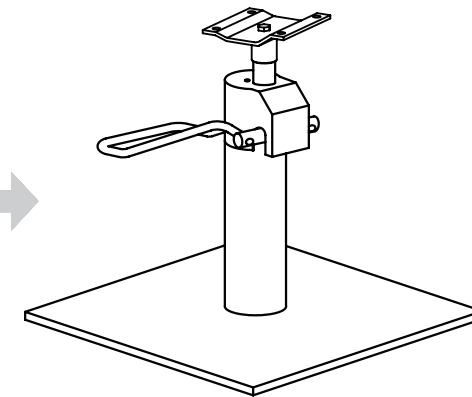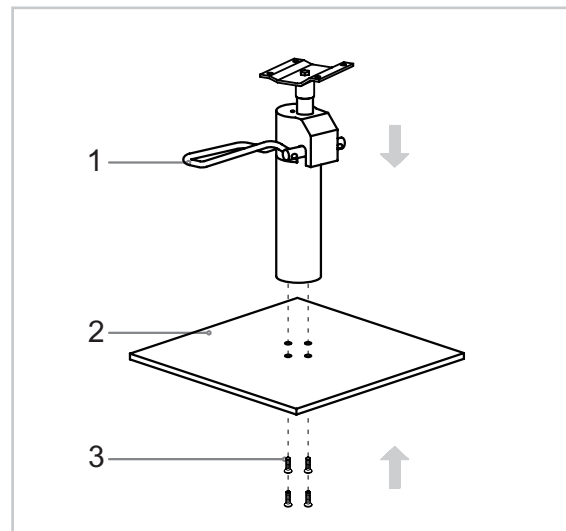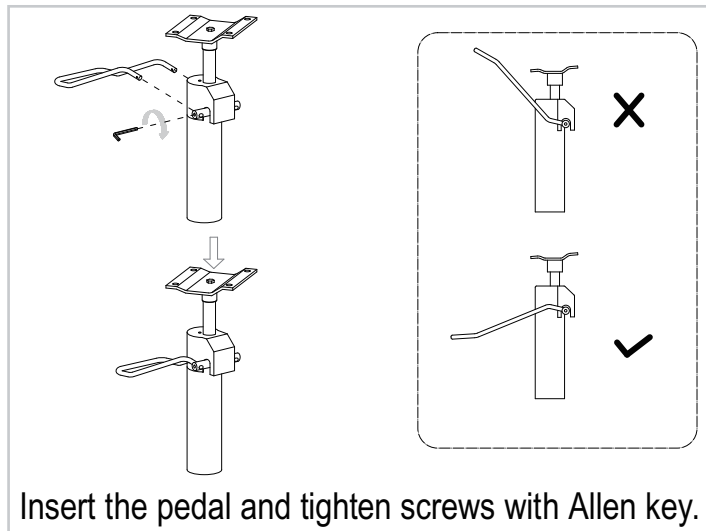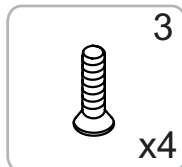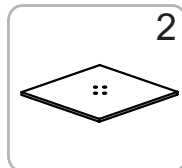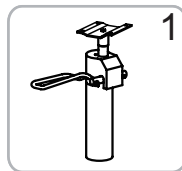

Step 2

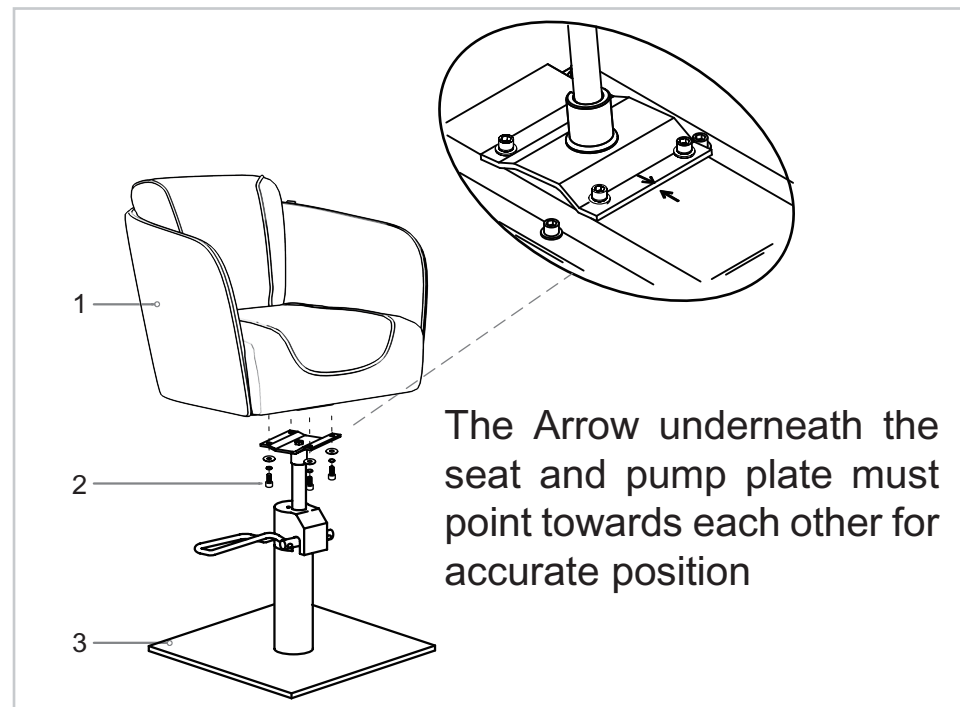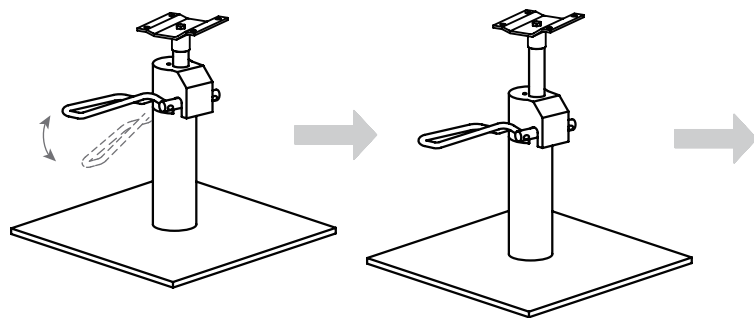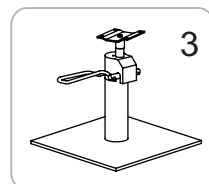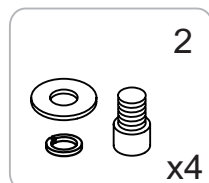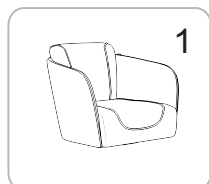

Step 3

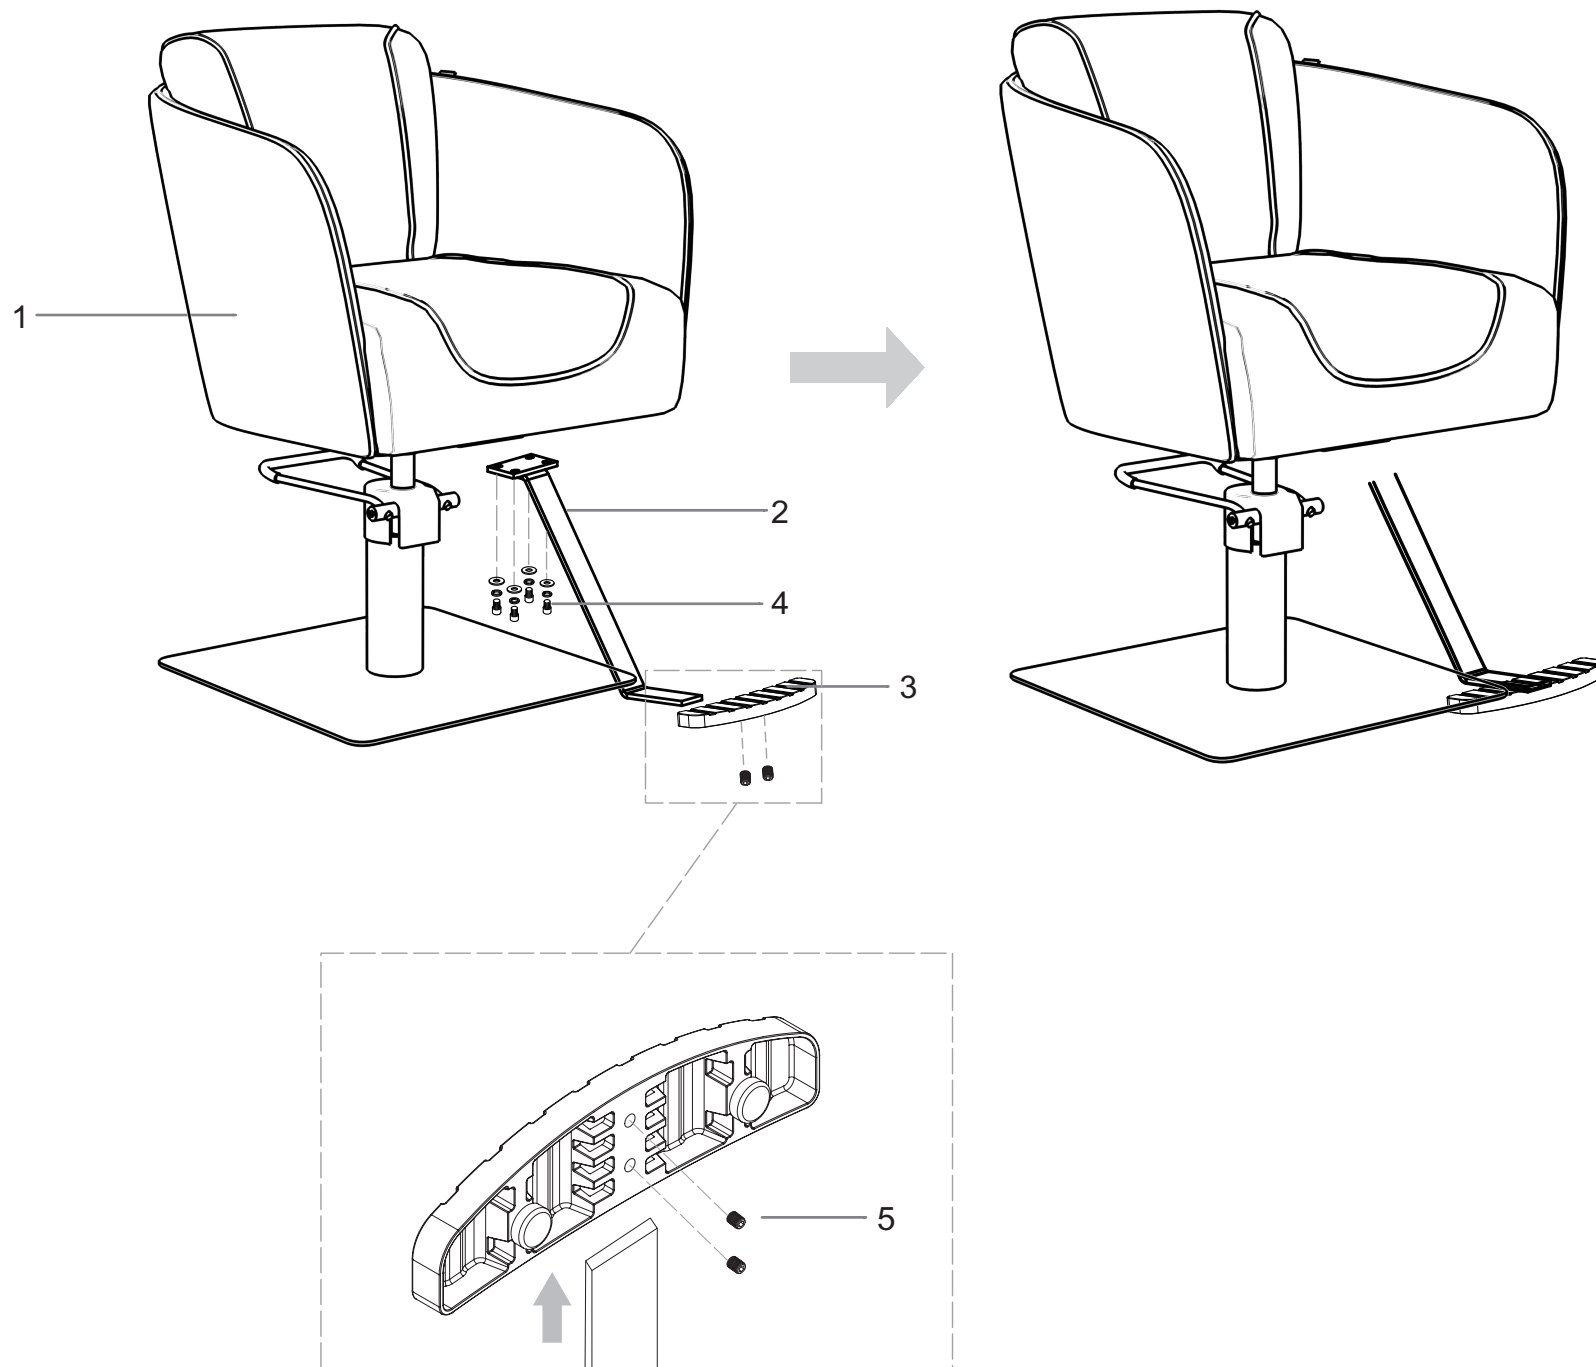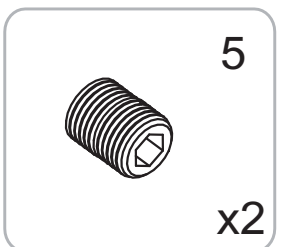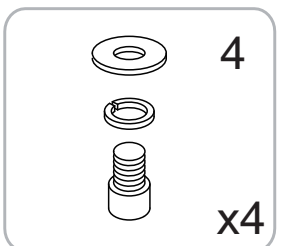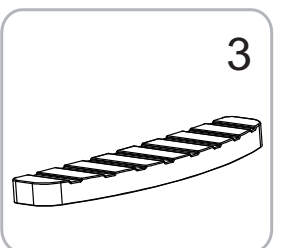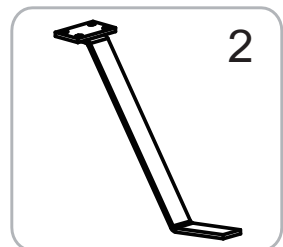

※After an initial period of use, check all fastenings for any loosened screws etc. If found, please tightened appropriately.