


# D'EAMES


1660

INSTRUCTION MANUAL

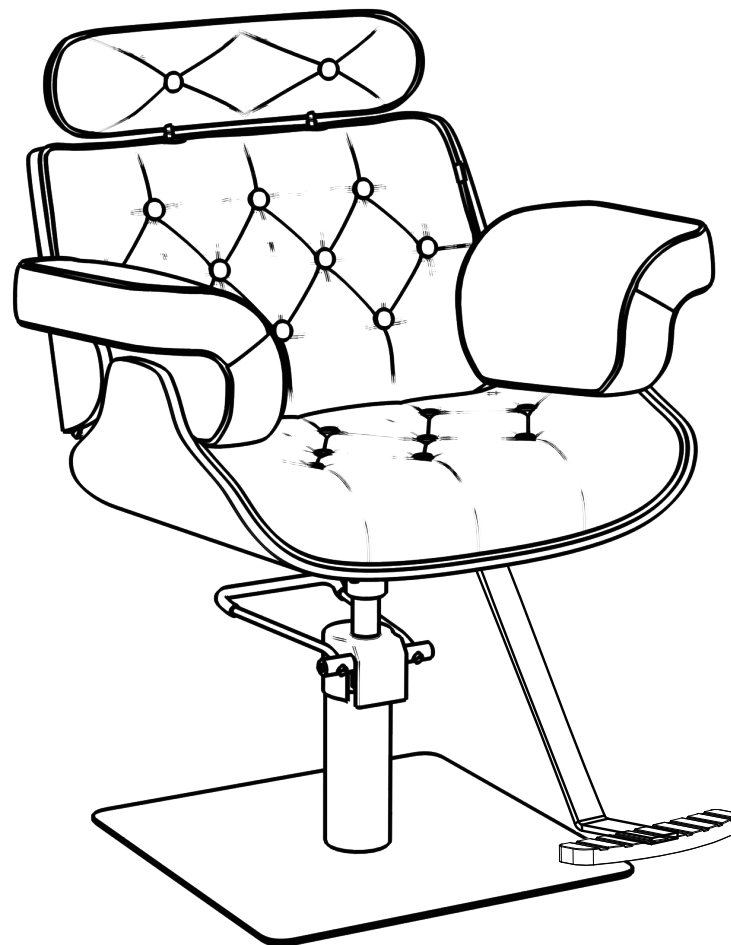


EN

## List of Parts & Tools

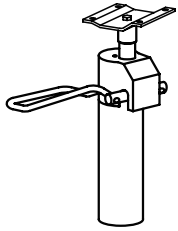


x1

Pump

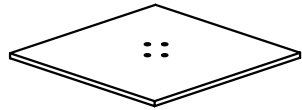


x1

Base

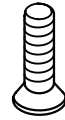


x4

M8x20mm

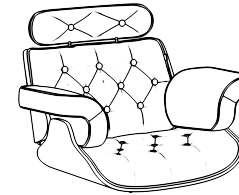


x1

Seat

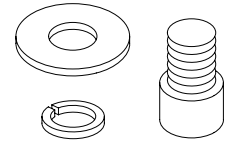


x4

M8 x 16 mm

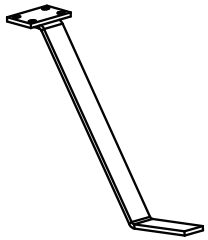


x1

Footrest post

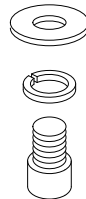

x4

M8x20mm

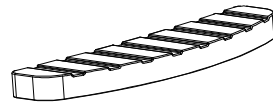

x1

Foot pedal



x2







M8x12mm








x1

6mm

## Step 1

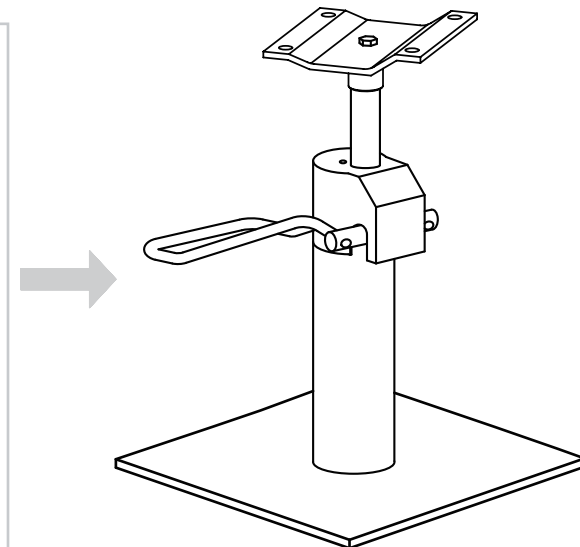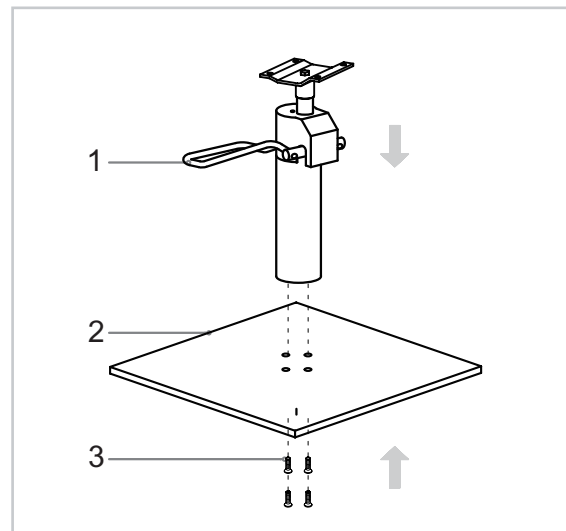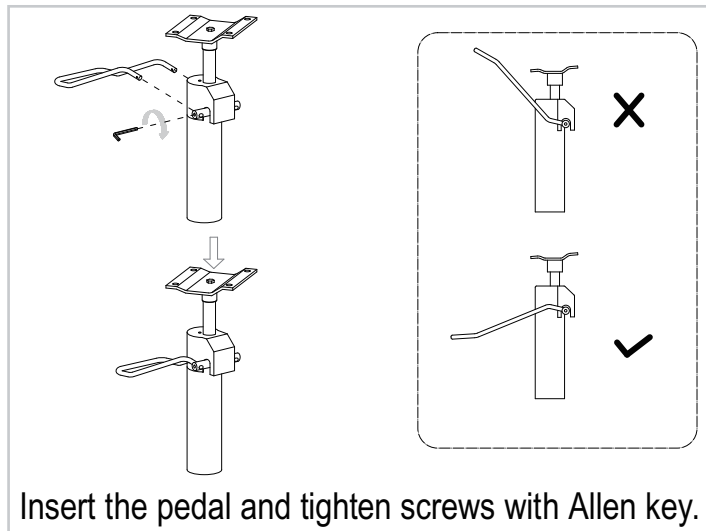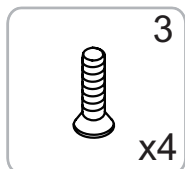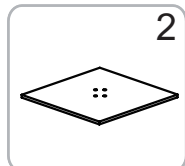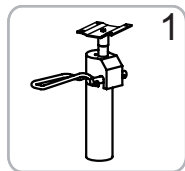


## Step 2

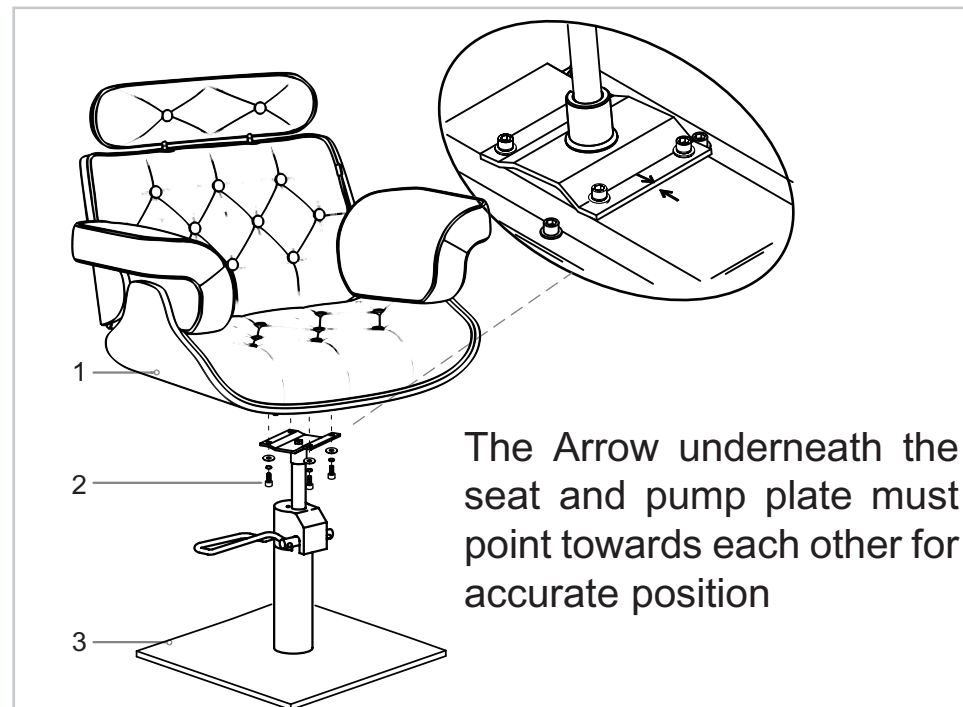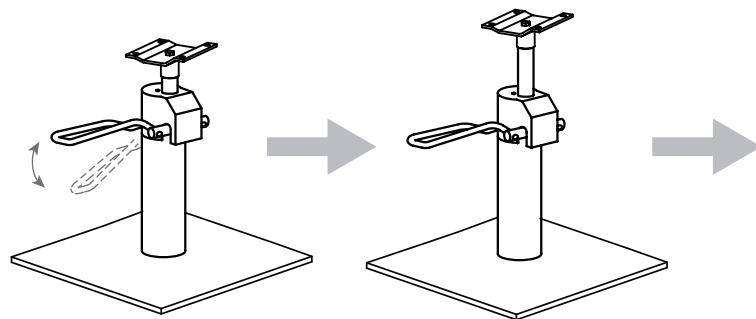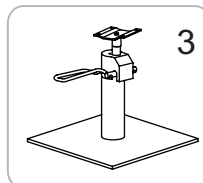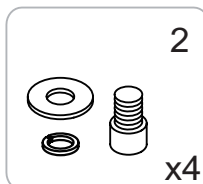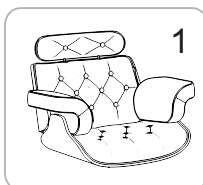

### Step 3




1

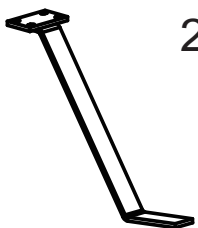

2



3

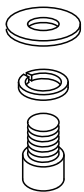


4

x4



5

x2

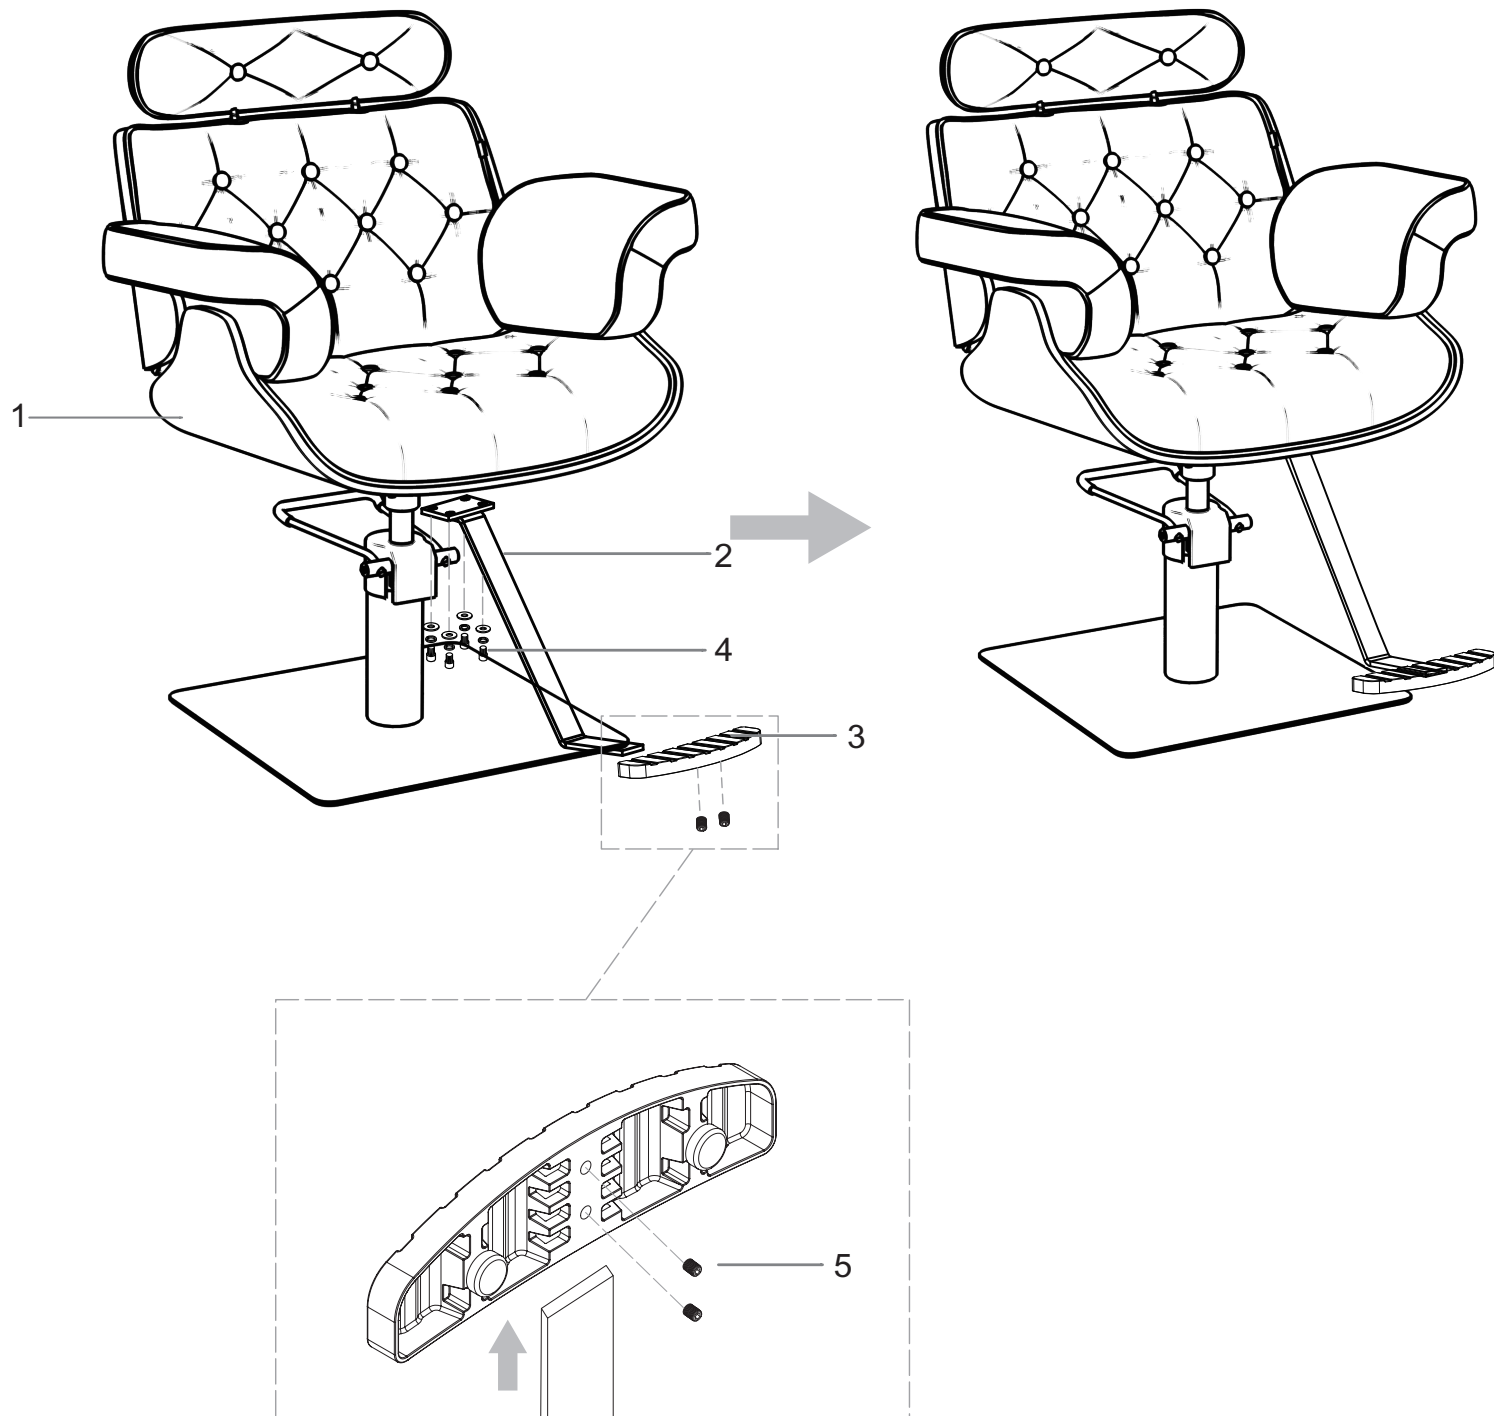

※After an initial period of use, check all fastenings for any loosened screws etc. If found, please tightened appropriately.