



When maintaining your fountain, you will need to remove the mesh filter from the plumbing housing and clean it with warm soapy water and a brush to eliminate sediments. To assemble it, the male end of the mesh filter goes inside the black housing and the end with the rubber ring goes against the clear acrylic cap. You don't need to apply pressure to the cap by screwing it to tight when installing it back.

