






Dimension & Weight	CleanJoy(Base Unit) CleanJoy(Chair) Stool	28 3/4"W x 49 1/2"L x 16"H Wt. 165Lbs 21"W x 34 1/2"L(Incline), 50"L(Recline) x 44"H(Incline), 34"H(Recline)Wt. 125Lbs 19"W x 19"L x 22"HWt. 13Lbs	
Capacity of Tub		4.25 US Gallon	
Switch		On/Off Air Activated Switch	
Whirlpool	JJT Impeller Motor Jets Air Control	Hydro Therapeutic Motor Jet with Impeller System Air Induction System	
Power Source	Motor Discharge Pump(Optional) Massage System 115V 1.2Amp 60Hz 55W 115V 32Amp 60Hz 110V-120V 60Hz 90W 5Amp		
Plumbing Source	Hot Water Cold Water Drain	1/2 inch(Fitting pre-installed) 1/2 inch(Fitting pre-installed) 1-1/2 inch(see Plumbing Instruction)	
Warranty	Unit Optional Item	One Year(see Warranty) 180 Days	

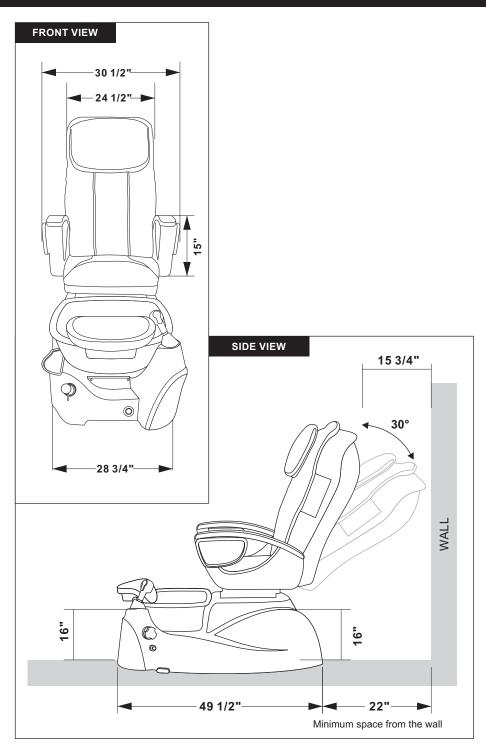

Clean Joy P.6

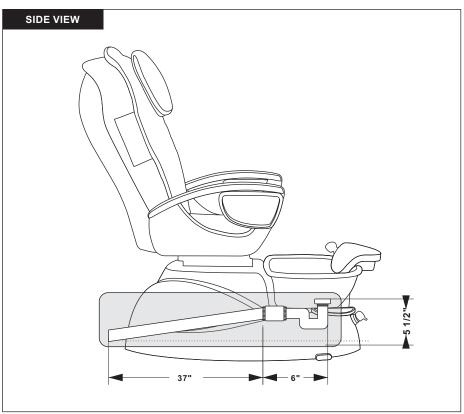

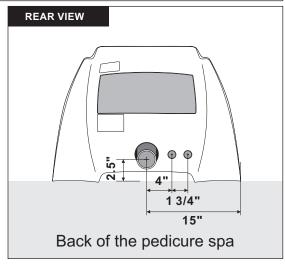

INSTALLATION SPECIFICATIONS SUMMARY



Warning: Failure to comply with federal, state or local codes and ordinances will result in warranty being null and void.

 
As stated, the pedicure spa installation must comply with all plumbing and electrical codes. A licensed plumber and licensed electrician must complete the applicable connections of the pedicure spa.

Location And Support


Select a level location. The floor structure beneath the pedicure spa must be capable of supporting the occupied pedicure spa. For the seat back to full recline, the pedicure spa base must be mounted 22 inches from the wall as shown below:

How to use adjustable footrest






Place left hand on the back of the footrest and gently pull up toward the front as shown fig2.

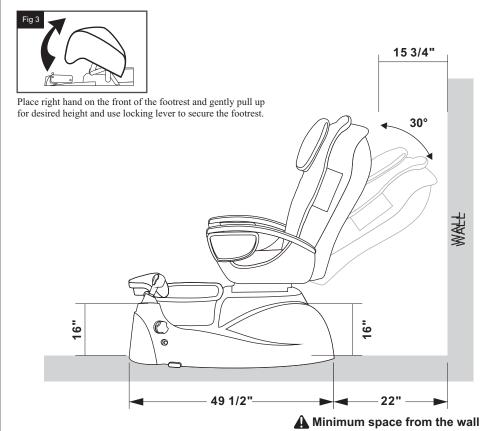

Clean Joy P.8

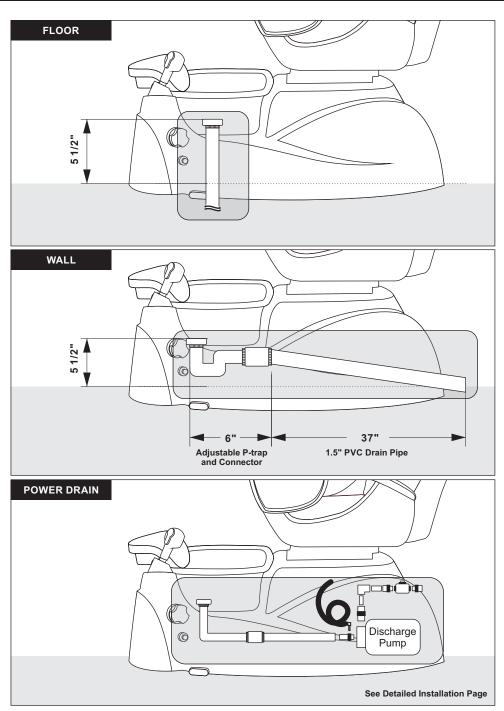

NOTE: The requirement for vacuum breaker varies from state to state and province to province. Please consult with the licensed plumber.

Important Safety Instructions



Warning: To reduce risk of burns, fire, electric shock or injury: READ ALL INSTRUCTIONS BEFORE USE;

burns will result from improper use; please be careful handling this product.

Close supervision is necessary when unit is used by, on, or near children and the disabled. Use this unit only for its intended use as described in this manual. Do not use any attachments not recommended by MFG.

- Keep the cord away from heated and wet surfaces.
- Do not use outdoors.
- Do not operate where aerosol products are being used or where oxygen is being administered.
- Never operate If it has a damaged cord or plug, or dropped in the water. To disconnect, press power button to turn off, then remove the plug from the outlet.
- Allow 30 minutes break time between operations.
- Do not place any heavy object on the chair and do not let children play with it.
- The maximum weight capacity for the massage chair is 250lbs.

Your massage chair is simple to operate using the handheld controller included with your chair.

Before you use your chair, we recommend that you familiarize yourself with the remote control and the basic massage functions.



Controller Operate

Button	Adjust Massage Balls		
(1)	To start or stop massage of the upper body, the button does not work when the massage system is at its position of recovery.		
TIMING	Three modes of timing:10 mins, 20 mins, 30 mins.		
LIPPER BODDY	Adopt the various tactics to carry on automatic massage to different position of the uppper part of the body. The massage position covers the whole upper part of the body.		
NECK SHOULDER	To carrying on automatic massage around the neck, shoulder mainly.		
BACK WAST	Carry on automatic massage around the waist mainly.		

Method of Usage

Function	Button	Display Status	Adjust Massage Balls
Method	NEAD NEAD	2)	Speed, Strength
	RAP	<i>\$</i>	Speed, Width, Strength
	NEAD 8 RAP	2	Speed, Strength
	PRESS		Speed, Width, Strength
	NOOX	(Speed, Width, Strength
Speed	SPEED		5 Speed options available
Width	WIDTH		3 Width options available
Backrest Stretch	SHOWNG SHEEDING	Ü	Upper body(overall) trip massage.
		ſή	Small area(partial) trip massage.
		۲٠٦	Fixed position(fixed) massage.

Maintenance P.11

Manufacturer requires that the pedicure spa be thoroughly cleaned at the end of the day in following manner.

Daily

- 1. Remove the jet cover(fig 1). All debris trapped on or behind the cover must be removed. The jet cover must be free of debris.
- 2. Before placing the jet cover, the cover must be immersed with EPA-registered disinfectant.
- 3. Flush out the whirlpool with low foaming detergent and warm water for 10 minutes.
- 4. With fresh water, EPA-registered cleanser for run the no pipe motor for 5 minutes.
- 5. Rinse with fresh water.

Weekly

- 1. Fill the basin with hot water up to its level.
- 2. Add 3 to 4 table spoons of a low foaming agent.
- 3. Run whirlpool for 5 minutes.
- 4. Stop whirlpool and sit for 5 to 7 minutes.
- 5. Open air control and whirlpool for 5 minutes.
- 6. Drain completely.
- 7. Fill the basin with warm water up to its level.
- 8. Apply EPA-registered disinfectant according to its direction.
- 9. Run whirlpool for 5 minutes.
- 10. Drain completely.
- 11. Wipe out excessive water with soft cloth.
- 12. Repeat step 7 to 10, if necessary.

double locking covers cleaning instruction(suggested by manufacturer)

- 1. Gently turn the cover counter clock-wise to remove. (Shown fig.1) This will expose the entire water chamber.
- 2 Use antibacterial soap or a solution of 3% hydrogen peroxide to wipe the inner chamber.

A

Warning: DO NOT use chlorine or chlorinated products (such as diluted bleach) as this will damage the plastic, chrome cover and VOID your warranty.

