



Foot Spa Massage Chair

LS-700

Operational Instruction

*Make your life healthy
and beautiful every day!*



Please read this operating instruction carefully before using this chair Please keep this manual in perfect condition

- ★ 1. Thank you for purchasing our massage chair. To ensure optimal function and safety, please read this manual carefully.

Content

Important safety instruction	2
Parts name and function	7
Parts name and function of remote control	8
Control operation	9
Operation prevention measures	10
Cleaning and maintenance	11
Specifications	11
Troubleshooting	12

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following □

Read all instructions before using this massager:

DANGER – To reduce the risk of electric shock:

1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1) An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- 2) Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- 3) Close supervision is necessary when this massager is used by, on, or near children, invalids, or disabled persons. Keep children away from extended back, foot support (or other similar parts).
- 4) Use this massager only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 5) Never operate this massager if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the massager to a service center for examination and repair.
- 6) Do not carry this massager by supply cord or use cord as a handle.
- 7) Keep the cord away from heated surfaces.
- 8) Never operate the massager with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- 9) Never drop or insert any object into any opening.
- 10) Do not use outdoors.
- 11) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 12) To disconnect, turn all controls to the off position, then remove plug from outlet.
- 13) Connect this massager to a properly grounded outlet only. See Grounding Instructions.


SAVE THESE INSTRUCTIONS

● Grounding instruction

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch A in following figure. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

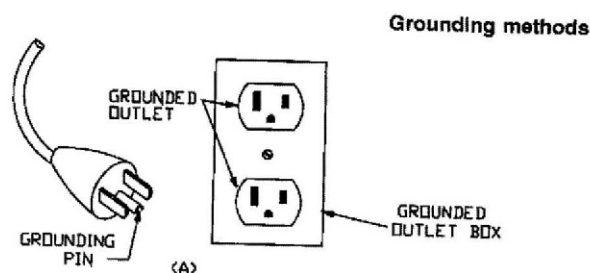

Safety Instruction

- ★ ● Please read this manual carefully for installation to operate the massage chair in correct way.
“Safety Instruction” is provided in both warning and caution for important safety information

⚠	Warning	This sign indicates “warning of causing possible death, hurt to body”
⚠	Caution	This sign indicates “caution of causing possible hurt, damage to things”.

- ★ ● This sign indicates “correct operation way for cable”

⚠ Warning: to avoid body hurt

- Pregnant women, patients, poor healthy people and those who feel pain in neck, back, waist or hip should consult doctors before use. People with heart pacemaker or other personal medical devices should consult manufacturer of the device and doctors before use.
- Please sit down after finding position of the massage rollers. Don't put any part of your body between rollers, otherwise roller's massage action may hurt you. Also don't put your hands or feet into the gap between back and seat, back and armrest or other active parts in case of hurt during massage.
- Don't massage with naked skin, you may get strong massage effect with thin cloth but may feel skin pain irritation. Any hard things are forbidden along with you while massage.
- Don't massage head, belly, elbow or knees. Please take care when massaging shoulder areas.
- Maximum massage time is 10 minutes (automatic stop function after 10 minutes).
- A massage of more than 10 minutes may cause an uncomfortable feeling.
- If you feel nausea or pain during the massage, please stop the massage, you may press “stop” key at any time, it will stop massage immediately.
- Please don't sleep while massaging, massage after drinking is forbidden.
- When back of the chair is in reclined position, please don't sit on it or press heavily on it, as this item may be turned upside down.
- Don't allow children or pets to play on it – especially not during massage.
- If power problems occur, please unplug the power immediately.

Safety Instruction

Warning: to reduce burning damage, fire, electricity shock or body hurt to minimum:

- Please make sure that the plug is complete inserted in the socket to reduce short circuit or fire dangerous.
- Please remember to unplug the chair if not in use. Please close all the massage functions before unplugging the chair.
- Disabled people or those who can't express themselves. They must be strictly and continuously taken care of while using this item.
- This item can only be operated under the usage clarified in this manual.
- Please don't stand on the chair.
- Please don't allow children to use this item and keep children away from this item.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or qualified persons in order to avoid a hazard.
- If the chair can't work, or be broken or damaged, or splashed or dropped into water, please send it to appointed service center for repair.
- Please open the back cover to check if the cloth material is broken or not, if there is cleft on the cloth, please stop using the chair and send it to appointed repair center.
- Please keep this item far away from heat sources, humidity, sharp things and corrosive, inflammable, explosive environments.
- This item can only be used indoors.
- The plug of this item can only be connected to suitable earth socket. Please refer to earth instruction. The plug should be accessible after installation.
- The plug of this item can only be connected to suitable earth socket. Please refer to earth instruction. The plug should be accessible after installation.

Safety Instruction

Before using this item

Turn on the power after checking the surrounding.

1. Check the surrounding:

- Check if there are any objects behind the chair
- Check if there is enough space (at least 40cm) so the chair can be reclined.

2. Check item:

- Check if there is a cleft on head pad, central back pad. Also check cloth material.
- Check if the supply cord is broken and if there is dust on the plug.

3. Turn on the power


- Make sure the voltage conforms with the required specification of this item
- Insert the plug into the power socket
- Turn on the power switch on the side of the chair backrest.

Parts name of the product



Parts name and function of remote control

Operation instruction of remote control:

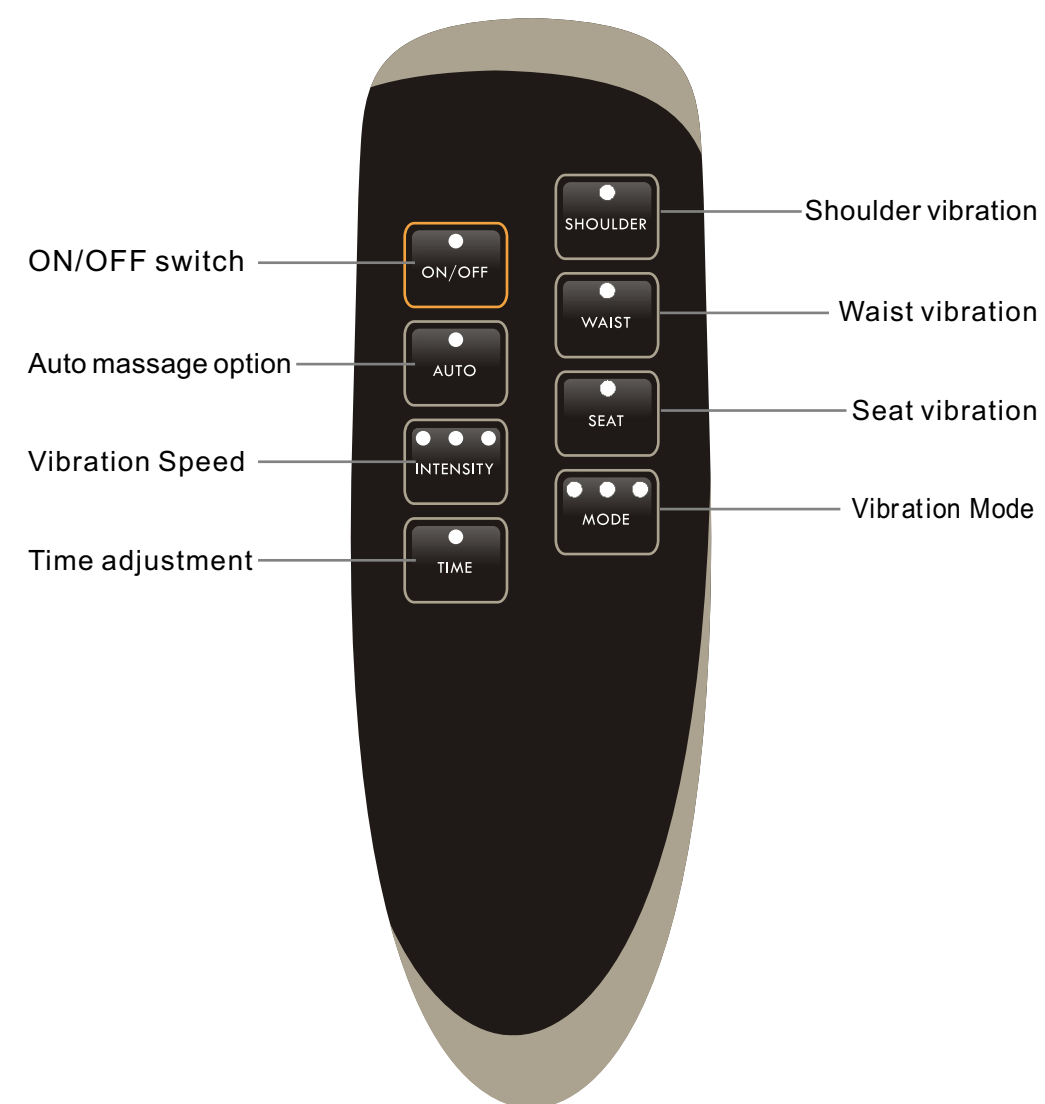

Control operation

- All the massage functions can be operated by the remote control. Before use, please make sure that there are no children or pets near the chair.
- If the operation is correct, buzzer will send out one beep sound. If the operation is incorrect, it will send out two or more beep sounds.



- **Press “on/off” key**

power indicator come on. Default working time is 15mins, max. Working time is 10mins.



- **Press “auto massage option” key**

Shoulder ,back and waist will vibrate automatically .



- **Press “Vibration Speed” key**

Total of 3speeds for you to choose: slow, medium and fast.



- **Press “time adjustment” key**

Press time adjustment key to adjust working time. Default time is 10mins. Max. working time is 20mins.



- **Shoulders:** Vibration on shoulders



- **Back:** Vibration on back



- **Waist:** Vibration on waist.



- **Mode:** Three vibration modes for you to choose

Operation prevention measures

Warning: to avoid damage to the chair

- User's maximum weight is 120kgs; weight excess may cause damage to massage machine or permanent damage to other parts.
- Please don't crush or drop the control set. Don't pull control cable or electric wire. Be careful not to clamp the cable between armrest and back of the chair.
- Please don't touch cloth material of the chair with sharp things, and be careful not to drop cigarette, ash or lighters on the chair. Chair exposure in the direct sunlight may fade the cloth material.
- If there is abnormal function in the chair, please shut off power and ask the designated repair center to check the chair. Don't repair it by yourself.
- Don't repeat pressing any keys in very short time in case of any abnormal functions.
- Noise coming from inside the chair when it is turned on is normal; it's the item's internal structure.
- Make sure there are no obstacles behind the chair. Maximum declining degree is 135°. Please decline slowly and gradually to avoid touching the wall or other things that can make the chair function improperly.
- Each time when finishing the massage please turn off the power and unplug the chair.

Adjust the angle of the backrest and seat

(1) MANUAL TYPE

- Backrest leans backward: up--pull the handle beside the right armrest, and lean back into the chair to move the chair backwards., Then the backrest will lean back-wards and down to your ideal position, release the handle, the backrest will be locked.
- Backrest lean forward: up-pull the handle beside the right armrest, make body little up , then the backrest will automatically lean forward to your ideal position, release the handle, the backrest will be locked.
- Seat adjustment: up--pull the rail-lock handle on the side, slightly move your body forward or backward with a little strength, the seat will move following your body, the seat also can turn around 360°.

Cleaning and maintenance

Synthetic leather

- Clean the leather with a piece of soft, dry cloth (cloth containing any cleaners or to use.)
- If the leather becomes dirty, please mix water with neutral 3%-5% detergent and dip the cloth into the water for cleaning the leather surface. Then wash the cloth to remove detergent and scrub the leather with a piece of dry cloth. Let it dry naturally (don't dry the wet leather with an electric dryer.)
- If leather has been contacting ethylene resin for a long time it might fade.

Cloth cover

- Use a piece of cloth with medium detergent liquid to clean cloth cover.
- Use a soft brush dipped with medium detergent to brush dirty cloth material. Be sure not to brush it too much, it might cause damage to the cloth.
- Dip a piece of soft cloth into clean water. Use it to wash the item and let it dry naturally.

Cleaning of plastics parts

- Dip the cloth into medium detergent liquid.
- Use a piece of cloth with clean water to scrub this item and dry it naturally.
- For cleaning of the remote control, please use a slightly damp cloth to scrub the surface.
- Don't use any solvents to clean as they may cause discoloration.

Caution:

- Be sure to unplug the chair when cleaning this item.
- After cleaning this item, make sure to dry hands before plugging the power again.
- Otherwise, it may cause electric shock or burn.

Specifications

- Power supply: AC 120V~, 60Hz
- Power consumption: 20W
- Backrest decline angle: approx. 110~135°

Troubleshooting data

Troubles	Possible reason	Troubleshooting data
The massage chair can't work after power is on.	Not choose massage function	Choose massage function
	Check if the plug and socket are loose contact or not.	Check plug and socket
	Check if the power connection is correct or not.	Turn on the power again after checking
Power on, the indicator keeps flashing , can't operate any functions with the on/off key	The cable of controller open circuit	Exchange the cable
	The cable of controller bad contact	Check and repair or exchange it
	Some keys on the controller maybe blocked	Open the cover of controller , adjust or exchange some keys
	ON/OFF key broken down	Exchange it
Power on, some keys with no answer	Components on the controller with problems	Exchange the whole controller
	Massage chair in the auto or resting system	According to the user manual
	Some keys broken down	Check and exchange
The keys are all ok but no vibration on the shoulder	Some parts broken down or with bad contact	Check and exchange those parts: ①the line of shoulder motor、②motor、③the audion Q3 on the Main PCB
The keys are all ok but no vibration on the waist	Some parts broken down or with bad contact	Check and exchange those parts: ① the line of waist motor、②motor、③the audion Q3 on the Main PCB
The keys are all ok but no massage on the seat	Some parts broken down or with bad contact	Check and exchange those parts: ①the line of seat motor、②motor③the audion Q3 on the Main PCB
All functions are ok but when switch the working models, the massager move back place or stop working	Working voltage un-steady or lower than 100VAC, the electrocircuit protect itself automatically	Use the correct input voltage
	Some other wirings disturb the massage chair by signals, the electrocircuit protect itself automatically	Keep far away from other wirings or not to use the same socket with other equipments
	Some parts or components with problems	Exchange the controller

Note: If you can't find out the problems besides the above-mentioned reason, please turn off the power switch on the outside of right armrest, unplug the power, contact dealer or our company for repair or maintenance.