



**SAVE THESE INSTRUCTIONS**

# **MASSAGE CHAIR**

## **GS 8200 SPA** Operation Instructions

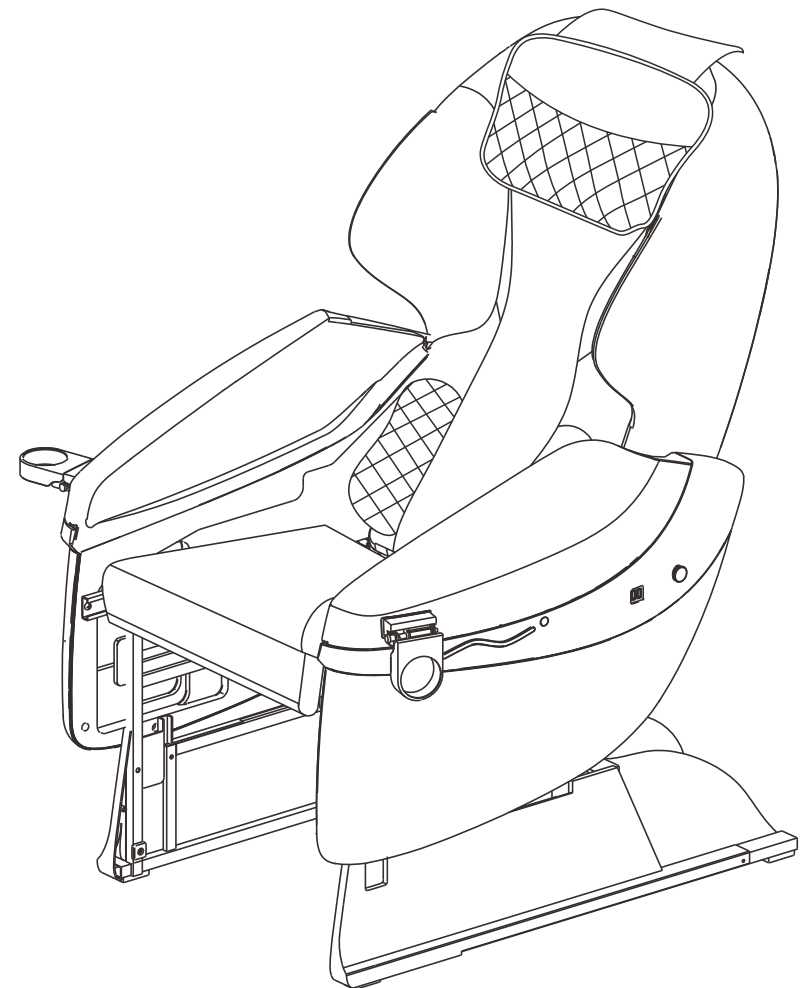

## Name and function of components

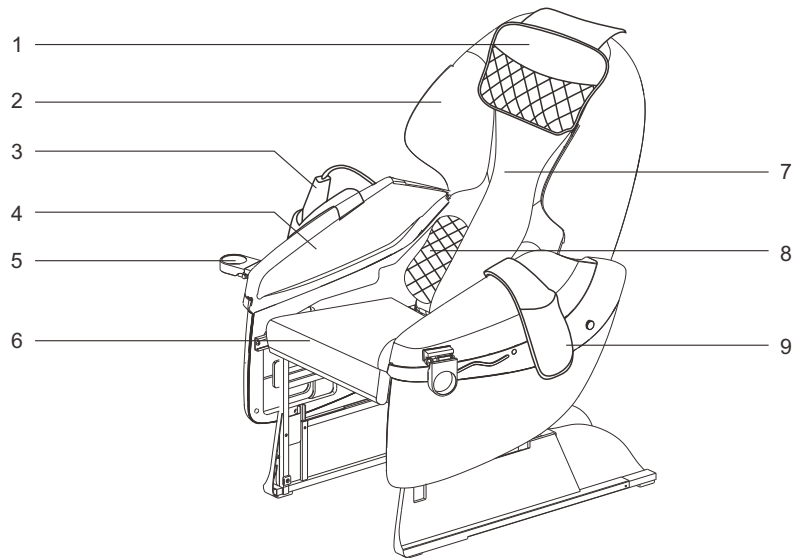


1. Head cushion
2. Shoulder airbag assembly
3. Remote controller
4. Arm airbag assembly
5. Cup holder
6. Seat cushion
7. Back cushion
8. Waist airbag
9. Remote controller pocket

## Function

- This product is designed with a set of massage machine hand that can walk up and down.
- Set five kinds of artificial massage techniques: finger pressing, kneading, flapping, knocking flapping and kneading.
- Set automatic massage function: neck massage, body massage, back waist massage
- Set the upper body manual massage function (full, partial, fixed point three massage parts selection, acupressure, kneading, flapping, flapping, kneading and flapping five kinds of artificial massage techniques; each massage technique has three speeds adjustable, Under the fixed point state, the machine hand can adjust the upper and lower position; when flapping, shiatsu, flapping massage, the width of the massage ball is wide, medium and narrow.
- airbag massage function: hip pressure, upper body pressure, arm pressure (two airbags built into the left and right armrests), a total of eight airbags. Air pressure three mode selection, third gear strength
- The bathtub can be adjusted freely in and out, the backrest frame lifting adjustment and one-button lifting adjustment function.
- With the bathtub shortcut button to adjust the bathtub forward or backward and the backrest angle to tilt freely.


Method of usage

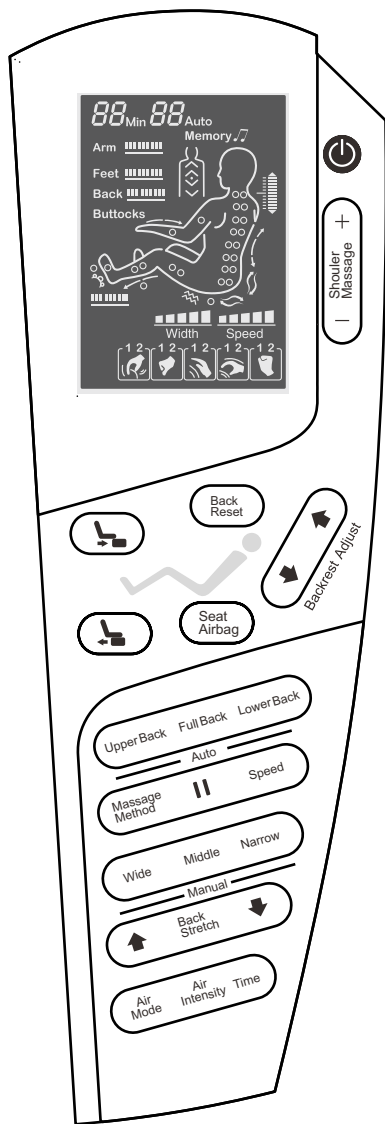


Method of usage

- 1.Start the massage
- Turn on the power switch, start massage


1).Remote controller operation

Button	Description
	Power switch: Turns all massage functions on or off.



2).Shoulder air pressure intensity adjustment

Button	Description
	The shoulder air pressure is increased and adjust three level
	The shoulder air pressure is decreased and adjust three level


3).One-button reset

Button	Description
	The backrest frame reset with one key


4).Car adjustment

Button	Description
	Press and hold the button to move the bathtub forward, when you hear shortly :BiBiBi.." it means the tub reach the maximum
	Press and hold the button and move the bathtub backwards. when you hear shortly :BiBiBi.." , it means the tub reach the minimum

5).Cushion air Pressure

Button	Description
	Turn on/off the air pressure function

5). Angle Adjustment


Button	Description
	Press and hold the button to raise the backrest, when you hear shortly :BiBiBi.." it means the tub reach the maximum
	Press and hold the button on the backrest to lie down, when you hear shortly :BiBiBi.." it means the tub reach the maximum

## Method of usage

### 7).Automatic Massage

Button	Description
<b>Upper Back</b>	Help blood circulation in the neck.
<b>Full Back</b>	Help body fatigue and relaxes muscles.
<b>Lower Back</b>	Promote body functions.

### 8).Automatic Massage

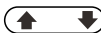Features	Button	Description
Kneading, Flapping, kneading and Flapping, Shiatsu, knock, Stop	<b>Massage Method</b>	Kneading: Speed.
		knocking: Speed, Width.
		Knocking and Flapping: Speed.
		Shiatsu: Speed, Width.
		Knocking: Speed, Width.
Speed	<b>Speed</b>	Three levels of speed can be adjusted.
Width	<b>Wide</b>	Three levels of width can be adjusted.
Medium and Narrow	<b>Middle</b>	In the manual mode knock, flapping and finger pressing modes, the machine hand can be adjusted in width, middle and narrow.
	<b>Narrow</b>	
Back Stretch	<b>Back Stretch</b>	Fixed position massage.
		Area massage.
		Full massage.
		Press and hold the button in manual mode with the machine hand going up. Press and hold the button in manual mode with the machine hand going down.

## Method of usage

### 9).Air pressure massage

Button	Description
<b>Air Mode</b>	Three airbag mode switch buttons.
<b>Air Intensity</b>	Three levels of strength can be adjusted.

### 10).Time out

Button	Description
<b>II</b>	Press to pause and run all massage functions. If pausing time exceeds the set time for 20 minutes during massage, all massage functions will be automatically turned off.

### 11). Time Setting

Button	Description
<b>Time</b>	Massage time setting.



### 12). Turn off the power, Finish the massage

- During the massage, turn off the power switch, the backrest frame is lifted, and the machine hand resets all massage functions to stop.

## 2.Installation instructions

### 1).Backrest Installation


- First install the backrest shaft into the slot of the frame.
- The backrest support and the backrest electric cylinder mounting holes are aligned; use 8\*55mm pins and 1.6\*35 quick release pins and 2 isolation sleeves for installation.

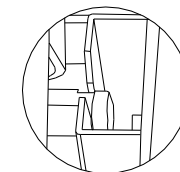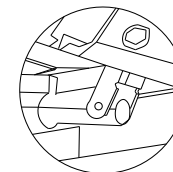

## Method of usage


### 2).Seat Frame Installation

- The male and female buckles of the frame assembly 8 are tightened with a tool hammer.
- Use two m5\*16 Phillips flat head screws to lock the frame assembly.

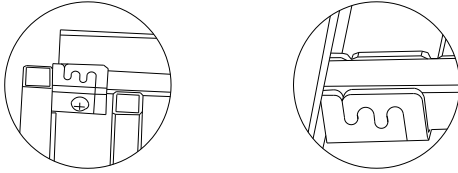


### 3).Armrest Installation

- The left and right armrests are mounted using four M6\*10mm Phillips pan head screws.
- Use 2 8\*30 hex socket head cap screws to lock the left and right armrests.

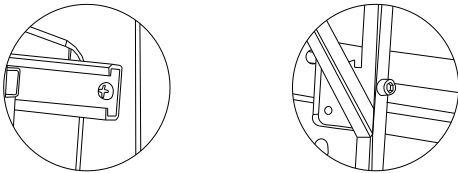

### 4).Cup Holder Instructions


- This is the state of the tea cup.
- After the cup holder is placed back to the back of the armrest, the cup holder can be put down.

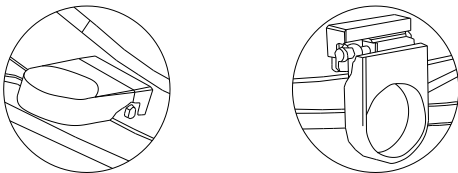

## Method of usage

### Caution


- (1). The correct method of operation: before operating the controller, please make sure that the backrest electronic cylinder is connected well with the pin that fixes the backrest.
- (2). When the backrest electric cylinder is not connected with the pin that fixes the backrest, please hold the electronic cylinder in case it touches the ground when operate the controller.
- (3). When debugging and installation, before operating the controller, please make sure that the backrest electric cylinder is connected well with the pin that fixes the backrest. Otherwise, after shutting down the switch, the front part of the electronic cylinder will hit the board under the seat frame to cause bad distortion of the seat frame, and even make the rail go out of the railway or damage the steel-ball railway.

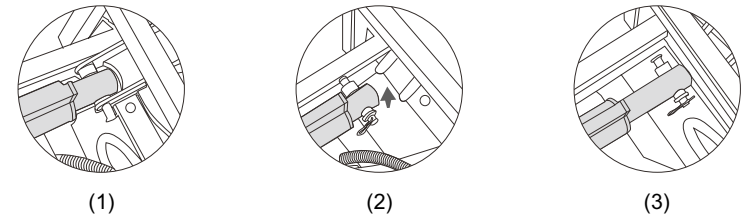

### 3.Operation sequence


#### SWITCH ON POWER

- (1).insert the plug into the socket outlet.
- (2).switch on the power button behind the armrest.



#### MASSAGE


- (1)Select relative massage according to the operation instructions of the control.

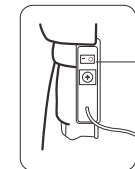

POWER

#### SWITCH OFF POWER

- (1).stop overall massage.
- (2).switch off the power button behind the armrest.
- (3).pull the plug out of the socket outlet.




## Method of usage

### 4. Attaching or detaching the pillow pad and back cushion


The pillow pad and back cushion (recommended) reduces the kneading intensity of your neck and shoulder, but you can decide to put it on or not according to your personal need. (1) Sticker connects the pillow pad and back cushion.


WARNING: IN CASE OF DANGER, DO NOT REMOVE THE CUSHION

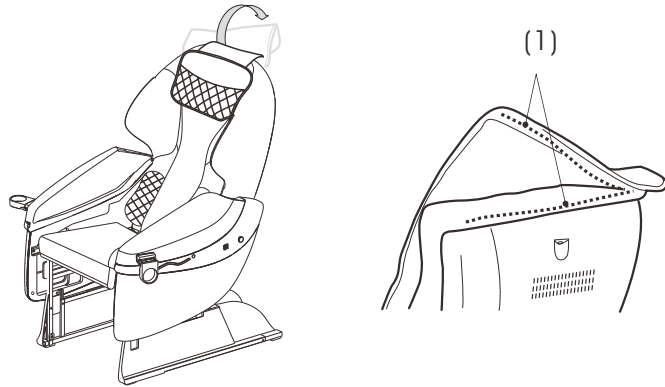

### 5. To Adjust The Back Simultaneously


Backrest adjustment

press and hold the  button on the controller, the backrest will recline backward slowly. Release the button, then the backrest will be stopped upright

press and hold the  button on the controller, the backrest will move slowly.

Loose the button, then the backrest will be stopped.


WARNING: DO NOT EXERT ANY PRESSURE OTHER THAN YOUR OWN BODY ON THE BACK WHILE IT IS RISING.

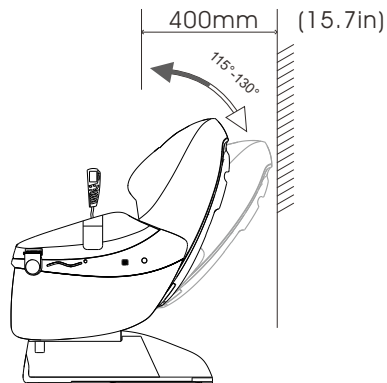

## Method of usage

### 6. To Adjust Seat Frame Separately

The flex function of seat frame could fix the different height of the people to adjust the massage place of the calf airbags, the maximum distance moving forward and backward is 400mm.

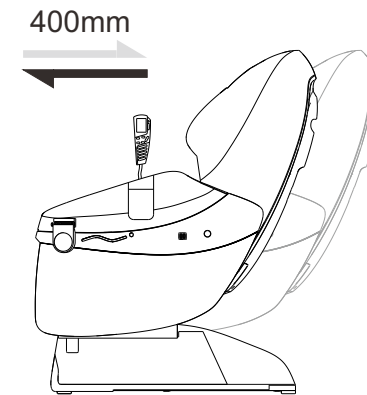

## Product specification

Model: GS 8200

Name: SPA Massage Chair

Power supply: 110-120V~ 50Hz/60Hz ☐

220-240V~ 60Hz ☐

Rated power: 90W

Safety structure: Class Ⅲ