
VERONA TRIPLE NAIL TABLE INSTALLATION


Step 1: Take the left draw out.

Turn the base of the cabinets upside down.

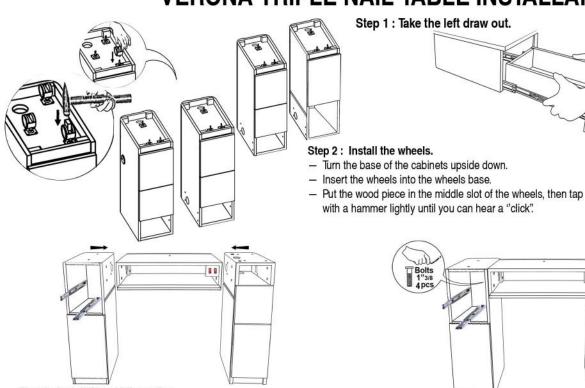

Step 3: Install the middle portion.

- Line up holes from left leg to the middle portion.
- Put left tabletop in the middle to make sure it fit with two side table body.

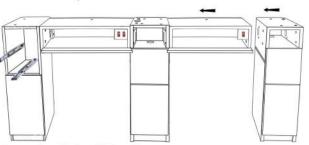

Step 4: Install the middle tabletop.

Repeat step 3 until all middle portions are bolted to the outside cabinets.



- Install the 4 bolts from inside the wall of the table to the 2 sides to the left tabletop




- Repeat step 3 until all middle portions are bolted to the outside cabinets.




Step 5: Install the right tabletop.

Repeat step 3 until all middle portions are bolted to the outside cabinets.

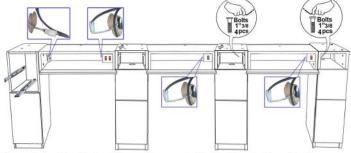


- Repeat step 3 until all middle portions are bolted to the outside cabinets.

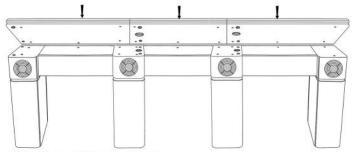

Step 6: Install the Granite on top.

- Place Granite piece on top of the nail table-lining up holes.

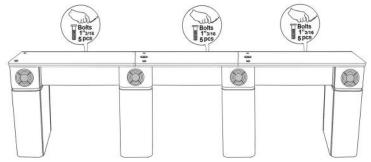

- Install the bolt from inside of the tabletop to the granite base with 5 pcs of (bolts 1: "3/6) for each granite top.