



BROSS

6116
INSTRUCTION MANUAL



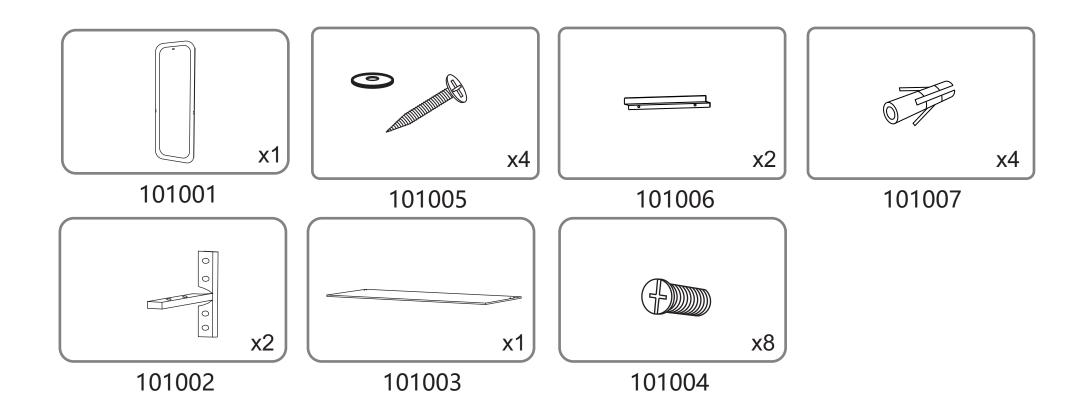

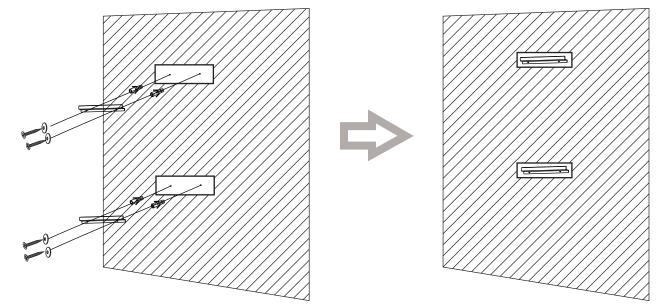

Secure the bracket onto the wall with provided expansion bolts, then secure the mirror onto the metal bracket. DIR's expansion bolts are meant for solid (cement or solid wood) walls, please use appropriate expansion bolts or wall anchors for your mounting needs.

