

Victoria 7062


INSTRUCTION MANUAL

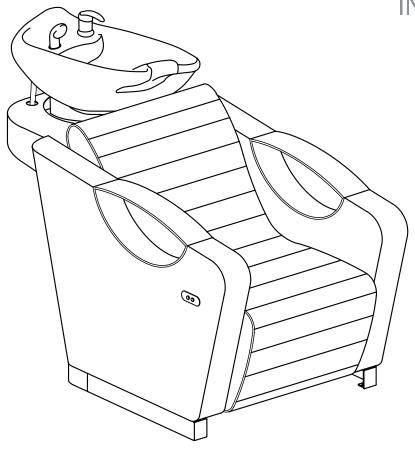

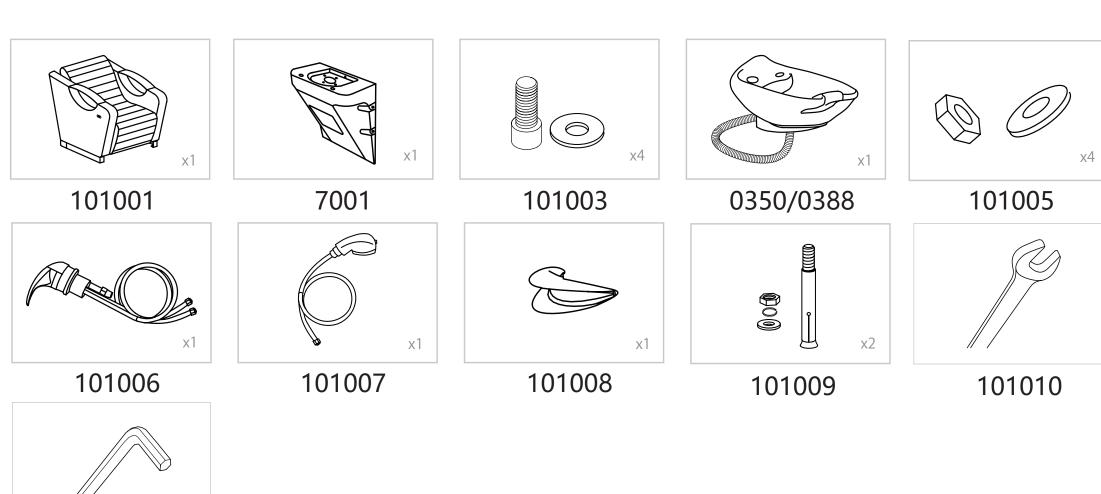


//		V	
// /	/ 1010	11	

Type	USA size	UK size
Water supply lines Adapter	5/8"	1/2"
Drain Hose Connector	1 1/4"	3.2cm

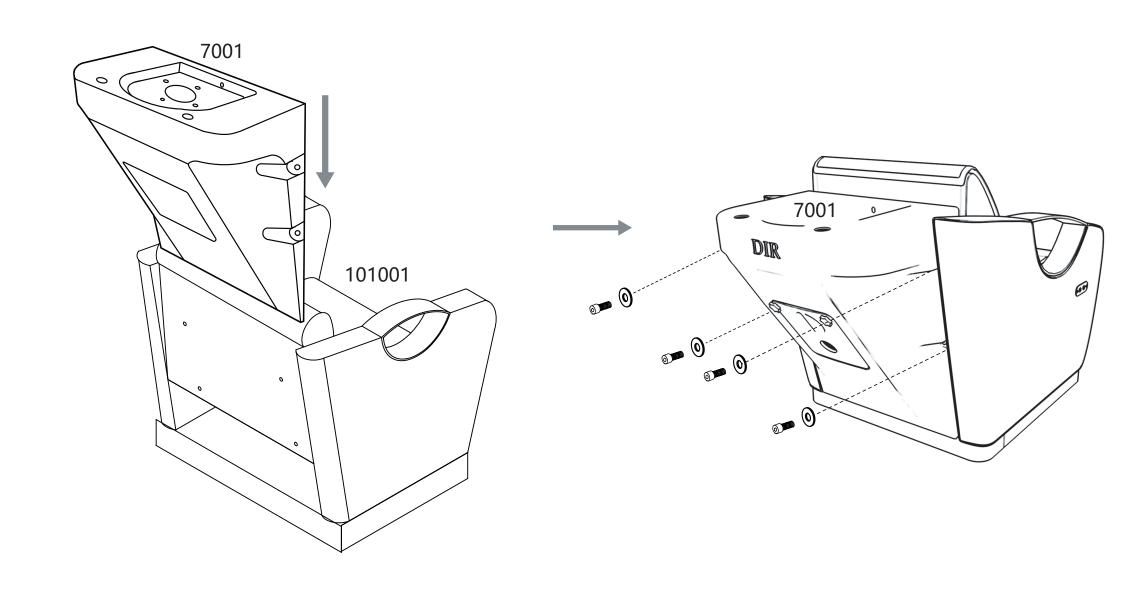



Assembly Instruction2

0350

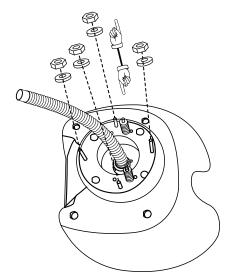




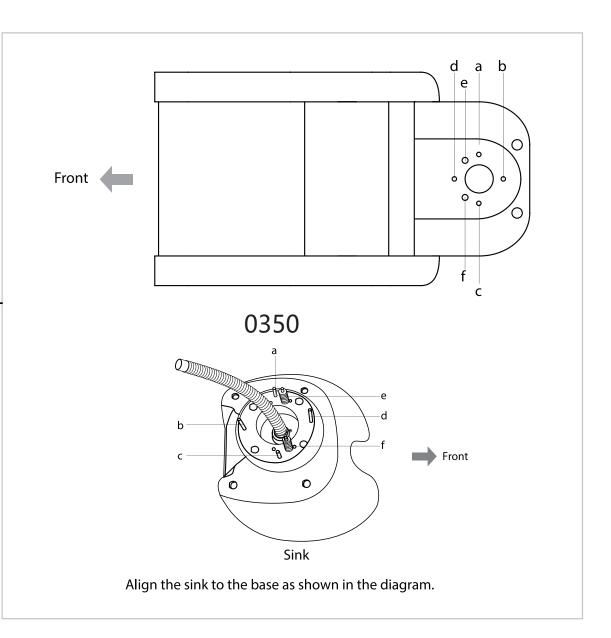

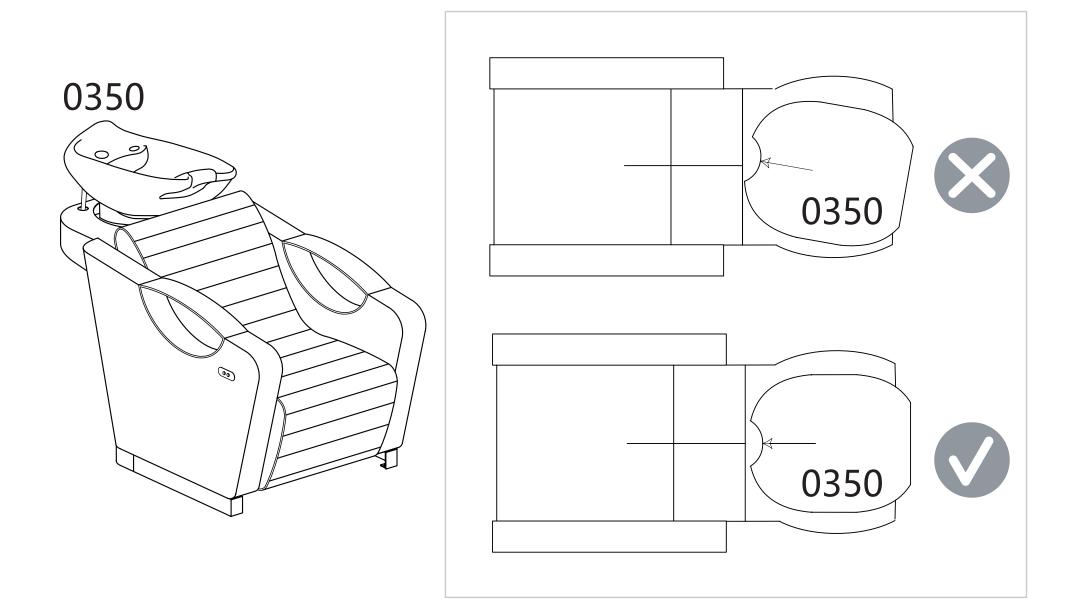


0350

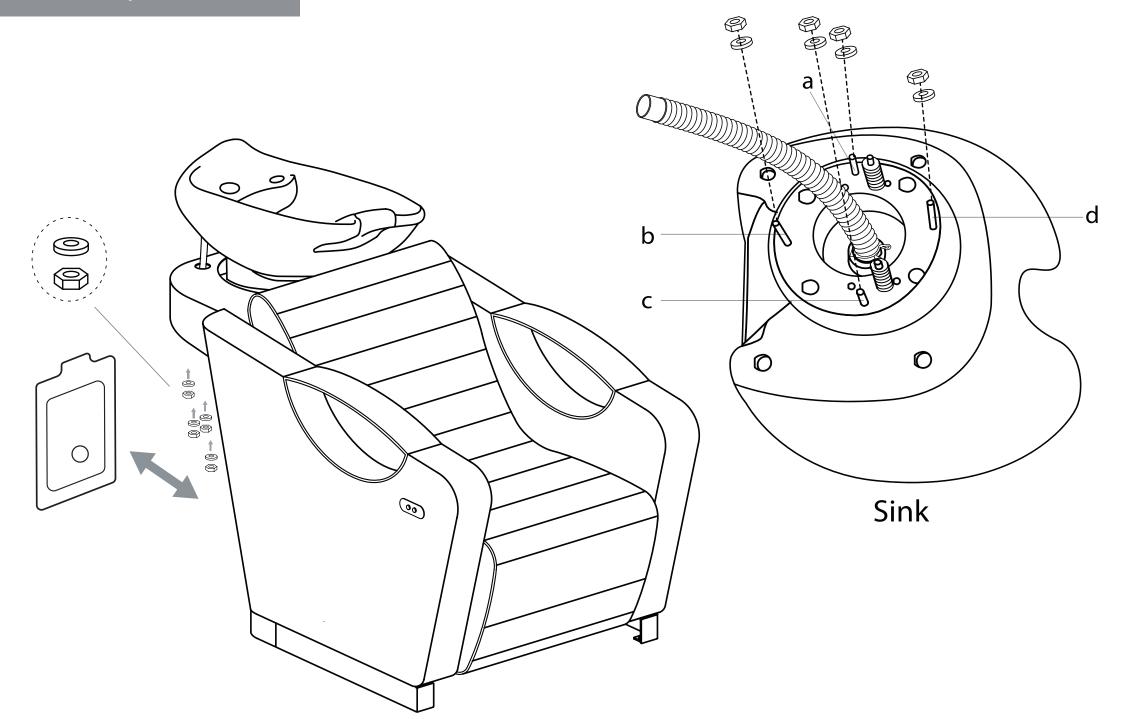



Faucet Set up

None Vacuum Breaker Sink 0350



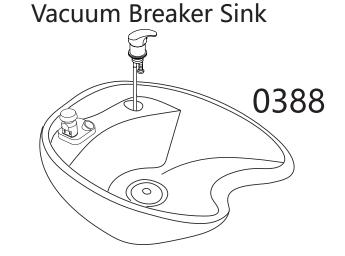

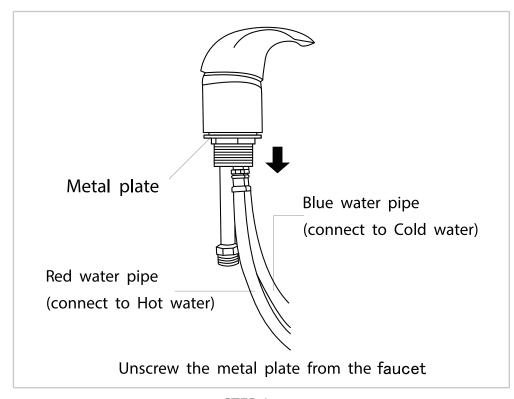


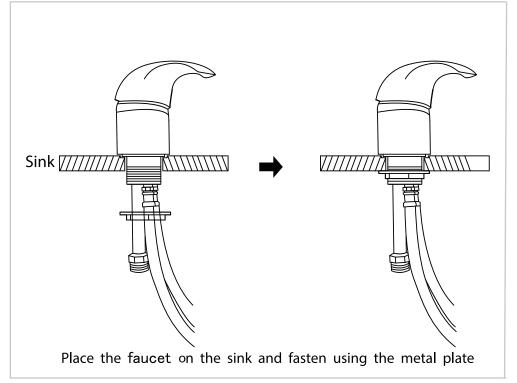


STEP 1


STEP 2

Sprayer Set Up None Vacuum Breaker Sink

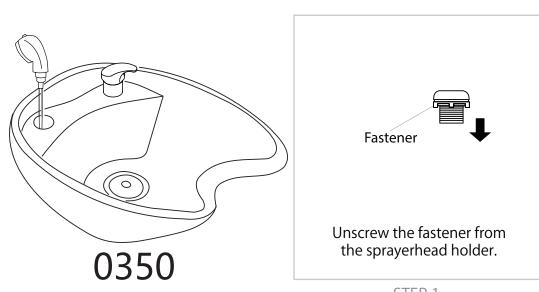


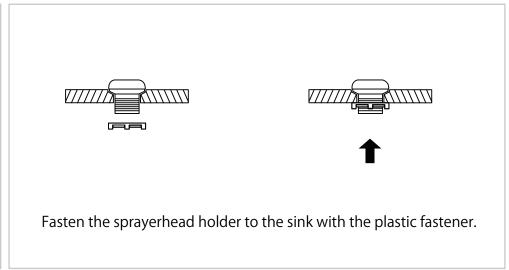

STEP 2

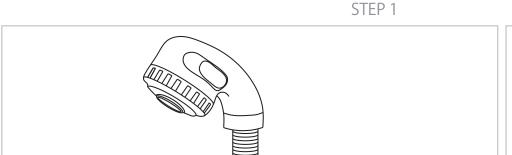


Unscrew the sprayerhead from the sprayer hose.

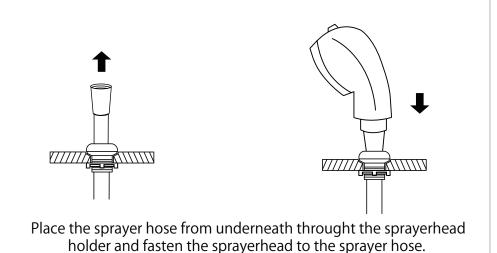


STEP 3 STEP 4


Sprayer Set Up Vacuum Breaker Sink

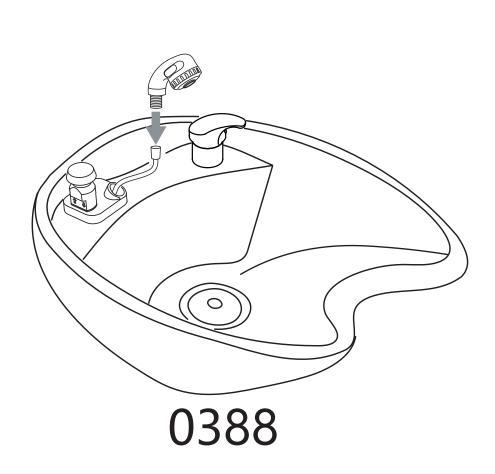




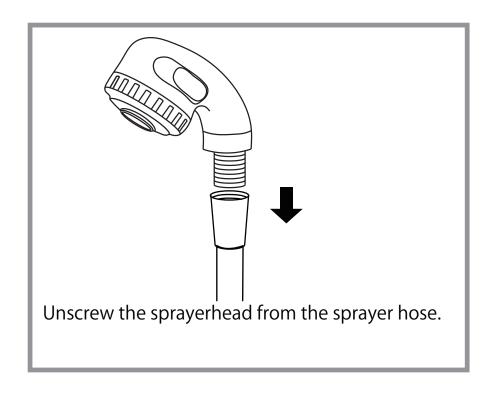

None Vacuum Breaker Sink

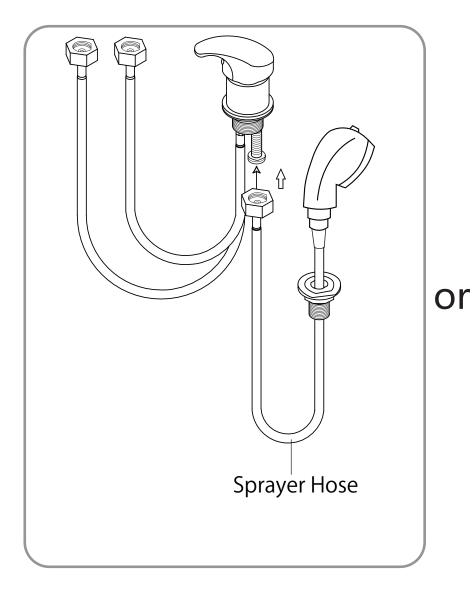


Vacuum Breaker Sink

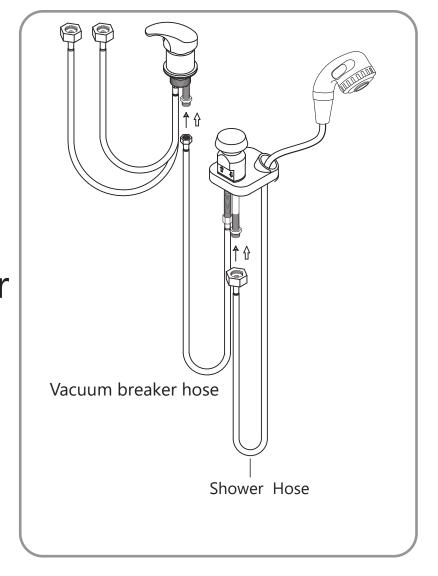


Plumbing setup:

*removable back panel to route both water supply lines and make all connections.

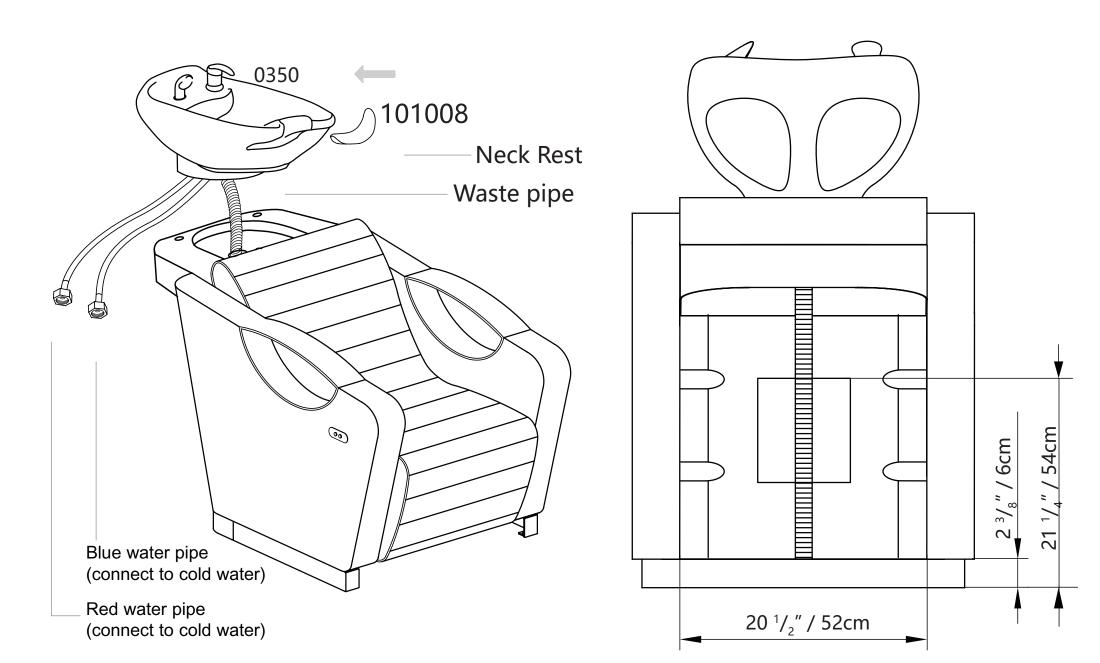


Floor plumbing setup: Circle opening on removable back for drain pipe exit

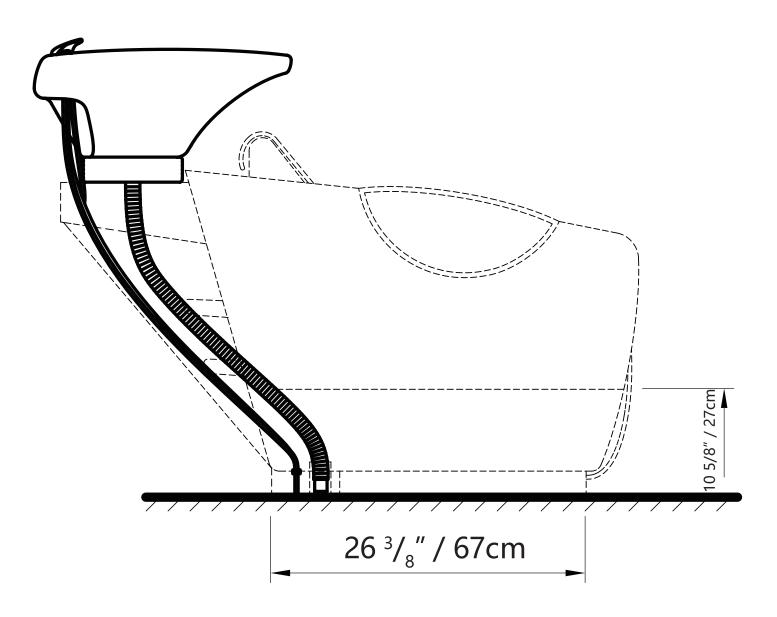

Wall plumbing setup:


All connection pipes are enclose within the base unit.


Water supply lines are routed into the unit via circle opening on the back of the base.

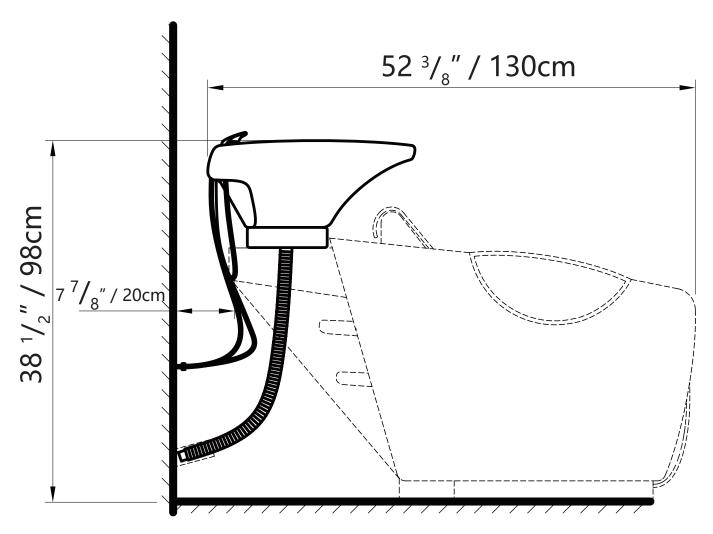

Please leave minimum 7 7/8" / 20cm of space measuring from finished wall to the back of the sink to allow sinks tilting position.

Secure the backwash on the floor by the provided floor anchors.

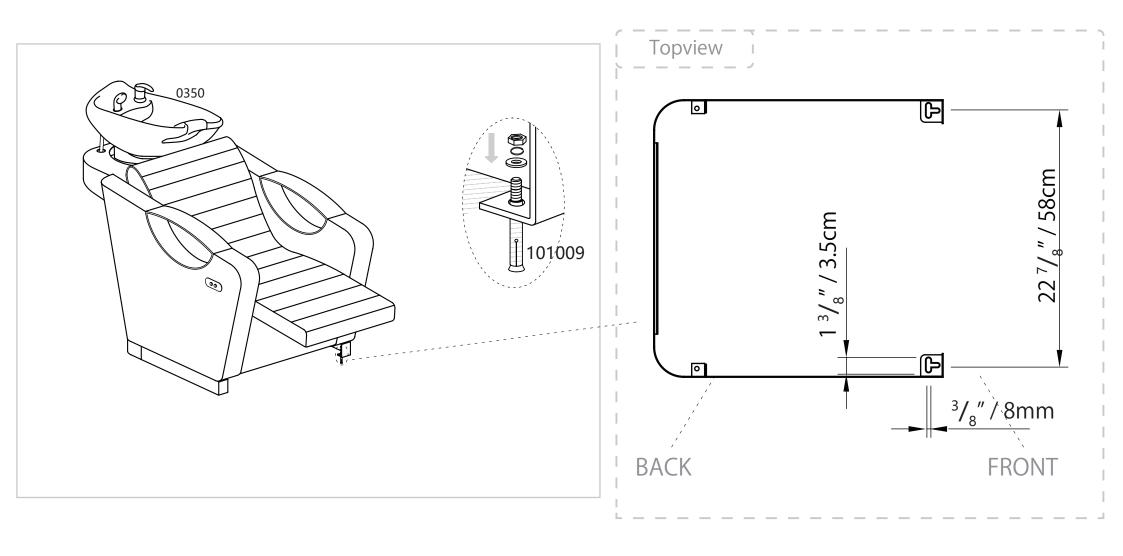

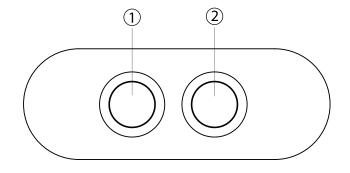

- 1 Press the button to raise the legrest of the Back Wash.
- 2 Press the button to lower the legrest of the Back Wash.