

# OSAKI SPA INSTRUCTION





# About Us



Osaki Pedicure is dedicated to providing quality products to strengthen nail salons across the United States. Osaki Pedicure is a strong and trusted division of the Osaki family - America's largest and most trusted massage chair distributor. Osaki's Pedicure division was established nearly half a decade ago and, through rigorous research & development, has strived to source salon-quality products at affordable prices.

Over the years we have negotiated with quality manufacturers to provide the best products at prices well below national retail averages. Regardless of your situation we will work hand-in-hand with you in order to provide the easy, reliable, and transparent service you deserve.





# *PEDICURE CHAIR*

# INSTRUCTION

## STEP ONE

01

BEGIN WITH THE CHAIR TOP. PUT THE CHAIR TOP ON THE BASE. RAISE THE BACKREST UNTIL A "CLICK" SOUND IS HEARD. MAKE SURE THE LEVER IS LOCKED BEFORE OPERATING.


**CAREFUL!** AT THIS POINT, THE CHAIR TOP AND THE BASE ARE NOT CONNECTED, THE CHAIR TOP CAN LEAN BACKWARD. IT REQUIRES AT LEAST 2 PERSONS TO DO THIS JOB.



PEDICURE CHAIR TOP LAYS FLAT BEFORE LIFTING UP.



LIFT UP THE CHAIR TOP AND MAKE SURE THE LEVER IS LOCKED.

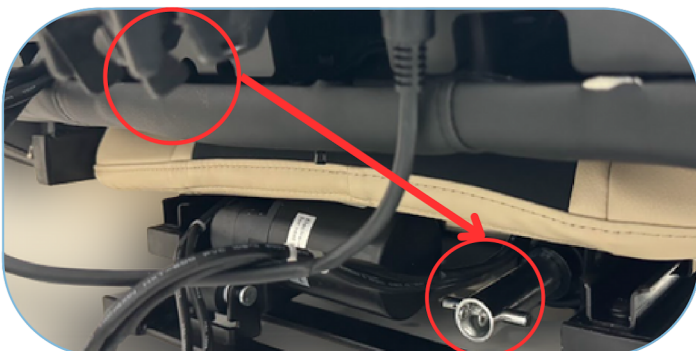

LIFT UP THE CHAIR TOP AND MAKE SURE THE LEVER IS LOCKED.

# *PEDICURE CHAIR*

# INSTRUCTION


02

## STEP TWO

THERE ARE 4 BOLTS AND NUTS IN THE PACKAGE. USE THEM TO CONNECT THE CHAIR TOP AND THE BASE SECURELY.



4 HOLES TO CONNECT THE CHAIR TOP AND THE BASE.

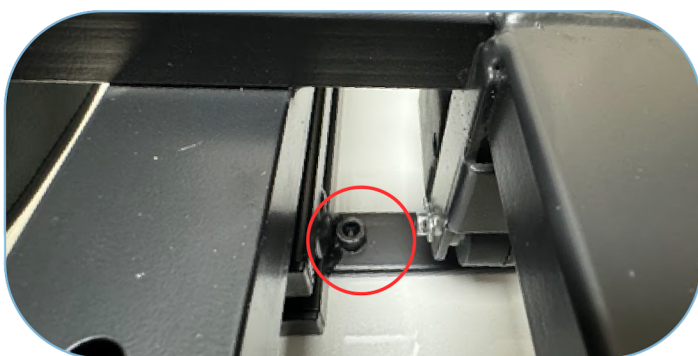

A CLOSE-UP AT THE BOLT.



PLACE THE SEAT COVER ON BEFORE PUTTING ON THE LEATHER CUSHION.




# *PEDICURE CHAIR*

## INSTRUCTION


03

### STEP THREE

AFTER PUTTING THE CUSHION ON, CONNECT THE CUSHION WIRE TO THE BACKREST.

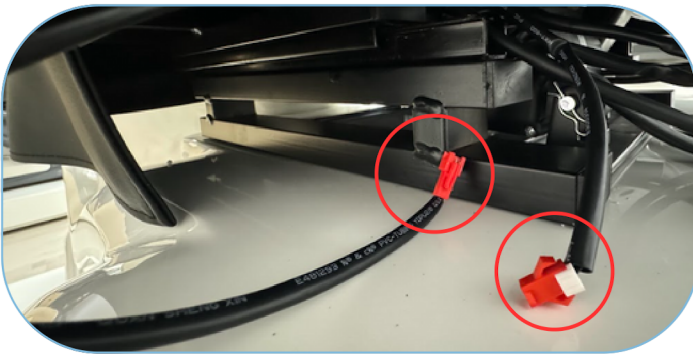

BEFORE CONNECTING.

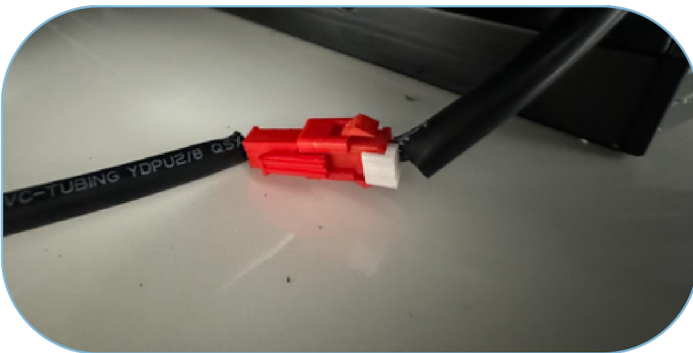

AFTER CONNECTING.



CONNECT THE ARMREST WIRE TO THE BACKREST.


# *PEDICURE CHAIR*

# INSTRUCTION

04

## STEP FOUR

FINISHING BY PUTTING ON BACKREST PAD, WIRE COVERS, AND TRAYS.

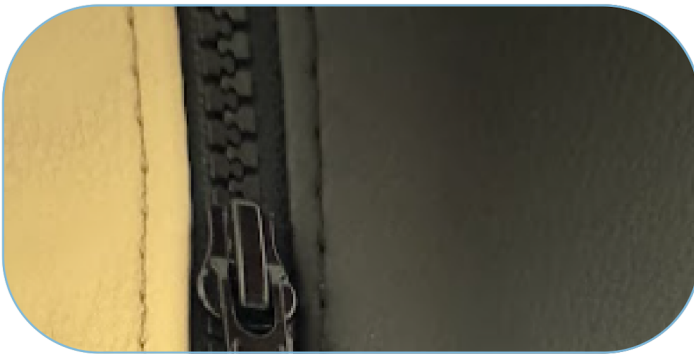

DEPENDS ON THE MODEL, IT  
COULD BE ZIPPER OR VELCRO



USE WIRE COVERS TO HIDE METAL  
FRAME AND WIRES



INSTALL ARMREST TRAYS





## CONTACT US

☎ 214-390-5252 (Office)

☎ 469-777-1866 (Ms. Duy)

✉ duy.l@osakititan.com

☎ 682-227-0161 (Mr. Harry)

✉ ho.v@osakititan.com

🏠 1001 W Crosby Rd, Carrollton, Texas 75006

🎯 [www.osakispa.com](http://www.osakispa.com)