

# Element/Impact Pedicure Spa Chair User Manual

**SpaSalon.us**  
wholesale



# Element/Impact Pedicure Chair

**IT IS IMPORTANT THAT YOU READ AND FOLLOW THESE INSTRUCTIONS.**

## Introduction

Thank you for purchasing Belava Element/Impact .

The Element/Impact pedicure chair is designed for professional use in nail salons, hair salons, spas, podiatrist offices, medical spas or anywhere pedicure, manicure and facial services are offered.

The Element/Impact is a state-of-the-art product that embraces the use of disposable liners without having you to worry about sanitizing the footbath for each client. Simply dump the used water, toss the used disposable liner then insert a new liner and be ready for your next customer in no time. This chair is also designed to offer a comfortable setting for manicure and facial/wax services.

Please take time to thoroughly read this entire manual before use. If you have any problems or have questions regarding your pedicure chair, please contact Belava's Technical Support Department at **1-888-708-7131** Monday through Friday 9:00AM to 5:00PM PST. After hours calls are recorded and attended to the next business day.

## Important requirements

Your pedicure chair cannot operate efficiently or safely unless it is provided with adequate electrical power. The heater/massager for pedicure and the heater/vibrator for the chair's cushion confirm to UL STD 1647.

## Precautions


- Excessive water temperature is dangerous and should be checked before use.
- Maximum operating water temperature should not exceed 105° F
- Always enter and exit the pedicure chair slowly and carefully.
- This pedicure chair & nail tech stool each have a weight capacity of 300 pounds.
- With proper care, you can enjoy your Element/Impact pedicure chair for many years come.

## Health Risk Warning

Nail technicians should advise clients to consult their physician before using the pedicure chair if there is any evidence of health issues. **If the client experiences any pain or discomfort, immediately discontinue the use of the pedicure chair.**

# Element/Impact Pedicure Chair

## — Features —

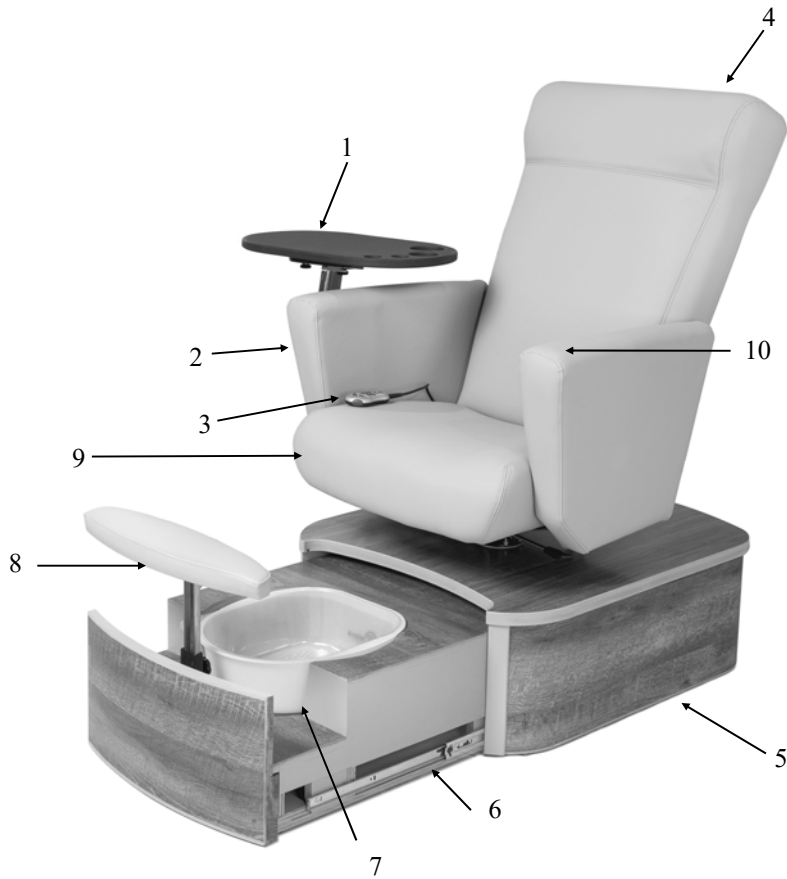

1. Pivoting Manicure Table; rotates from the front seat cushion
2. Arm Rests
3. Relaxor Remote for Heat & Vibration
4. Back Seat Cushion
5. Laminated Wood Chair Base
6. Built-in drawer
7. Foot Massager, equipped with heat & vibration
8. Adjustable Foot Rest
9. Recliner Mechanism

# Element/Impact Pedicure Chair

## — Features —




Recliner mechanism on the arm rest



Cushion fully reclines




Belava drawer with built-in foot massager  
slides in and out

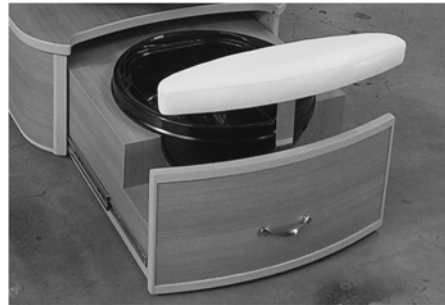

Adjustable foot rest and extendable  
drawer



Manicure table can be positioned on either  
side of the chair and pivots 360°

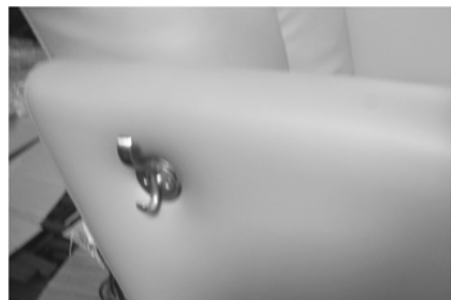

Purse hook for clines purse

# Element/Impact Pedicure Chair

## — Specifications —



- Height of chair: 51"
- Width of chair: 30"
- Length of chair with closed drawer: 33.5"
- Arm rest to arm rest: 33"
- Length of seat: 18"
- Height of seat to floor: 23 1/2 "
- Chair weight: 105 lbs.
- Weight Capacity: 300 lbs.

**Power Requirements:** 120V DC Adaptor, 1.5 Amps, 50-60 HZ (USA).

**Note:** Due to continuous improvements, all specifications are subject to change without notice. All dimensions and weights are approximate.

# Element/Impact Pedicure Chair

## — Specifications —



- Length of chair with open drawer: 50"
- Footrest Adjustable Height: 13.5" – 20 ½"
- Backseat height: 30.5"
- Chair Seat across: 22"
- Height from bottom of drawer to top of footrest: 19 ½"

# Element/Impact Pedicure Chair

## — Specifications —




- Chair length fully reclined with open drawer: 77"
- Height of chair fully reclined: 33"
- Footrest width: 20 1/2 "
- Manicure table measures: 1"x11 1/2"x22 1/2" (DxWxL)
- Table swivles 360 degrees
- Power Requirements: 120V DC Adaptor, 1.5 Amps, 50-60 HZ (USA)
- Drawer Face Height: 13 1/2"
- Side of Drawer Height: 10"

# Element/Impact Pedicure Chair

## — Operating & Maintenance —

**Care & Maintenance** - With proper care, your Element/Impact Chair will provide years of superior performance and satisfaction. A periodic (annual minimum) inspection of chair components and fasteners should be made to ensure that the chair is structurally intact and functioning properly. Damaged and broken parts should be replaced and loose fasteners tightened.

 **WARNING** - Failure to properly inspect and service this chair according to the maintenance instructions may lead to personal injury or product damage. Inspect chair annually for damaged or broken parts and tighten any loose fasteners. For help or additional information visit [www.belava.com](http://www.belava.com) or call 818-708-7131.

**Maintain Base and Platform Dry** - With a dry towel make sure to wipe off any spilled water from all surfaces

**Cleaning Cushion** - The chair is upholstered in high quality upholstery vinyl, which guarantees you long useful life when properly taken care of. While this vinyl is sturdy, it should be prevented from contact with sharp objects, which may leave marks or holes. Use regular cleaning solution to clean the surface; you can use auto upholstery buffing solution to restore the shine of the vinyl. **AVOID:** Contact with alcohol and acetone in

**Cleaning Manicure Table** - To clean we recommend using a soft cloth, with any household cleaning or disinfecting solutions. The top of the manicure table is powder coated and it is acetone resistance.

**Swivel Chair** - In order to safely get into or out of the Element/Impact Chair, simply swivel chair 90° for easy access. Once customer is seated you can swivel chair back to position.

**Adjustable Foot Rest & Drawer** - To adjust massager, open the drawer from the handle while slightly lifting the drawer to extend the massager to appropriate leg comfort.

To adjust footrest, simply turn the knob clockwise, after foot rest is loosened you can adjust the height by sliding the foot rest up or down motion to desired height. Once you have the correct height for the footrest, simply turn the knob counter clockwise to lock the foot rest in position.

**Recline Chair** - The handle located on the left top side of the arm rest when seated - simply lift the lever and adjust chair to needed position. Then release the lever to keep the position of the chair locked.

**Operating/Maintain Foot Massager** - Please read enclosed separate operating manual.

**Operating Seat Massage & Heat Remote for Chair** - Please read page 7

**Operating Manicure Table** - Manicure table can pivot and be swivel from the front of the chair for comfortable position. It can be also used as a esthetician's working table.

**CAUTION:** Rotating manicure table from of the chair when drawer is closed may damage the upholstery on the foot rest. Please exercise care.



# Element/Impact Pedicure Chair

## — Operating & Maintenance —

### **POWER**

Activates Massage System

- Turn On: Press PWR.
- Turn Off: Press PWR again.

#### **15 and 30 minute Timers:**

Green light = 15 minute Timer.

Hold down Power:

Amber light = 30 minute Timer.

- Unit may also be turned on by pressing either ZONE key.
- To restart after Timer shuts off:
- Press PWR or either ZONE key.

### **HEAT**

Activates Heat.

- Press LO (Amber light) to turn Low Heat on.
- Press HI (Red light) to turn High Heat on.

Works with massage or independently.  
30 minute Timer

To continue after Timer shuts off, press LO or HI button again.

### **ZONES**

(Green light indicates active Zone)

Activates Massage System

- Zone 1 once to activate massage. Press again to deactivate.
- Zone 2 once to activate massage. Press again to deactivate.

The location of each zone varies with individual chair styles.

### **INTENSITY**

Controls massage motors INTENSITY during all modes. Press (+) to increase and (-) to decrease Intensity.



### **MESSAGE MODES**

(Green light indicates active Mode)

#### **SELECT -**

Lets you choose zones for steady massage.

- Press SELECT.
- Press either or both Zones to activate.
- Press either or both Zones to cancel.

#### **PULSE -**

Massage turns On and Off to provide a pulsing action.

- Press PULSE.
- Press either or both Zones to activate.
- Press either or both Zones to cancel.

#### **WAVE -**

Massage moves up and down in a wave-like action.

- Press WAVE.
- Press both Zones to activate.
- Press any other MODE to cancel.

### **SPEED**

Controls pulsing frequency of massage motors in PULSE mode and controls the velocity as it cycles through in WAVE.

Press (+) to increase and (-) to decrease speed.

**NOTE:** Constant wand lights indicates that there is active power in the wand and will dim down after 10 seconds of non-use.

**SAVE THESE INSTRUCTIONS!**