

CLÉO - SE

WHIRLPOOL PEDICURE SPA

User's Manual

Please read user's Manual thoroughly
before using pedicure spa



SpaSalon.us
wholesale



Thank you for choosing **CLÉO** series , This finest Whirlpool Pedicure Spa has been develop by UPS (United Pedicure Spa) a subsidiary of J&A USA Inc., to bring quality and exquisitely balanced design yet afford-ability and dependability when properly use. Please read this entire manual thoroughly before installation and use

PLEASE TAKE TIME TO READ THIS MANUAL THOROUGHLY BEFORE USE. If you have any questions or concerning with our pedicure spa, Please contact our customer service and technical support at 631-243-5300 Monday through Friday 9AM – 5PM or email us at www.info@Toepia.com

Important requirements

The MFG requires that you contact your local, licensed plumber and licensed electrician to install your new spa. Installation **MUST** be in compliance with all local and state building codes. Your pedicure spa can not operate efficiently or safely unless it is provided with adequate electrical power, sufficient water pressure, proper water temperature, and required drainage capabilities. Contact your local building inspector for information and local code compliance procedure that need to be followed when having your new pedicure spa installed. Subsequent inspections and approvals that may be required are the responsibility of the purchaser.

Shipment Inspection

Examine the components immediately upon arrival to make sure no damages to the SHIPPING CARTON and/or pedicure spa base and chair during the shipment. It is very important that you notify the driver directly and notation should be on the face of the freight bill or bill of lading of any damage. Failure to note damage on the bill of lading may prevent any claims you may have against the carrier or J&A USA INC.

If concealed or damage is found, you **MUST** notify the carrier at once and request an inspection. **DO NOT DISCARD THE SHIPPING CARTON** If a receiver sign the carrier clean receipt of goods that have been damaged in transit .Do so at your own risk and expense.

Precaution

- Do not stand in the basin (Glass bowl or Resin bowl)of the spa.
- Excessive water temperature is dangerous and should be checked before use. Maximum water Temperature should not exceed 102-104 Degrees F, (39~40 degrees C)
Recommend Hot water temperature at 98 ~ 100 degrees F (37~38 Degree C) for Children, the elderly and handicapped person
Are generally more at risk because they generally have reduced ability to react.
- Always enter and exit the spa slowly and carefully.
- Never bring or operate any electrical device near pedicure spa.

Health Warning

Individuals whose feet or legs are inflamed or have open wounds should not be allowed to use the pedicure spa at any time. The technician should advise clients to consult their physician before using the spa if there is any sign of fungal infection, swelling, fracture, or persistent pain. In some cases diabetics may experience improved circulation in their feet, but should first consult their physician prior to receiving a pedicure.

If the client experiences any pain or discomfort, discontinue the use of the pedicure spa immediately.

Important Considerations for Installation

CLÉO - SE

Electrical Service

110V, 60Hz, 15Amp GFCI protected grounded circuit MUST be used to supply power each individual pedicure spa. And the main circuit breaker MUST be at 25Amp. For maximum of two units per each electrical outlet.

Water Supply

All plumbing connections must conform to local codes.

Water supply (Water heater) to the spa should be provided with adequate water pressure and water temperature. Refers to the water heater manufacturer's recommendations to set temperature.

Water pressure

To fill the basin correctly up to level, Normal water pressure of 30 to 80 P.S.I is required.

Water temperature

Excessive water temperature is dangerous and should be checked before use. Maximum water Temperature should not exceed 102-104 Degrees F, (39~40 degrees C)

Recommend Hot water temperature at 98 ~ 100 degrees F (37~38 Degree C) for Children, the elderly and handicapped person are generally more at risk because they generally have reduced ability to react.

Adjust your hot water accordingly. For hot and cold water supply fittings and drain fittings location, see below diagram .Carefully connect the water supply line to the appropriate fittings located on the rear of the pedicure spa.

Pressure / Temperature

Maximum Pressure: 150 psi (10 bars)

Minimum Pressure: 10 psi (69kPa)

Working Temperature: 33F to 140F constant; intermittent to 180f
(0.6C to 60C sustained; intermittent to 82.2C)

Recommended Flow: 1.5gpm

UL LISTED / CE CERTIFIED

Compliance with following Code (s): Uniform Plumbing Code, National Plumbing Code of Canada and international Plumbing Code. Also, Compliance with following Standard (s): ASME A112.18.3M / A112.18.1M, CSA B125, NSF / ANSI 61

ANSI - American National Institute, ASME - American Society of Mechanical Engineers, CSA - Canadian Standard Association IAPMO - International Association of Plumbing and Mechanical Officials, UL - Underwriters Laboratory

All J&A USA products has been compliance with requirements for Whirlpool bath appliances contained in ASME / ANSI A122.19.7M-1995, CSA C22.2 No. 68-69

**** BackFlow Protection****

Due to Town and / or State requirement/s are varies in building code, if the Town and / or State requires Vaccum Breaker, As the Plumber MUST provide Vaccum Breaker / BackFlow Protection according to building code requirement.


Drain Facilities

The pedicure spa Drain must meet local plumbing codes. **Check valve for Drain (not Provided) Must be installed by a licensed plumber.** Also Pedicure spa must be securely fasten to the floor.


Installation Summary


The installation must comply with local, state, and federal building, plumbing and electrical codes, where applicable. A licensed plumber and/or electrician should complete the plumbing electrical connection of the pedicure spa.

Note: Failure to comply with federal, state, or local codes and ordinances will result in warranty being nullified and void.

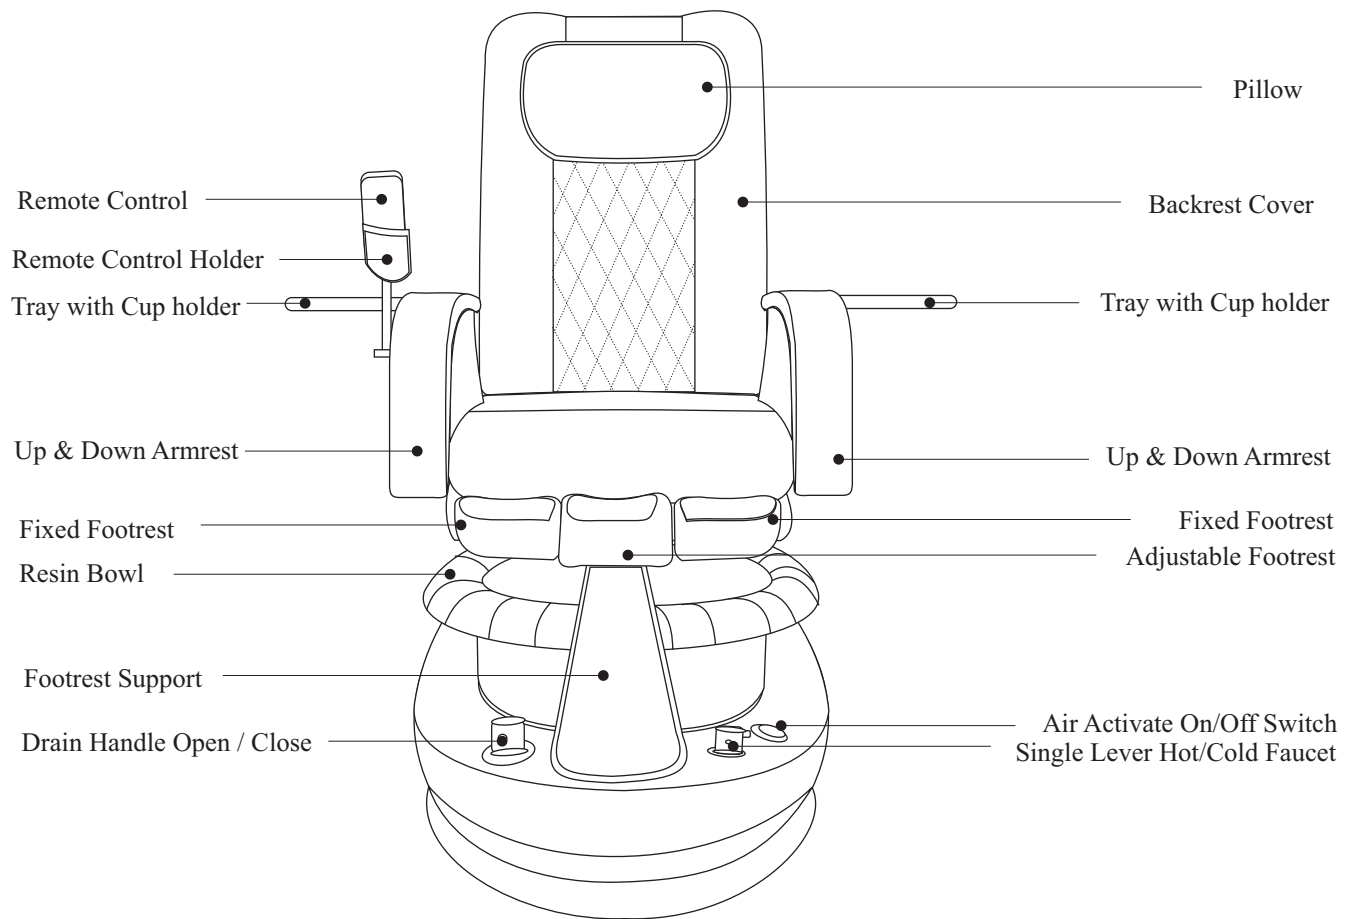

Basin

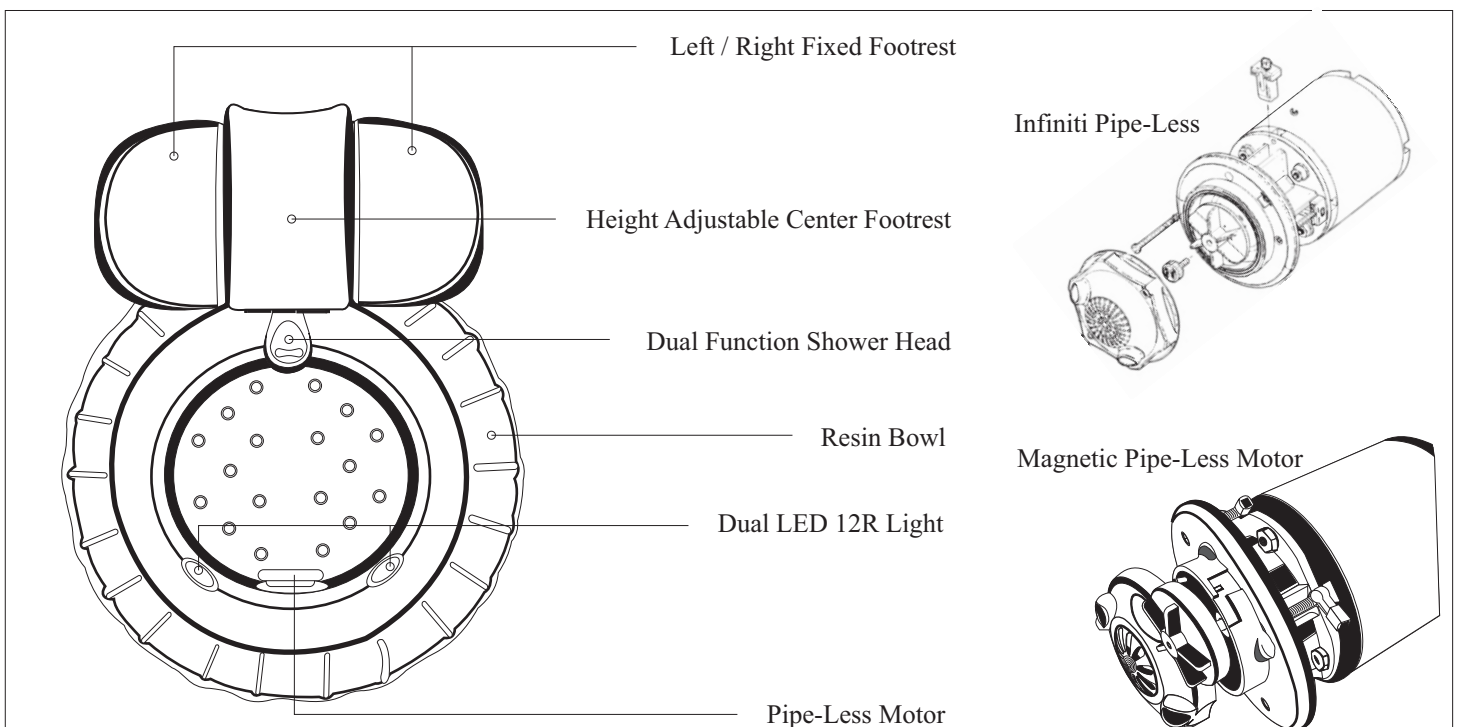


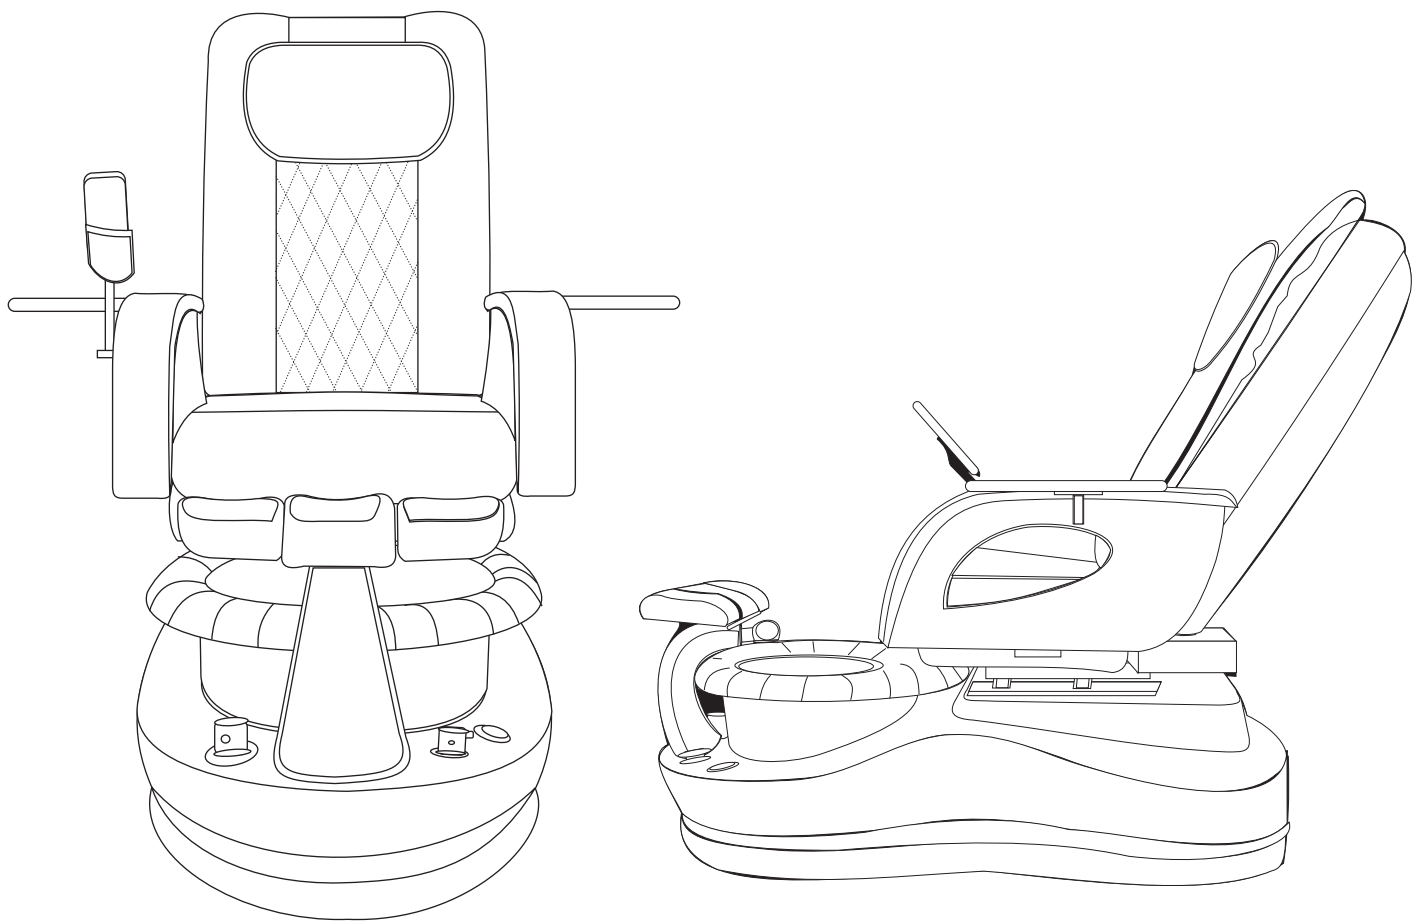


Specification

Dimension & Weight (Shipping)	Pedicure Spa & Massage Chair Stool	60L x 30W x 55H 20.25L x 8.5H x 20W	298 lbs 19 lbs
Capacity of Tub		4.0 U.S Gallon	
Switch		On / Off Air Activated Switch	
Power Source	Dedicated 15Amp Wall Outlet Require Pipe - less whirlpool motor Discharge Pump (Optional) Massage System	120Vac, 0.4 Amp. 60Hz, 120Vac, 60Hz. 120Vac, 60Hz. 0.83Amp.	
Plumbing Source	Hot Water Cold Water Drain	0.5 inches (Fitting Provided) 0.5 inches (Fitting Provided) 1.5 inches (See Plumbing Instruction)	
Warranty	Unit Optional Item	Two Year (See detailed limited Warranty) 120 Days	


Due to continuous improvements on all our products, specification, characteristics, packing, color, designs are subject to change without notice.

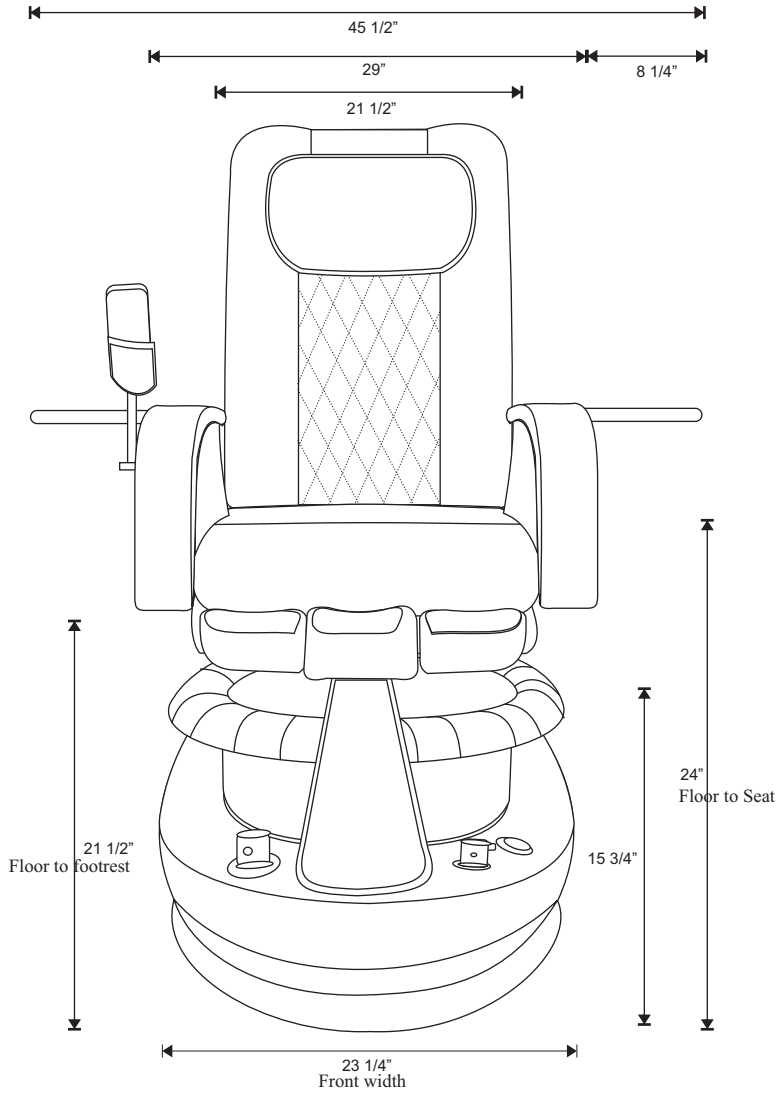

Rear View

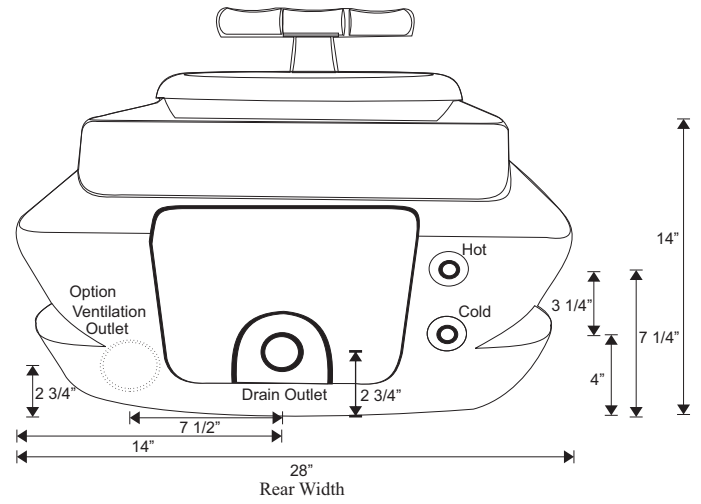

Side View

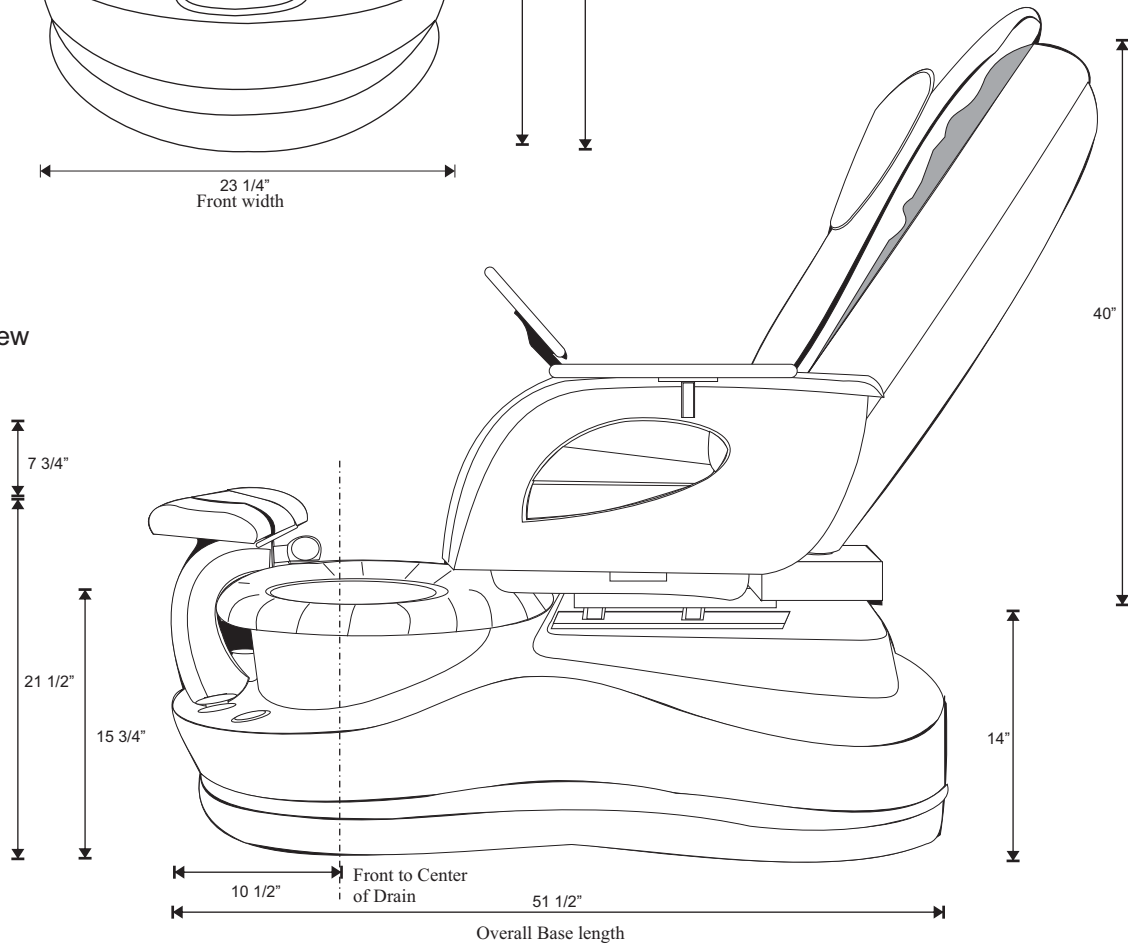


CLÉO -SE


Drain

CLÉO -SE

Rearview

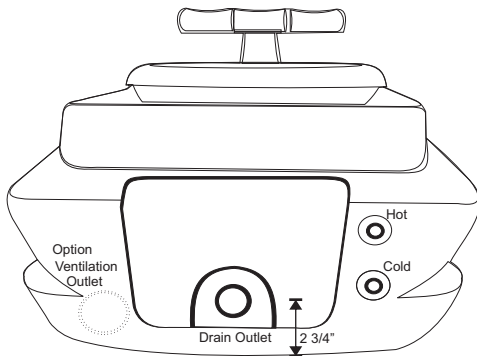


Basement
Floor Drain

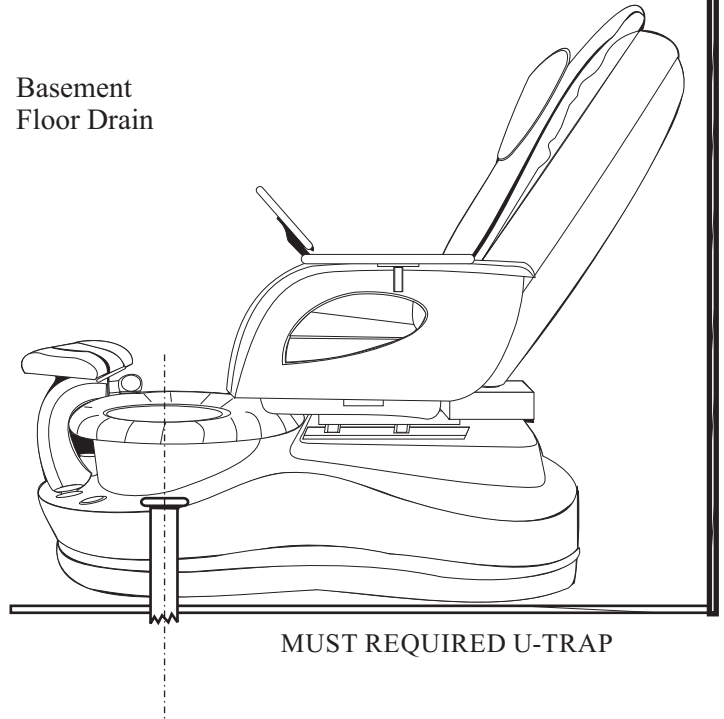

Power Drain (An Optional at Request)
(See detailed power drain pump)

Wall Drain

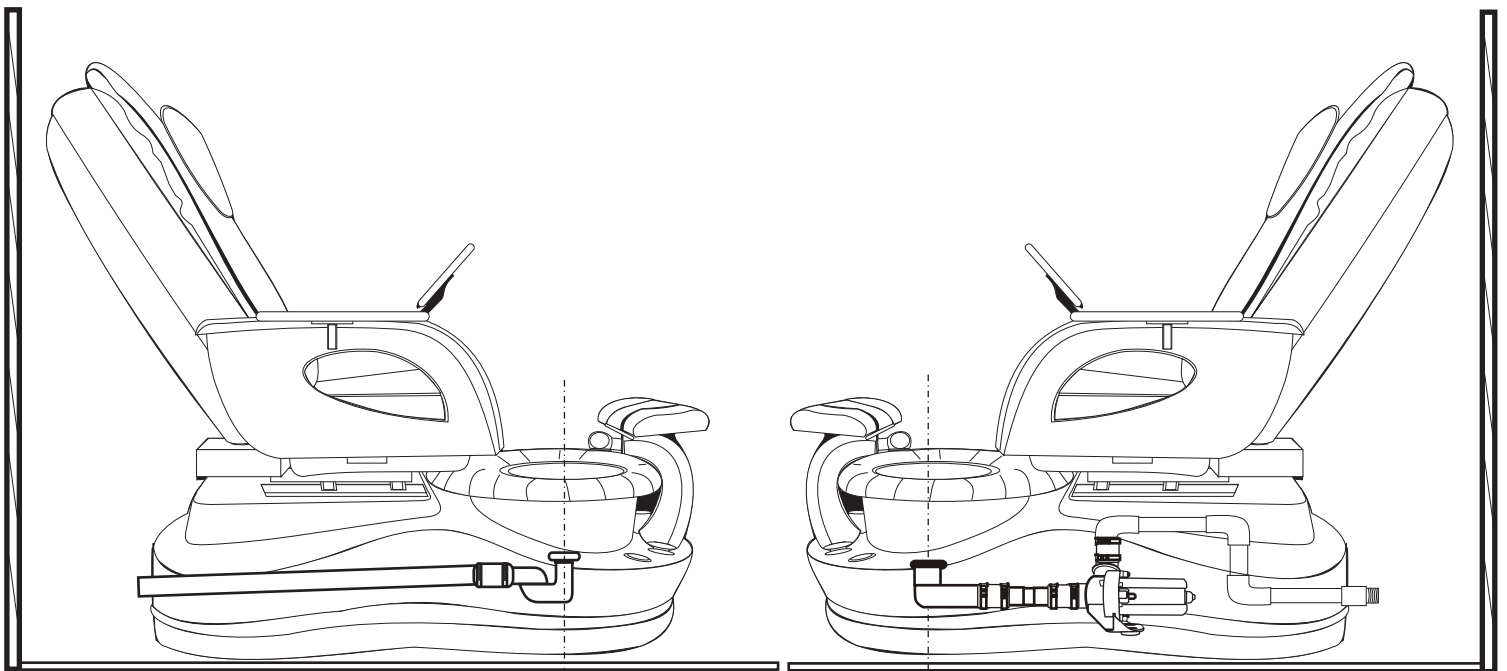

Installation Specifications Summary

CLÉO - SE

Warning: Failure to comply with federal, state or local codes and ordinances will result in warranty being null and void.

As stated, the pedicure spa installation must comply with all plumbing and electrical codes. A licensed plumber and licensed electrician must complete the applicable connections of the pedicure spa.


Location and support

Select a level location. The floor structure beneath the pedicure spa must be capable of supporting the occupied pedicure spa.

For the seat back to fully recline, the pedicure spa base must be mounted as follow from the wall as shown below:

*** When chair slide all the way back – would require 18 inches from the wall***

Above measurement are based on with back cushion is all the way reclined

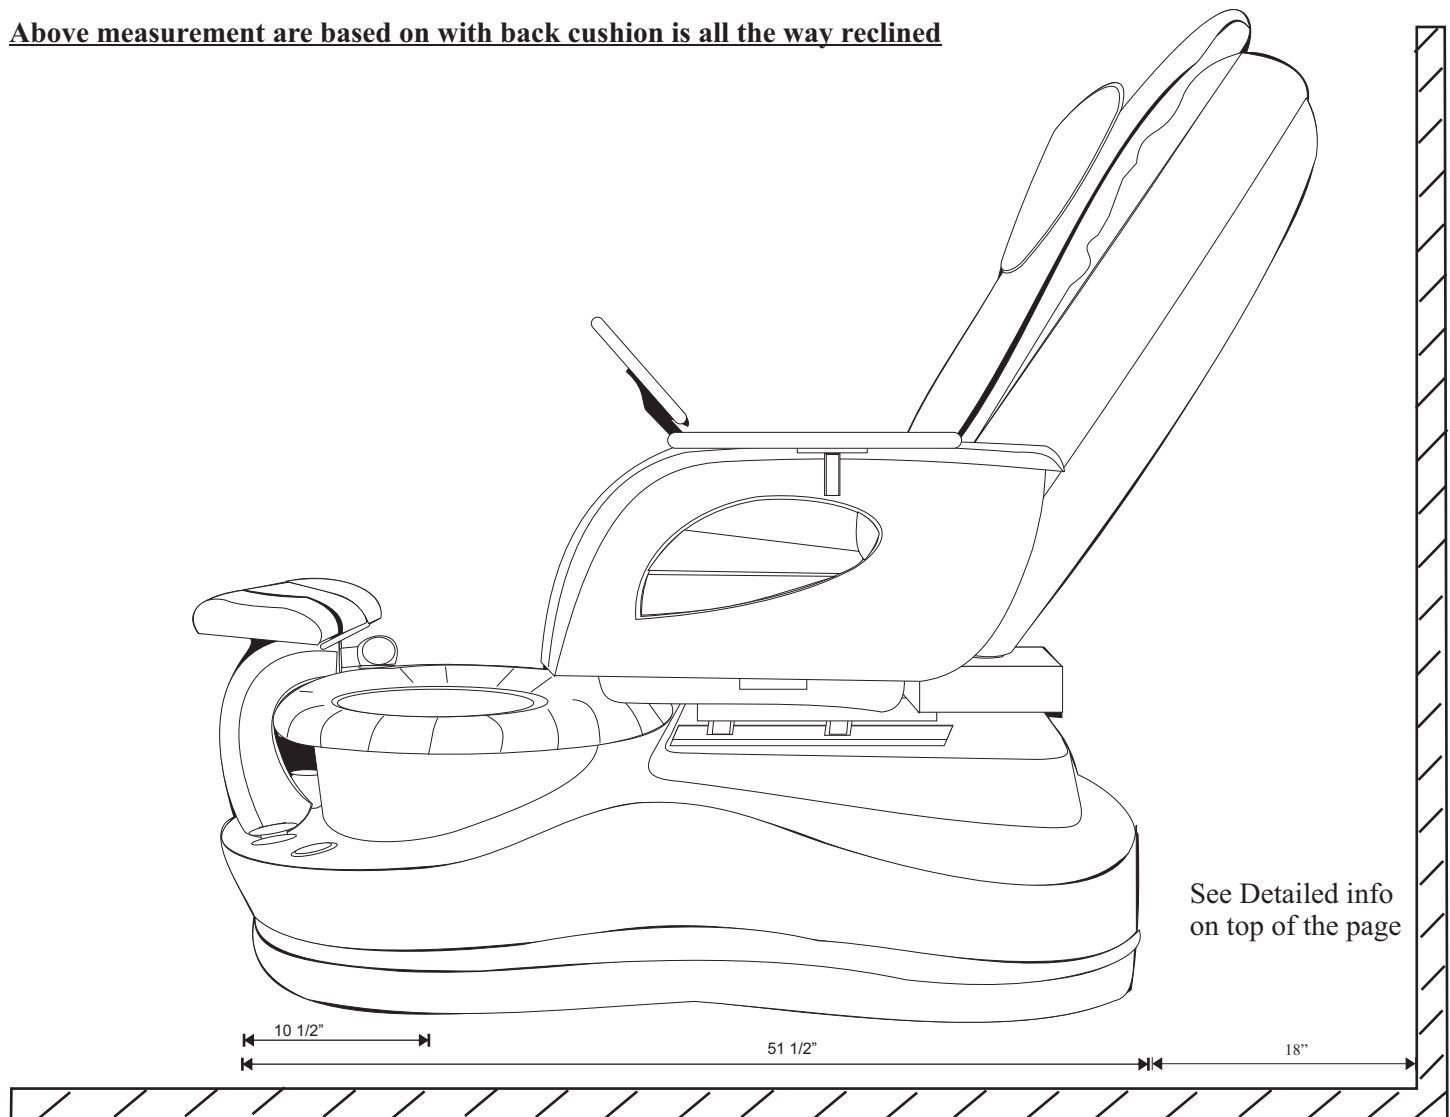


Due to continuous improvements on all our products, specification, characteristics, packing, color, designs are subject to change without notice.

Ultra jet Whirlpool Motor

Safety Instructions

When using electrical equipment, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

1. Read and follow all instructions before using the equipment.
2. Keep the cord out of heavy traffic area. To avoid fire hazard NEVER put the cord under the rugs, near heat generating devices.
3. Always turn off the equipment before servicing.
4. Do not drop or insert any object into any openings.
5. Do not operate any equipment with a damaged parts.
6. Any other use not recommended by the manufacturer may electrical shock or injury to persons.
7. Never use outdoors
8. Do not attempt to repair or adjust any electrical or mechanical functions on the unit.

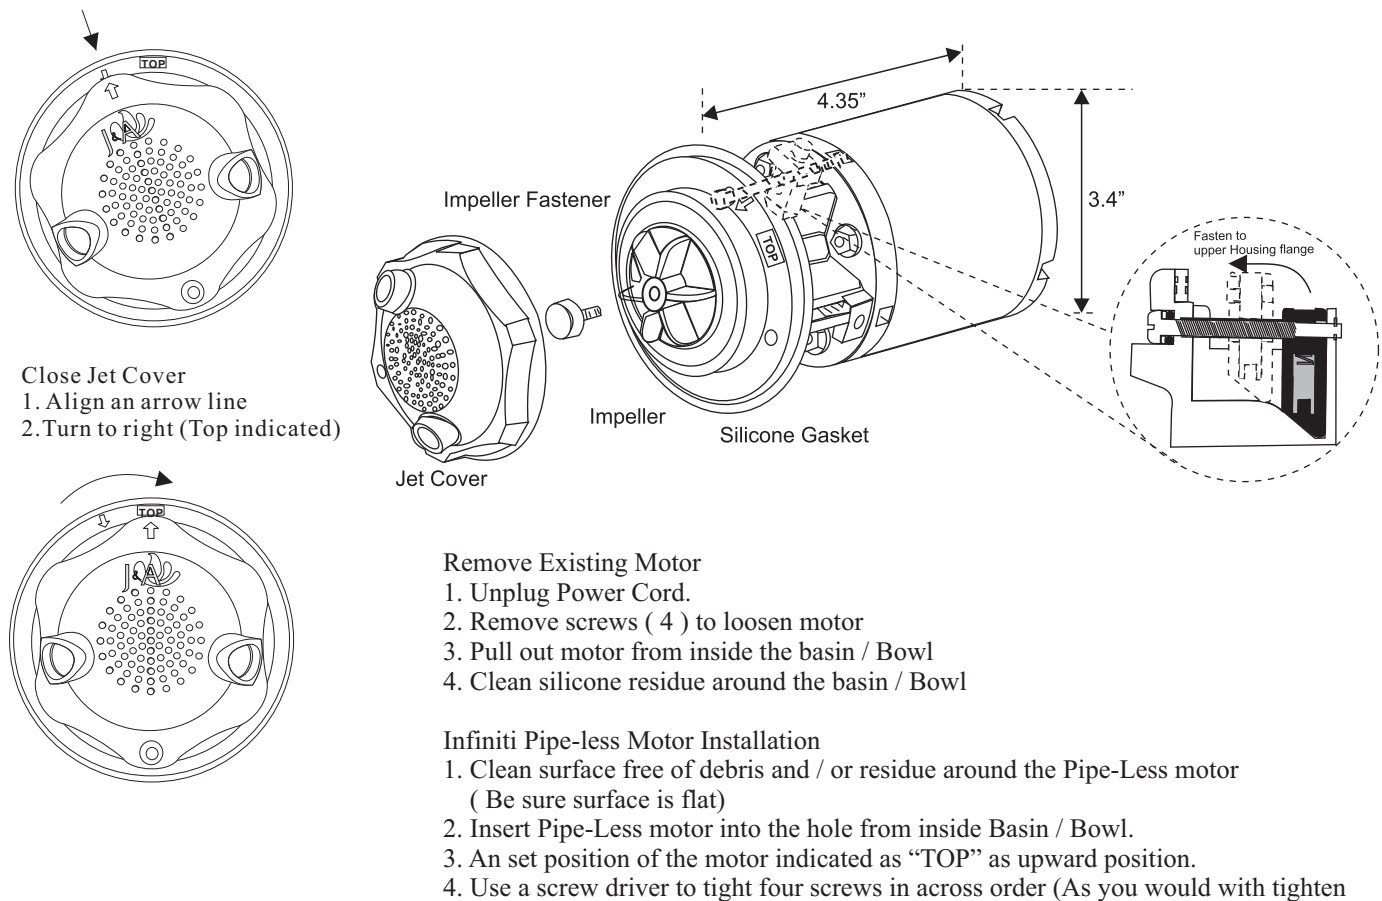

Cleaning Instruction

1. Turn the unit off and wait until the motor is fully stops.
2. Remove the front jet cover and notice the locking screw in the center
3. Remove the locking center screw (Indicated an Arrow) and pull out impeller from housing.
4. Use Anti-Bacterial solution (EPA Registered) to clean all part/s.
5. After sanitization, place impeller onto the motor shaft and fasten with center locking screw (Opposite arrow)

Ultra Pipeless jet Whirlpool Motor Specifications

Model: CS-0216A-MT

Rating: 120VAC / 60Hz, 0.4A - thermally Protected

Pump: Dual whirlpool Jet Flow


Mounting: Single 3.5" hole Diameter
Auto tighten Mounting screws(4)

MAGNA-JET (OPTIONAL)

Safety Instructions

When using electrical equipment, Basic safety precautions must be followed to reduce the risk of fire, electrical shock, and injury to Persons.

1. Read and follow all instructions before using the equipment.
2. Keep electrical cord out of heavy traffic area. To avoid fire hazard NEVER place electrical cord under the rug, near heat Generating devices.
3. Always turn power off the equipment before service.
4. Do not drop or insert any object into any openings.
5. Do not operate any equipment with damaged parts.
6. Any other use not recommended by the manufacturer may cause electrical shock or cause injury to person/s.
7. Never use it outdoors
8. Do not attempt to repair or adjust any electrical or mechanical.

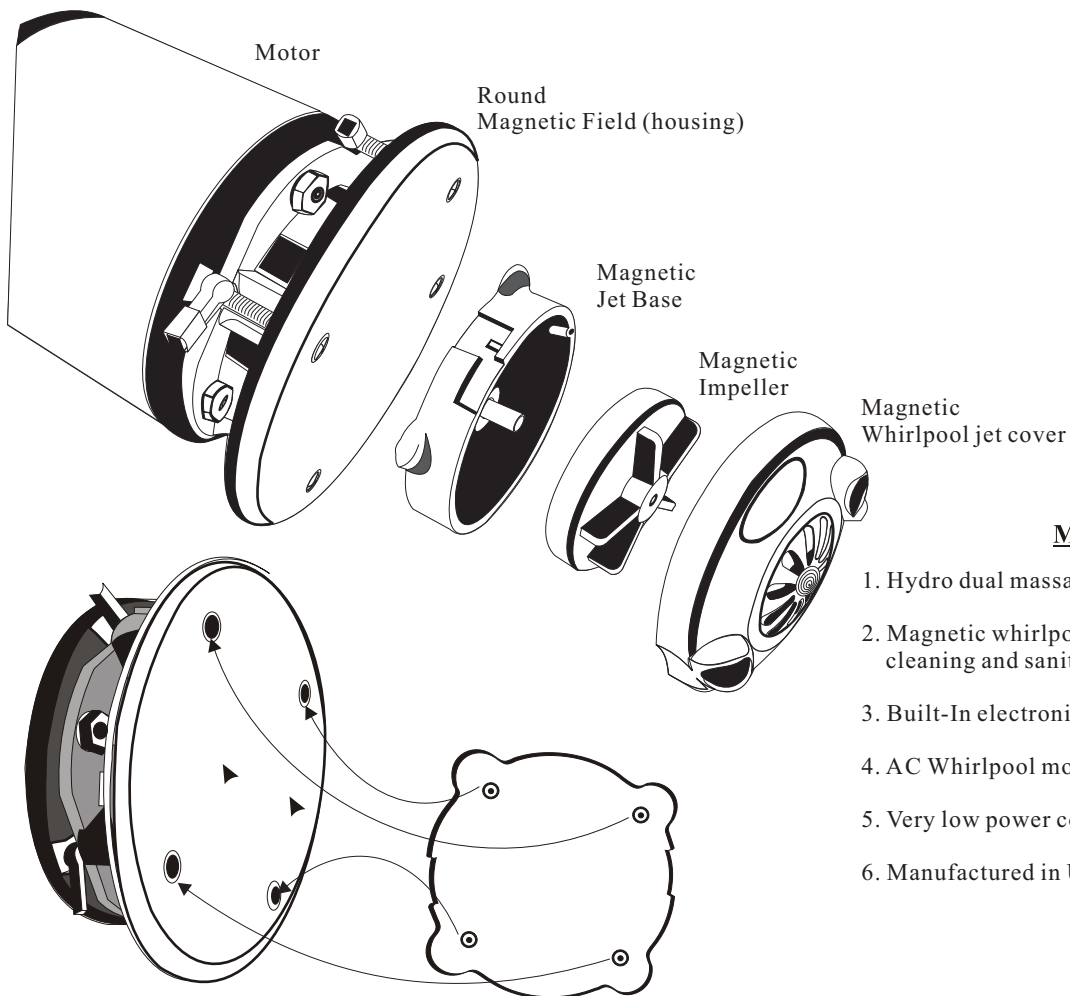

MAGNA-JET Features

1. Hydro dual massage jet stream
2. Magnetic whirlpool jet cover can be remove for quick cleaning and sanitizing.
3. Built-In electronic sensor for pump control.
4. AC Whirlpool motor (long life)
5. Very low power consumption (27W)
6. Manufactured in USA.

Cleaning Instruction

1. Turn off the unit and wait until the motor is fully stops.
2. Hold Hydro whirlpool jet cover firmly and pull to separate from the round magnetic field.
3. Turn hydro whirlpool jet cover to left to open and pull out impeller.
4. Use Anti - Bacterial solution (EPA Registered) to clean all parts.
5. After sanitize all parts, place impeller and close hydro whirlpool jet cover to turn right to lock
6. Hold firmly the whirlpool cover jet and gently place it onto the round magnetic field. Do not release the hydro whirlpool jet cover until Jet cover is on the round magnetic housing.

MAGNA-JET Specifications

Model: MAGNA-JET - 120VAC, 60Hz, 1.0Amp


Pump: Hydro-Massage Dual jet Flow

Mounting: Single 3.5" hole Diameter
Auto tighten Mounting screws(4)

How to USE Magnetic jet !

WARNING: DO NOT RUN DRY, BASIN MUST FILLED WITH WATER TO LEVEL INDICATOR.

CAUTION: MAGNETIC JET COVER ASSEMBLY MUST ALIGN WITH DISCHARGE PORT POSITIONED AT 3/9 O'CLOCK.

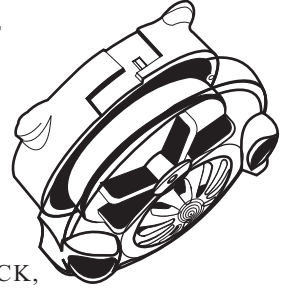

WHEN READY TO USE, **MAKE SURE** JET COVER IS POSITIONED AT **3/9 OCLOCK** FOR PROPER WHIRLPOOL ACTION IN THE BASIN. IF JET COVER IS **NOT** ALIGN AT 3/9 O'CLOCK, WATER WILL SPLASH OUTSIDE OF THE BASIN.

PROPER WAY TO USE MAGNETIC JET SYSTEM

1- FILL THE WATER TO WATER LEVEL INDICATOR.


2- HOLD MAGNETIC JET FIRMLY TO BRING CLOSER TO THE ROUND MAGNETIC FIELD AND DO NOT RELEASE

THE MAGNETIC JET PREMATURELY OR THIS WILL CAUSE IMPACTS ON THE JET COVER AND THE ROUND


MAGNETIC FIELD(HOUSING) SHORTENING THE LIFE EXPECTANCY OF THE JET COVER. WHEN THE JET COVER NEARS THE ROUND MAGNETIC FIELD, PLACE JET COVER ONTO THE FOUR DIMPLE AREA (SEE

DIAGRAM). THE JET COVER MUST ALIGN WITH DISCHARGE PORTS POSITIONED AT 3/9 O'CLOCK.

3- WHEN FINISHED WITH CLIENT, DO NOT REMOVE MAGNETIC JET UNTIL MOTOR IS FULLY STOPPED.

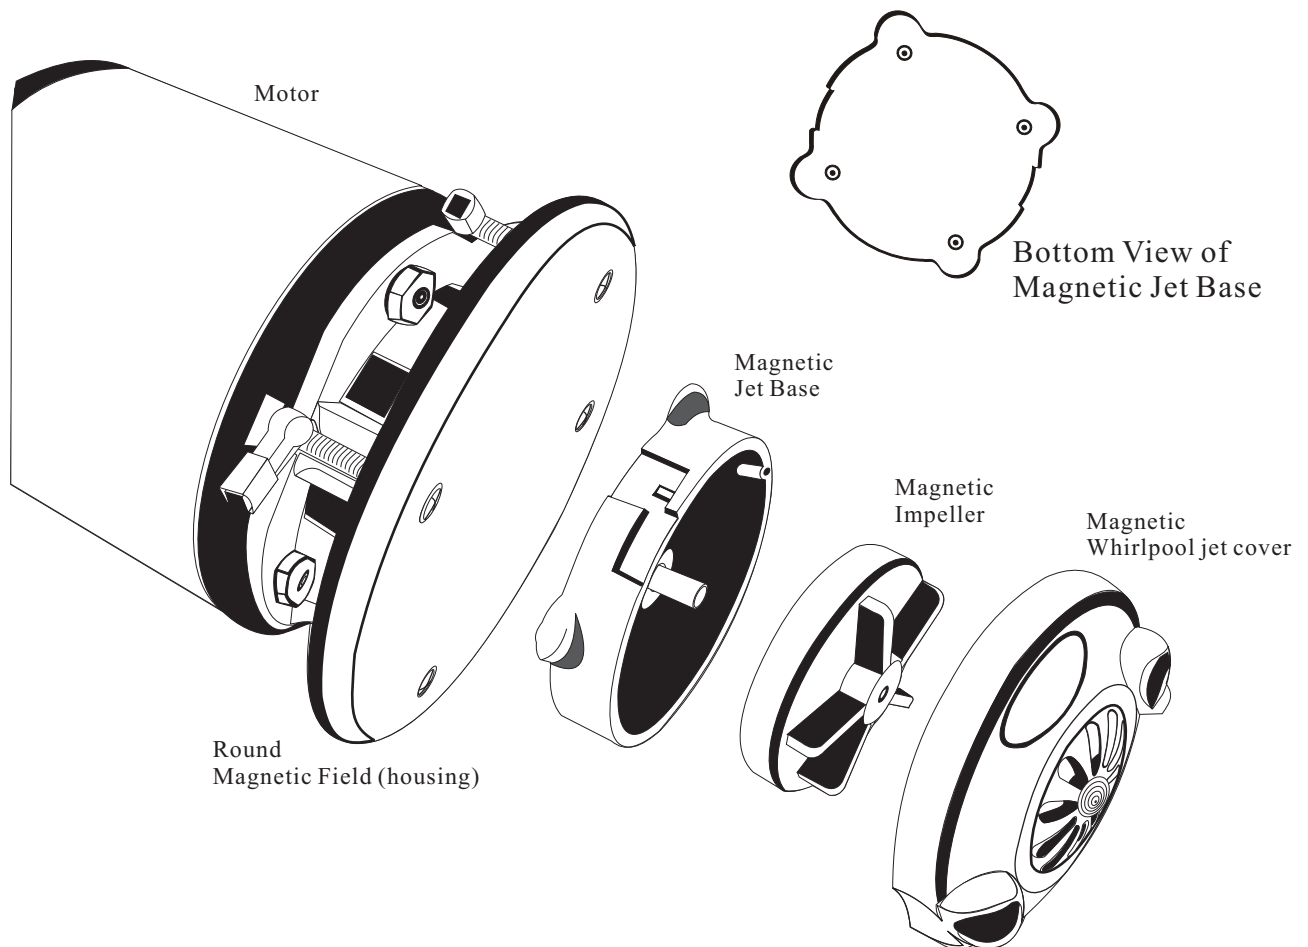

How to remove backrest! And Placing Backrest in Correct position

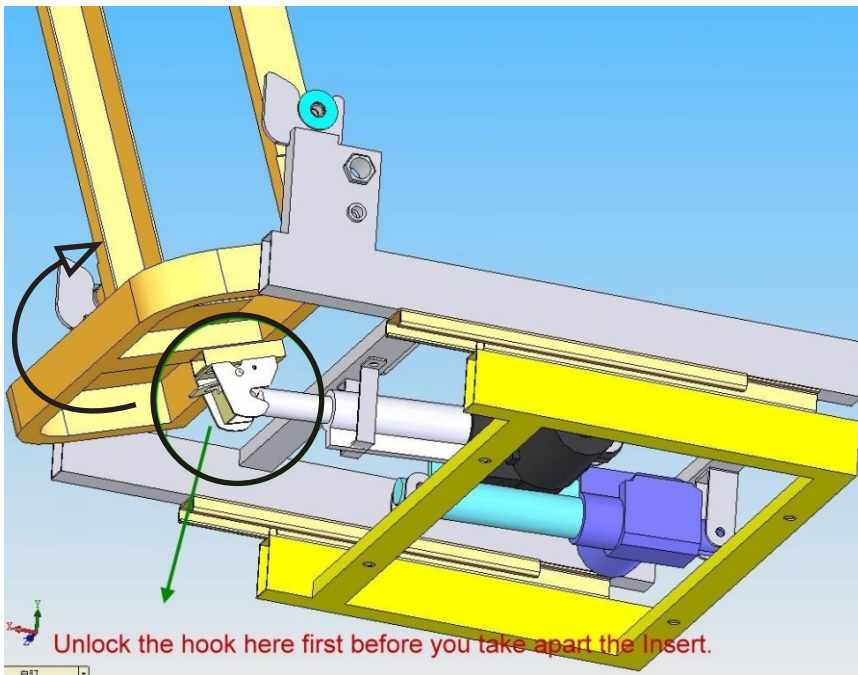


Unlock the hook here before you take apart the insert.



1. Press Recline bracket Latch to release from Recline piston.
2. Fold over to disconnect two (left / right) Wire connect receptacles on the seat frame.
3. Bring backrest to upright position and lift.
4. Below figures are as reference.

Before using chair after installation following must be check for proper operation


1. Fig.1 shows pivot into the hook - notice all wire/s are clear from hook
2. Fig.2 shows close look of pivot and hook
3. Fig.3 shows backrest pivot position
4. Fig.4 shows Latch click into the recliner piston for proper operation (see back of the backrest for instruction).

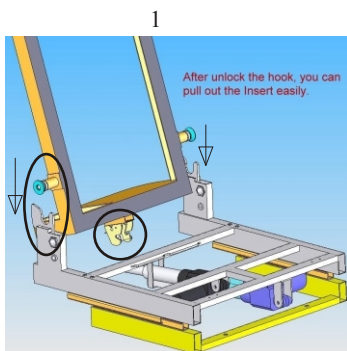

Unlock the hook by pressing latch from recliner piston to pull out insert

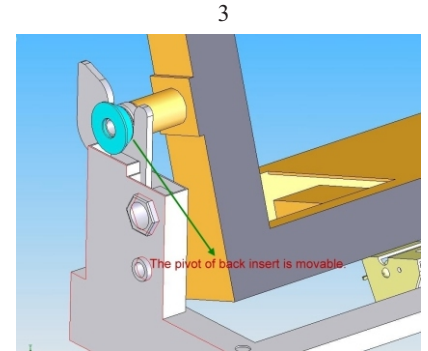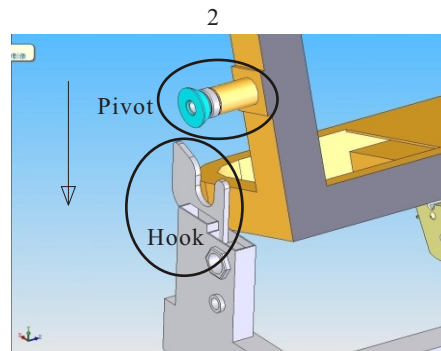

The Pivot of back insert is removable

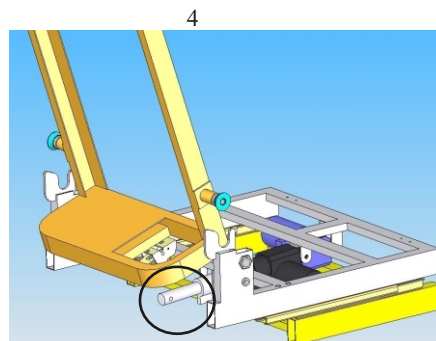

Recliner piston to latch

Massage Chair (Operational Manual)

Please read the operating instruction carefully before using this chair and keep the manual in accessible location.

Safety Instruction

Do

1. Please Make sure to leave adequate space in the back of the spa (see installation summary)
2. Check Upholstery (Backrest, Seat cushion and pillow) if there is a torn (cleft) and Power cord is broken or dust built up on the plug.
3. Turn On Power - make sure the voltage conforms with required specification of this item and insert power plug into the wall outlet.

Don't

1. Do not operate chair direct sunlight or in a place with high temperature, expose could Fade or Harden upholstery.
2. Do not operate chair in Damp area - to prevent electrical shock or other accident.
3. Please keep the chair safely away from heat source, humidity, sharp objects, corrosive chemical and flammable object.
4. Do not use out door.

Health Warning (Operational Manual)

Safety Prevention Measure (Operational Manual)

Parts ID and Function with chair introduction.

Operation and Instruction

1. Switch On.
2. Press On/Off key and select massage technique function
3. With the body detection functions, - Different height and size to carry out an accurate massages.
4. Press other keys on the remote control to choose massage functions.

Manual Massage


1. Back and Seat adjustment
2. Vibration Massage at seat
3. Switch off and massage is over

- ** Press On/Off key to turn off all massage functions and wait for massage roller to resting location.
- ** Switch off and unplug the power cord.
- ** The remote will reject all commands when pressure on the massage roller is great. Unit will initiate the internal safety protection circuit immediately to stop all the massage function.

The corresponding indicator light of the controller will flash continuously.

- * Indicator light of “ Kneading” is flashing - the Kneading mechanism overloaded.
- * Indicator light of “ Tapping” is flashing - The Tapping mechanism overloaded.
- * Indicator light of “ Overall” flashing - The Up and Down mechanism is overloaded.

If problem persist - TURN OFF the power switch for 10 seconds to restart the power switch and DO normal operation. If you feel massage pressure is too hard or massage mechanism moves slowly .causes from exceeding weight capacity of 220 lbs.

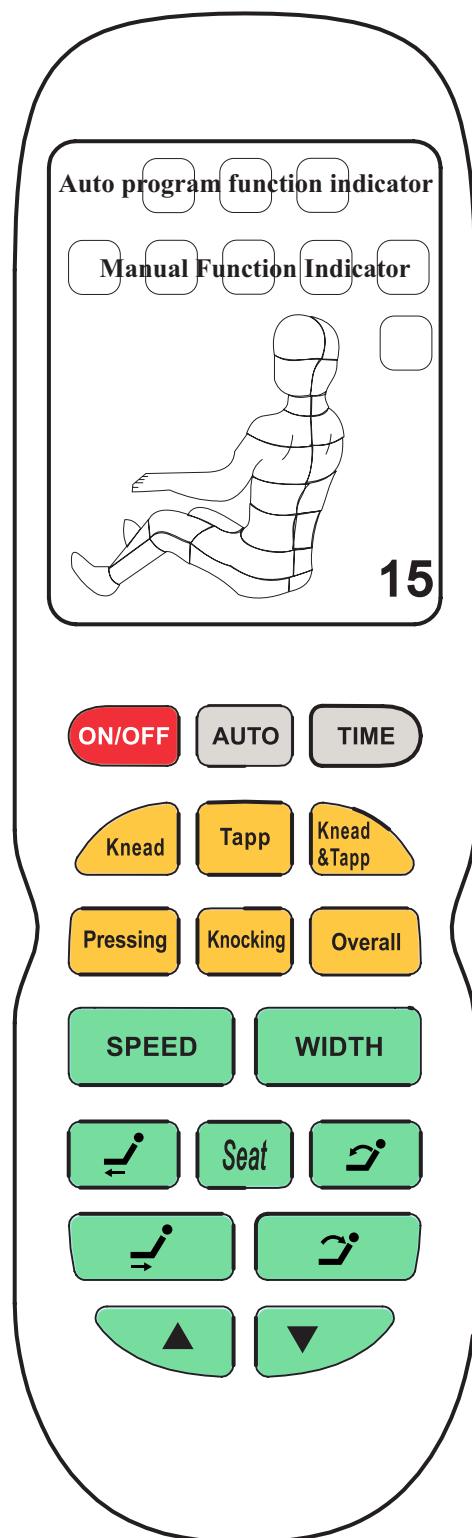**ON/OFF**

Press this button to switch on/off in turn.

When power on, Automatic icon and Massage Method icon on the LCD screen will be lit up; when power off, STOP icon on the LCD screen will be lit up.

AUTO

Press this button, the massage machine enters or exits the automatic control state. There are three modes under the automatic state, each time press the button, followed by the back massage should be massage waist massage - automatically stop, the corresponding image on LCD screen is flashing.

In auto mode, seat pressure or vibration massage function is opened automatically.

TIME

The default display is 20mins, each time press the time key, the time display is followed by 10 → 20 → 30mins. After time is set ok, the display time decrements every minute until to 00, then the machine will shut down.

Knead

In manual state, you can manually open and close a variety of massage techniques. Press this button, massage machine starts kneading, the corresponding light-emitting diode lights on and the kneading image is flashing on the LCD screen.

Tapp

Press this button, massage machine starts tapping, the corresponding light-emitting diode lights on and the tapping image is flashing on the LCD screen.

Knead & Tapp

Press this button, the massage turns into knead + tapp mode, the corresponding diode lights up and the image of knead + tapp on the LED screen is flashing.

Pressing

Press this button, the massage turns into pressing mode, the corresponding diode lights up and the image of pressing on the LED screen is flashing.

Knocking

Press this button, the massage turns into knocking mode, the corresponding diode lights up and the image of knocking on the LED screen is flashing.

Overall

Press this button, the massage machine enters the whole work state, the corresponding light-emitting diode is bright; The corresponding image on the LCD screen is flashing. (In automatic state, this key is invalid.)

SPEED

In manual mode, the working state of the massage machine is kneading, tapping, knead&Tapp, knocking and shiatsu, press this key to adjust the speed by turns, 1→2→3→4→5. The corresponding display speed bar on the LCD screen is gradually increasing.

WIDTH

In manual mode, if the working state of the massage machine is tapping, shiatsu and knocking, press this button, width can be adjusted to narrow → middle → wide by turns. The corresponding image is displayed on the LCD screen.



Keep pressing this button for a while, seat slides forward; release the key, seat stops moving.



Keep pressing this button for a while, seat slides backward; release the key, seat stops moving.



Keep pressing this button for a while, back-rest raises up; release the key, back-rest stops moving.



Keep pressing this button for a while, back-rest moves down; release the key, back-rest stops moving.

Seat

Press this button, the corresponding indicator light will be on, vibration function or air massage on the seat will start to work and the corresponding seat icons on the LCD screen starts to flash.



In manual state, press this button for a long time, massage machine will go up; Press this button for a long time, massage machine will go down.





In automatic state, these two buttons are invalid.

CLÉO -SE


Discharge Pump (Optional):

Up to 4ft @ +/- 60 sec. with 1/2" or 3/4" Connection to main drain


CLÉO -SE

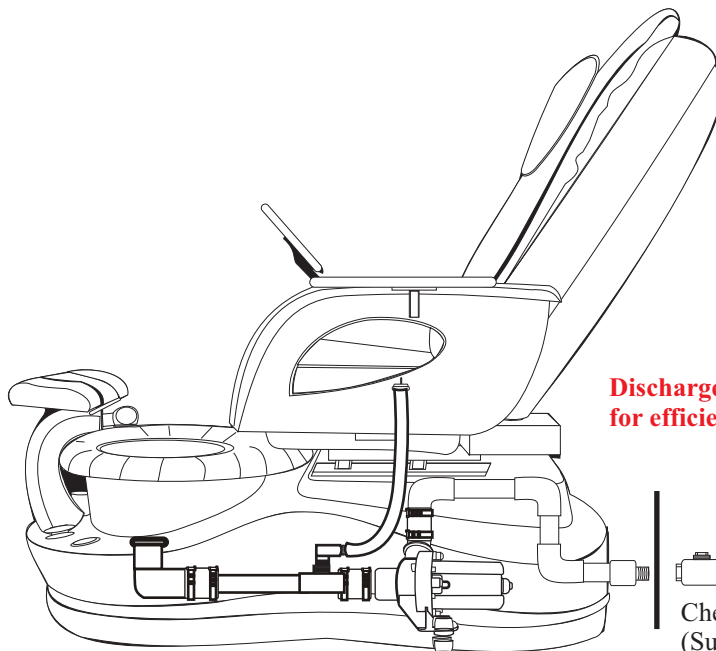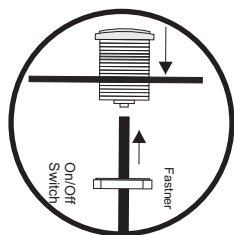

Discharge (Drain) outlet MUST be 1/2" or 3/4" for efficient drainage.

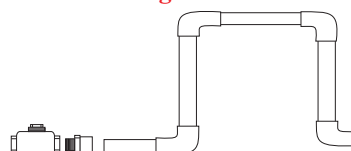

Check valve required to install by Plumber
(Suggest Swing Check Valve)

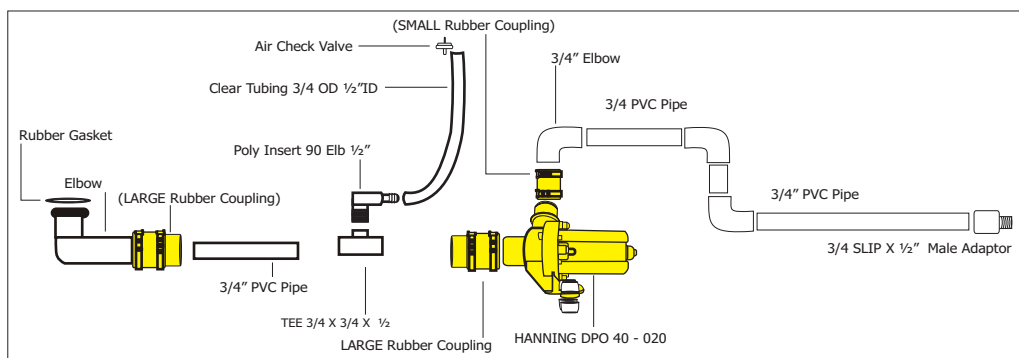


Installation Instruction

1. Make a hole (37mm) for the On/Off switch as shown (see fig 1). Pre- drill Required.
2. Placed a 1/8" clear hose into the rear of the switch and on/off switch into the hole.
3. The discharge pump kit is made to fit onto the pedicure unit. (see fig 2)
4. Connect E-Z connector onto the drain elbow.
5. Plug discharge pump outlet into the two minute timer outlet
6. Plug two minute timer into the wall outlet.
7. It is very important that tip of the clear tub remain above the water Level with one loop as shown.

**** Please cut to fit 1" Flex hose to your size****

Electrical Control Box
(Located Top inside of base)

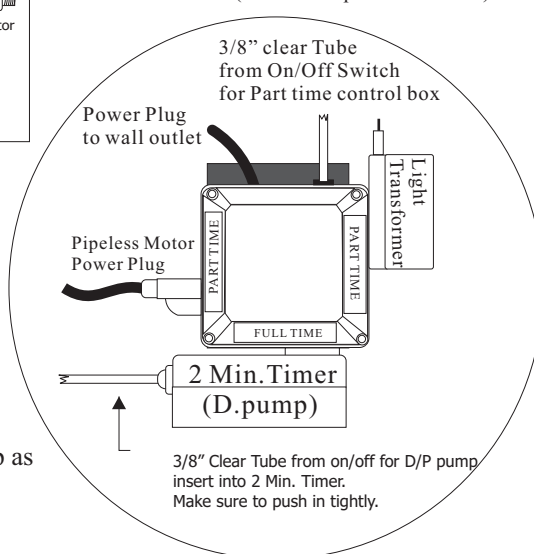

Operation Instruction

Warning ! DO NOT RUN DRY

1. Turn to open drain plug. 3 to 5 second for air to release from the pipe (Bubble/Air release from Drain).
2. Press On/Off switch to activate 2 minute timer.
3. At any time, water drain completely from the basin. Press On/Off switch to stop

37mm Hole Size
for On/Off Switch

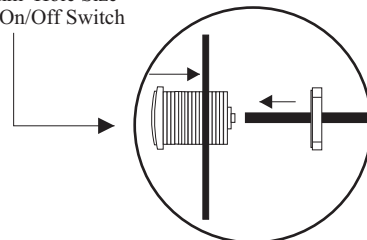


Figure 1

DISINFECTING YOUR PEDICURE SPA

CLÉO - SE

Note: Please be advised that it is responsibility of purchaser/user to adhere strictly to the following procedure. Any non-compliance will be considered negligence of the purchaser/user.

The Bureau of barbering and cosmetology requires that salons using whirlpool pedicure spas use the following disinfecting Procedures to ensure proper cleaning and maintenance of the equipment, and to prevent bacterial infection. For your clients safety, always use the regulations as a minimum standard for cleaning and disinfecting.

Chair maintenance

Please see chair manual for Do and Don't

At the end of the day:

1. Remove the intake suction screen, All debris trapped behind the screen of each pedicure spa must be removed. And the screen and the inlet shall be washed with soap or detergent and water
2. Before replacing the screen, Totally immersed the screen into an EPA- registered disinfectant with bactericidal, Fungicidal, and virucidal activity.
3. Finally, flush the whirlpool system with low-suding detergent and warm OR an EPA - registered cleanser for 10 minutes. Rinse with clean fresh water and drain.
4. Wipe with Clean towel.

Maintenance (Resin Bowl)

1. Use Baking soda Powder and water 1:1 ratio - Mix well until become paste
2. Apply generous amount onto the resin bowl and use cheese cloth or micro fiber material to buff in circular Motion.
3. Repeat #2

Do

1. To remove stain - Use small amount of an alcohol on clean towel apply in small area
And follow maintenance step #2 to clean residue

Don't

1. Do not use abrasive material to clean
2. Do not use acetone to clean and / or as a stain remover.
3. Do not use harsh or harmful chemical on the surface of resin bowl.
4. Do not use concentrate Chlorine as disinfectant agent.

Note:

Cleaning or sanitizing is NOT disinfecting. According to the CDC and EPA, disinfecting occurs only when there is a reduction of pathogenic microbes at 99.999%. Sanitizing is a only reduction of 99.9%. Cleaning of whirlpool pedicure spa requires surfactant and chelating detergents that are low foaming and have ability to remove body oils, organic oil additives, mineral oil, skin cell, nail clippings, etc.. that can accumulate both in the basin and the jets which may become fertile area for micro organism to grow.

Note:

The use of oil based products can build up in the whirlpool system causing clogging in the jet and build up onto the surface of the basin. Adherence to the above cleaning will minimize build up thus the manufacturer recommend not to use mineral oil based product.