

MAESTRO® PEDICURE SPA

OWNER'S MANUAL



MAESTRO® PEDICURE SPA

TABLE OF CONTENTS

Introduction	1
Very Important Safety Precautions	1
Maestro Specifications	2
Limited Warranty	3
Very Important Requirements	4
Warning - Possible Health Risks	4
Unpacking	5
Installation Instructions	5
Location / Secure to Floor	5
Important Utility and Installation Requirements and Instructions	
Electrical Service, Grounding and GFCI Requirements	6
Hot/Cold Water Supply and Drain	6-7
Features of the Maestro Pedicure Spa	8-9
Instructions Pertaining to a Risk of Fire, Electric Shock, or Injury to Persons	10
Operating Instructions	11-17
User Maintenance Instructions	
Cleaning and Disinfecting the Maestro Pedicure Spa	18-19
Information about Disinfectants and Detergent Cleaners	20
Care and Maintenance of Wood, Basin and Upholstery	21
Pedicure Cleaning Log Sheet (detach and make copies for each footspa)	
Tips for Getting the Most from your Maestro Pedicure Chair	22

MAESTRO® PEDICURE SPA

Introduction

Everyone at Continuum™ Footspas sincerely thanks you for choosing The Maestro Pedicure Spa. We fully realize you had a choice and we look forward to exceeding your expectations. A tremendous amount of time and energy has gone into designing and manufacturing not only a beautiful looking pedicure spa, but a spa that will perform trouble free for many years.

Please take a moment to read this entire owners manual before installation and use.

SAVE THESE INSTRUCTIONS

If you have any questions, concerns or problems, please feel free to call us at 1 877 255 3030.

Very Important Safety Instructions

- Maximum weight capacity of the Maestro Pedicure Spa is 300 pounds.
- Never bring or operate any electrical device in or near the Maestro.
- Always enter and exit the Maestro very slowly and carefully.
The seat has been designed to swivel in order to help entering and exiting the Pedicure Footspa.
- Never stand in the basin.
- Avoid excessive water temperatures. This can be dangerous and water temperature must be checked before each use.
- Maximum operational water temperature should **never** exceed 105° F (41° C)
- Maximum **supply** water temperature should **never** exceed 150° F (65° C)
Always check state or local codes to verify maximum supply temperatures.

MAESTRO[®] PEDICURE SPA

Specifications

Dimensions: 70.4" L (179 cm) x 36.2" W (92 cm) x 55" H (140 cm)

Shipping Dimensions (Carton Size): 84" L (214 cm) x 40" W (102 cm) x 61" H (155 cm) The Maestro ships fully assembled.

Net Weight: 310 lbs (141 kg)

Shipping Weight without accessories: 408 lbs (185 kg)

Shipping Weight with accessories: 463 lbs (210 kg)

Client Weight Capacity: 300 lbs (136 kg)

Basin Capacity: 5.9 US Gallons (22.3 liters)

Power Requirements: 120V AC, 20 Amp, 60HZ. A separate and dedicated 20 Amp GFCI protected circuit MUST be used for each foot spa.

Construction: Welded steel frame with cherry veneered wood panels. ABS cover panels.

Basin: Solid surface, pre-plumbed.

Jet System: Two (2) self contained NoPipe™ Jets; removable screens, no recirculating pipes.

IMPORTANT: The Maestro Pedicure Spa MUST be installed by a licensed electrician and a licensed plumber in accordance with all national, state and local codes/regulations.

Plumbing:

Incoming: Hot/Cold supply lines required (1/2" ID), solenoid controlled, built-in fill sensor. Connections located on back of spa.

Discharge: Gravity drain or optional factory installed drain pump.

NOTE: If through floor installation is desired, refer to Plumbing Rough-in drawing (available at ContinuumFootspas.com). See Owners Manual for complete installation instructions.

Massage: Exclusive Acoustic Therapy relaxation system.

Built-in MP3 player, Headphones included.

Controls: Technician's keypad: Fill, Jets, Sprayer, Clean and Drain. Also, Seat Forward/Backward and Tilt.

Armchair: Left Side: Seat Forward/Backward, Tilt and Exit.

Right Side: Acoustic Therapy relaxation system.

All Controls are low voltage.

Certification: ETL Certified



Limited Warranty*: Basin- Sixty (60) months from date of shipment from Continuum Footspas facility.

All other parts and accessories - Twelve (12) months from date of shipment from Continuum Footspas facility.

Labor: Twelve (12) months labor may be covered under this Limited Warranty. Refer to Owner's Manual for complete details.

***See Limited Warranty for complete details**

ACCESSORIES:

Technician's chair: Base: 24" diameter (61 cm) Height range: 15.5" to 20" (39 cm to 51 cm) Net weight: 15 lbs (6.80 kg)

Shipping Dimensions: 25" W (64 cm) x 24" L (61 cm) x 12" H (31 cm) Shipping Weight: 19 lbs (8.6 kg)

Accessory Cart: 25" L (64 cm) x 18" W (46 cm) x 23" H (58 cm) Net Weight: 33 lbs (14.9 kg)

Shipping Dimensions: 24" W (61 cm) x 28" L (71 cm) x 11" H (28 cm) Shipping Weight: 35 lbs (16 kg)

Note: Due to continuous improvements, all specifications are subject to change without notice. All dimensions and weights are approximate.

MAESTRO® PEDICURE SPA

Limited Warranty

IMPORTANT

To validate The Maestro Limited Warranty, the Limited Warranty Registration Form MUST be filled out completely and returned to Continuum Footspas within 30 days of original installation.

Continuum Footspas has designed and manufactured The Maestro Pedicure Spa to the highest standards. Accordingly, Continuum Footspas expressly warrants The Maestro Pedicure Spa as follows:

To the original owner of The Maestro Pedicure Spa, Continuum Footspas may repair or replace, at its option, any Maestro Pedicure Spa found to be defective in material or workmanship upon inspection by a factory authorized representative of Continuum Footspas. This limited warranty covers the following:

- **Basin** - Sixty (60) months from date of shipment from Continuum Footspas facility.
- **Other Components/Parts** - Twelve (12) months from shipment from Continuum Footspas facility.
- **Accessories** - Twelve (12) months from shipment from Continuum Footspas facility.
- **Shipping Costs** - Twelve (12) months from the date of shipment Continuum Footspas will cover normal shipping costs associated with replacement parts. Expedited shipping costs will incur an additional charge.
- **Labor** - Twelve (12) months from the date of shipment, Continuum Footspas will cover reasonable labor costs associated with the installation of replacement parts found to be defective in material or workmanship upon inspection by a factory authorized representative of Continuum Footspas. No labor costs or replacement parts will be covered under this Limited Warranty if at the sole discretion of Continuum Footspas, it is determined a failure was caused by negligence, accident or improper use, improper installation or lack of proper maintenance as outlined in the Owner's Manual.

The exchange of a Maestro Pedicure Spa is limited to supplying a replacement Maestro Pedicure Spa of equal style. Owner is responsible for all labor and shipping costs necessary to replace a Maestro Pedicure Spa.

NO CONSEQUENTIAL, INCIDENTAL, CONTINGENT, INDIRECT, SPECIAL OR OTHER DAMAGES WILL BE ALLOWED WHATSOEVER. This limited warranty is null and void if the Maestro is removed from its original installation, or is not installed in accordance with specifications of Continuum Footspas, or national, state or local codes, regulations and ordinances. Furthermore, this limited warranty is null and void if the Maestro Pedicure Spa is subjected to improper installation or maintenance, negligence, improper cleaning or any other circumstances beyond Continuum Footspas control. In order for your Limited Warranty to be valid, your Maestro Pedicure Spa must be installed by a licensed professional in accordance with Continuum Footspas installation instructions.

EXCLUDED FROM LIMITED WARRANTY:

- 1) Unauthorized repairs.
- 2) Damage due to freight, accident, natural disaster and/or abuse.
- 3) Staining, fading or discolorization of the seat, seat back, armrests or pivoting leg supports.
- 4) Damage or malfunctions due to improper installation including but not limited to, failure to comply with all national, state and local plumbing, electrical and building codes.
- 5) Fading, discoloration or staining of any part due to improper water additives or harmful cleaning agents or chemicals.
- 6) Damage to drain pump due to obstruction in drain hose.

For service or information regarding this limited warranty, please contact.

Continuum Footspas, LLC • P.O. Box 363 Brookfield, WI 53008

Toll Free: 1 877 255 3030 • Telephone: 262 754 4900 • Fax: 262 754 4901 • continuumfootspas.com

This limited warranty is to the original owner and is not transferable. The original owner agrees by using The Maestro Pedicure Spa the obligation of Continuum Footspas shall not extend to indirect or contingent damages or injury. Furthermore, the obligations of Continuum Footspas are limited to those set forth herein. This limited warranty is the exclusive remedy and is in lieu of all other warranties, express or limited, including, but not limited to, any implied warranty of fitness or merchantability for a particular purpose. No distributor, dealer or other person has the right or authority to bind Continuum Footspas to changes to this limited warranty. Consequently, Continuum Footspas is not responsible for such warranties or representations.

ADDITIONAL PROVISIONS

- Any assistance Continuum Footspas provides to the original owner above and beyond the scope of this limited warranty does not constitute a waiver of such terms, limitations or exclusions. Furthermore, such assistance does not extend this limited warranty.
- Continuum Footspas shall not be liable for any other obligations or liabilities as a result of breach of contract of warranty, negligence or strict liability with regards to The Maestro Pedicure Spa.
- This Limited Warranty applies only to Maestro Pedicure Spas installed in any one of the fifty states of the United States, the District of Columbia or provinces of Canada.

MAESTRO® PEDICURE SPA

Very Important Requirements

Every Maestro Pedicure Spa must be installed by a licensed plumber and licensed electrician. Installation must comply with all national, state and local building codes and/or regulations. The Maestro Pedicure Spa will not operate properly unless it has sufficient water pressure and temperature, proper drainage and adequate electrical power.

Any inspections or approvals are the sole responsibility of the purchaser. Prior to installation, one should contact their local building inspector to make sure all local codes are complied with.

Included with each and every Maestro Pedicure Spa is a warranty registration card. In order to validate the limited warranty the warranty registration card MUST be filled out completely and returned to Continuum Footspas within 30 days of original installation. **IN ORDER FOR THE LIMITED WARRANTY TO BE VALID, THE MAESTRO PEDICURE CHAIR MUST BE INSTALLED BY A LICENSED PROFESSIONAL IN ACCORDANCE WITH CONTINUUM'S INSTALLATION INSTRUCTIONS.**

SAVE THESE INSTRUCTIONS

WARNING!!! Possible Health Risks

**If your client experiences any pain or discomfort while using
The Maestro Pedicure Spa, discontinue use immediately.**

Clients whose feet or legs are inflamed for any reason or clients who have open wounds should never be allowed to use The Maestro Pedicure Spa. If there is any sign of fungal infection, fracture, swelling or persistent pain, clients should consult their physician before using The Maestro Pedicure Spa. Diabetics should always consult their physician prior to receiving a pedicure.

MAESTRO® PEDICURE SPA

Unpacking

The Maestro Pedicure Spa requires very little assembly. In order to minimize potential damage, it was shipped with the chair portion attached to the main frame.

DO NOT REMOVE CHAIR FROM BASE PORTION

Remove and discard all packing and lifting materials.

Installation Instructions

EVERY MAESTRO PEDICURE SPA MUST BE INSTALLED BY A LICENSED PLUMBER AND A LICENSED ELECTRICIAN. INSTALLATION MUST COMPLY WITH ALL NATIONAL, STATE AND LOCAL BUILDING CODES AND/OR REGULATIONS. FAILURE TO COMPLY WITH THESE CODES AND/OR REGULATIONS WILL RESULT IN THE LIMITED WARRANTY BEING NULL AND VOID.

Install to Permit Access for Servicing

In order to ensure access after installation, please refer to installation drawings available at ContinuumFootspas.com.

Location and Securing to Floor

The Maestro Pedicure Spa must be located on a level floor that is capable of supporting both the Pedicure Spa and a client.

Important

The Maestro Pedicure Spa **MUST** be anchored to the floor. There are two (2) supplied mounting brackets.

Please note the following installation instructions:

Step 1

Utilizing a level, carefully adjust the eight (8) leveling feet. It is extremely important that the Pedicure Spa is level. Four (4) leveling feet are beneath the basin and four (4) are beneath the main frame. (Note: All leveling feet have been factory adjusted prior to shipment. In most cases no further adjustment should be necessary).

Step 2

Mounting brackets are to be used only on the main frame leveling feet. Slotted portion of the mounting bracket fits between frame and the leveling foot. The portion with the hole should be positioned to the floor. Use appropriate hardware to secure to floor (not supplied).

MAESTRO® PEDICURE SPA

Important Utility and Installation Requirements and Instructions

SAVE THESE INSTRUCTIONS

Electrical Service

A separate 120V, 60HZ, 20 amp GFCI protected grounded circuit **MUST** be used to supply power to each Maestro Pedicure Spa. Failure to do so renders the limited warranty null and void.

**NOTE: IF INSTALLED IN CANADA THIS UNIT MUST BE IN ACCORDANCE WITH
THE CANADIAN ELECTRICAL CODE, PART 1.**

Grounding and GFCI Requirements

WARNING - When using electrical products, basic precautions should always be followed, including the following:

- 1. DANGER: RISK OF ELECTRIC SHOCK.** Connect **ONLY** to a circuit protected by a ground-fault circuit-interrupter (GFCI).
- 2. GROUNDING IS REQUIRED.** This unit **MUST** be installed by a qualified service representative and **MUST** be properly grounded. Also, the designated outlet **MUST** be grounded. **DO NOT IN ANY WAY MODIFY THE PLUG PROVIDED ON THIS UNIT. NO ADAPTER SHOULD BE USED WITH THIS UNIT.**

WARNING:

TO REDUCE THE RISK OF BURNS, ELECTRIC SHOCK, FIRE OR INJURY TO PERSONS:

- All servicing of this unit must be performed by authorized service personnel only.
- DO NOT operate this appliance if it has a damaged cord or plug, if it is not working properly.
- Keep cord away from heated surfaces.
- DO NOT use outdoors.

Hot/Cold Water Supply and Drain

- All plumbing connections must conform to all national, state and local codes.
- Shut-off valves are strongly recommended.
- Maximum water temperature must not exceed 105° F (41° C)
- Maximum SUPPLY water temperature must not exceed 150° F (65° C)
- Hot/Cold water supply and drain connections are located in the back of pedicure spa.
- If optional drain pump is factory installed, in-line backflow prevention is supplied.
- If pedicure spa is plumbed utilizing supply hoses, supply lines **MUST** be connected to the back of pedicure spa. Failure to do so will result in no back flow prevention.
- If pedicure spa is plumbed utilizing drain pump and drain hose; the drain hose connecting the pedicure spa to the wall connection (drain) must be 3/4" ID.
- Size of supplied plumbing fittings:

Hot/Cold water supply: 1/2" NPT (male)

Drain Pump: 3/4" NPT (male)

MAESTRO® PEDICURE SPA

If you find it necessary to remove a factory installed drain pump, it is very important to follow all the instructions below. Please refer to our website at ContinuumFootspas.com and refer to diagram, “Plumbing Rough-In” and carefully follow all the following instructions:

Step 1

Disconnect power to the Maestro Pedicure Spa.

Step 2

Locate the black curved plastic shroud beneath the wood base. Remove the right side panel only. (as you face the pedicure spa) **EXTREMELY IMPORTANT:** Locate the fuse plate and remove the fuse marked: “Drain Pump.” Discard fuse and replace the black plastic fuse holder cap.

Step 3

Locate yellow hanging tag marked “DRAIN PUMP DISCONNECT.” This tag is located near the power supply box. **UNLOCK THE QUICK DISCONNECT FITTING NEXT TO THE HANGING TAG. LEAVE ALL OTHER QUICK DISCONNECT FITTINGS IN PLACE.**

Step 4

Utilizing a phillips head screwdriver, carefully remove the black side panel located on the left side beneath the basin. This will expose the drain pump.

Step 5

Carefully disassemble and remove plumbing fittings associated with the drain pump. Fittings that need to remain in order to connect a P-Trap should not be removed. Carefully remove drain pump together with attached yellow jacketed wire cable. Discard drain pump and attached wire cable as they are no longer needed.


Step 6

Proceed to plumb drain (with P-Trap, not supplied) to comply with all national, state and local plumbing codes and/or regulations.

After all plumbing connections are completed, replace all cover panels and secure in place.

MAESTRO® PEDICURE SPA

Features of the Maestro Pedicure Spa

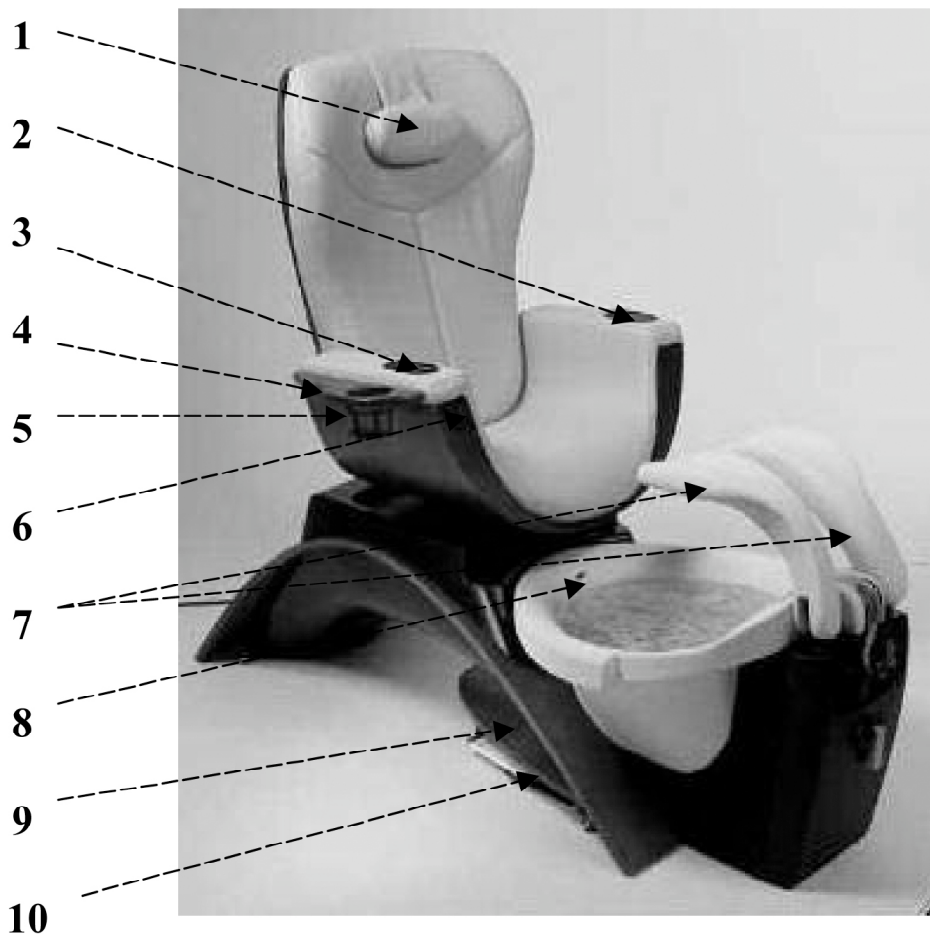


- 1 - Adjustable headrest
- 2 - Chair control keypad
- 3 - Acoustic Therapy Control Keypad
- 4 - Headphone holder
- 5 - Beverage holder
- 6 - MP3 jack
- 7 - Pivoting leg supports
- 8 - Basin overflow
- 9 - Shelf
- 10 - Pedicure log book holder

MAESTRO® PEDICURE SPA



- 11 - Sprayer
- 12 - Technician's Control Keypad
- 13 - Drain Handle
- 14 - Temperature Control Handle

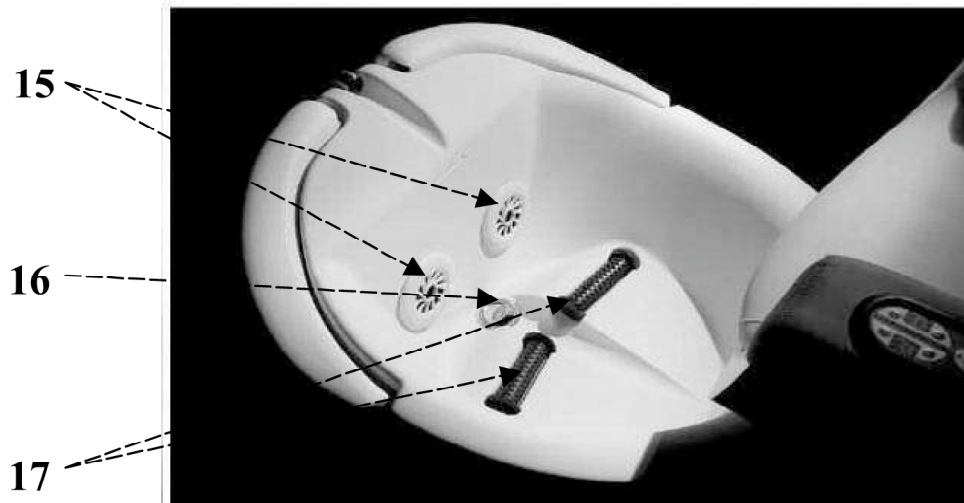

- 15 - NoPipe™ Jets
- 16 - Drain pop-up
- 17 - Removable foot massage rollers

MAESTRO® PEDICURE SPA

Instructions Pertaining to a Risk of Fire, Electric Shock or Injury to Persons

Important Safety Instructions

WARNING - When using this unit, basic precautions should always be followed, including the following:

1. **READ AND FOLLOW ALL INSTRUCTIONS.**
2. **WARNING:** RISK OF ACCIDENTAL INJURY OR DROWNING, CHILDREN SHOULD NOT USE THIS PEDICURE SPA WITHOUT ADULT SUPERVISION.
3. Use this unit only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. **WARNING:** RISK OF ELECTRIC SHOCK, DO NOT PERMIT ELECTRIC APPLIANCES (SUCH AS A HAIR DRYER, LAMP, TELEPHONE, RADIO, OR TELEVISION) WITHIN 5 FEET (1.5 M) OF THIS PEDICURE SPA.
5. Do not operate this Pedicure Spa without the covers attached to both NoPipe™ Jets.
6. The unit must be connected only to a supply circuit that is protected by a ground fault circuit-interrupter (GFCI). Such a GFCI should be provided by the installer and should be tested on a routine basis. To test the GFCI, push the test button. The GFCI should interrupt power. Push the reset button. Power should be restored. If the GFCI fails to operate in this manner, the GFCI is defective. If the GFCI interrupts power to the pedicure spa without the test button being pushed, a ground current is flowing, indicating the possibility of an electric shock. Do not use this pedicure spa. Disconnect the pedicure spa and have the problem corrected by a qualified service representative before using.
7. **GROUNDING IS REQUIRED.** This unit **MUST** be installed by a qualified service representative and **MUST** be properly grounded. **ALSO, THE DESIGNATED OUTLET MUST BE GROUNDED. DO NOT IN ANY WAY MODIFY THE PLUG PROVIDED ON THIS UNIT. NO ADAPTER SHOULD BE USED WITH THIS UNIT.**
8. **SAVE THESE INSTRUCTIONS.**

WARNING

Any service that may be required **MUST** be performed by a qualified service representative.

MAESTRO® PEDICURE SPA

SAVE THESE INSTRUCTIONS

MAESTRO OPERATING INSTRUCTIONS

NOTE: Please read these instructions carefully before operating this Pedicure Spa.

CAUTION: To avoid injury and irreparable damage, always remain seated when using this unit. Never stand on or in the basin.

SPECIAL WARNINGS

- If you have any concerns regarding your health, consult your doctor before using this pedicure spa.
- Never use any pedicure spa on open wounds, or any area of the body that is swollen, burned, inflamed or where skin eruptions or sores are present.
- Consult your doctor before using a Pedicure Spa if you have diabetes, as diabetes can contribute to foot problems including decreased feeling or circulation to the feet.
- Use of this product should be pleasant and comfortable. Should pain or discomfort result, discontinue use and consult your physician.

WARNING: WHEN USING THIS UNIT, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

1. **READ AND FOLLOW ALL INSTRUCTIONS.**
2. **DANGER:** To reduce the risk of injury, do not permit children to use this unit unless they are closely supervised at all times.
3. Use this unit only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer. Do not tamper with this unit.

After The Maestro Pedicure Spa is installed and the plumbing and electrical connections are made, clean and disinfect the basin before initial use.

MAESTRO® PEDICURE SPA

Technician's Control Keypad (12)



EXTREMELY IMPORTANT

Never, under any circumstances, should one spray water directly on the Technician's Control Keypad. This will damage the Control Keypad and void the limited warranty.

FILL MODE

IMPORTANT NOTE:

In order to activate water flow, the Temperature Control Handle (14) MUST remain in any position except vertical.

To add water to your spa simply press the "Fill" button. The basin will start filling with water. Place your hand in the basin to test the water temperature for comfort and safety. Adjust water temperature utilizing temperature control handle (14) as needed. Once desired water temperature is set, close the drain by turning drain handle (13) counter-clockwise.

The Maestro Pedicure Spa is equipped with a water level sensor located near one of the jets. When the water level reaches the fill sensor, water continues to run for two (2) seconds and then shuts off automatically.

The fill cycle is timed out at two (2) minutes and 15 seconds. Provided water pressure is adequate, the fill sensor will shut off water flow at the correct level well before two (2) minutes and 15 seconds.

If additional water is desired, simply **press and hold** the "Fill" button.

MAESTRO® PEDICURE SPA

JETS

Turn the NoPipe™ Jets on by pressing the “Jets” button. To turn the NoPipe Jets off press the “Jets” button again.

NOTE: The NoPipe Jets will automatically shut off 45 minutes after continuous operation. You may reactivate the NoPipe Jets by pressing the “Jets” button. The jets can not be activated during the fill cycle.

WARNING: DO NOT ATTEMPT TO OPERATE JETS WITHOUT WATER.

SPRAYER

To activate the hand held sprayer (11), pull the sprayer from the receptacle, press the “Sprayer” button located on the Technicians Control Panel and depress the thumb control on the sprayer handle. Release the thumb control button to stop water flow. **IMPORTANT: When sprayer is not in use, always press the “Sprayer” button and the thumb control to relieve water pressure to the sprayer head.**

NOTE: The sprayer has a built in timer and will be available for use for one (1) minute after you press the “Sprayer” button. In order to use sprayer for a longer period of time simply press “Sprayer” button again.

CLEAN

WARNING: It is extremely important to follow the cleaning instructions provided in this manual. Failure to clean the pedicure spa adequately can result in serious health issues for your clients as well as the nail technician. Failing to clean your pedicure spa may also cause it to work improperly. Regular cleaning will keep your pedicure spa in good working condition. Always consult your local and state codes regarding pedicure cleaning and disinfecting for further requirements.

To use the Clean cycle on the Maestro Pedicure Spa close the drain by turning drain handle (13) counter-clockwise. Press “Clean” button on the Technician Control Panel. The basin will start filling with water. The water will stop automatically when it reaches the required level. Add disinfecting solution as outlined in Cleaning Instructions. Press “Jets” button again to activate the NoPipe Jets. The Clean cycle will run for 10 minutes. After the cycle is completed the timer will turn the NoPipe Jets off. Drain your spa by turning the drain handle (13) clockwise, spray the basin using the hand-held sprayer and wipe it down with the clean cloth.

NOTE:

Since no one should ever be seated in the chair during a Clean cycle, the seat will not operate during the Clean cycle.

You are required to check with your state board for mandatory cleaning and disinfecting requirements and procedures.

MAESTRO® PEDICURE SPA

DRAIN

Your Maestro Pedicure Spa may be equipped with a factory installed, built in discharge pump (if ordered). To drain the water from the basin turn the jets off by pressing the “Jets” button and open the drain by turning the drain handle (13) clockwise.

To begin the draining process, press the “Drain” button located on the Technician Control Keypad (12). The pump will begin draining water out of the basin. It will automatically shut off after running continuously for two (2) minutes. If your basin is completely emptied before two (2) minutes, simply press the “Drain” button a second time to shut off the drain pump.

LEG SUPPORTS (7)

The Maestro’s dual and independent leg supports pivot upward to support the entire leg, not just the foot. Feet are perfectly positioned for massage and pedicure treatments.

To utilize one or both leg supports, simply pivot it upward until it stops. To ensure a smooth upward motion, place hand on the side of the leg support near the center. Gently push up until leg support reaches a vertical position. Gently lift up on the front edge of the leg support and it will lock into place. To unlock, gently lift the leg support straight up and carefully bring it down into the horizontal position.

WARNINGS: DO NOT DROP THE LEG SUPPORT INTO THE STORING POSITION. GENTLY GUIDE IT INTO PLACE. WHEN THE LEG SUPPORT IS IN THE VERTICAL POSITION **DO NOT SIT ON LEG SUPPORT.**

MAESTRO® PEDICURE SPA

Client-Operated Controls

CLIENT CHAIR CONTROL BUTTONS

Your Maestro pedicure spa has dual control keypads for adjusting the client's chair position during the pedicure. If it becomes necessary to adjust the chair position (move the chair forward, backward or tilt) the technician can utilize these buttons on the Technician Control Keypad (12) without disturbing the client.


ADJUSTABLE HEADREST (1)

The headrest has a built in counterweight that keeps it in position. To adjust, simply move the headrest up or down until a comfortable position is reached.

HEADPHONES (4)

Headphones (supplied) may be used to enhance the exclusive Acoustic Therapy relaxation experience. They are located next to the cup holder on their own headphone hanger.

CHAIR CONTROL KEYPAD (2)

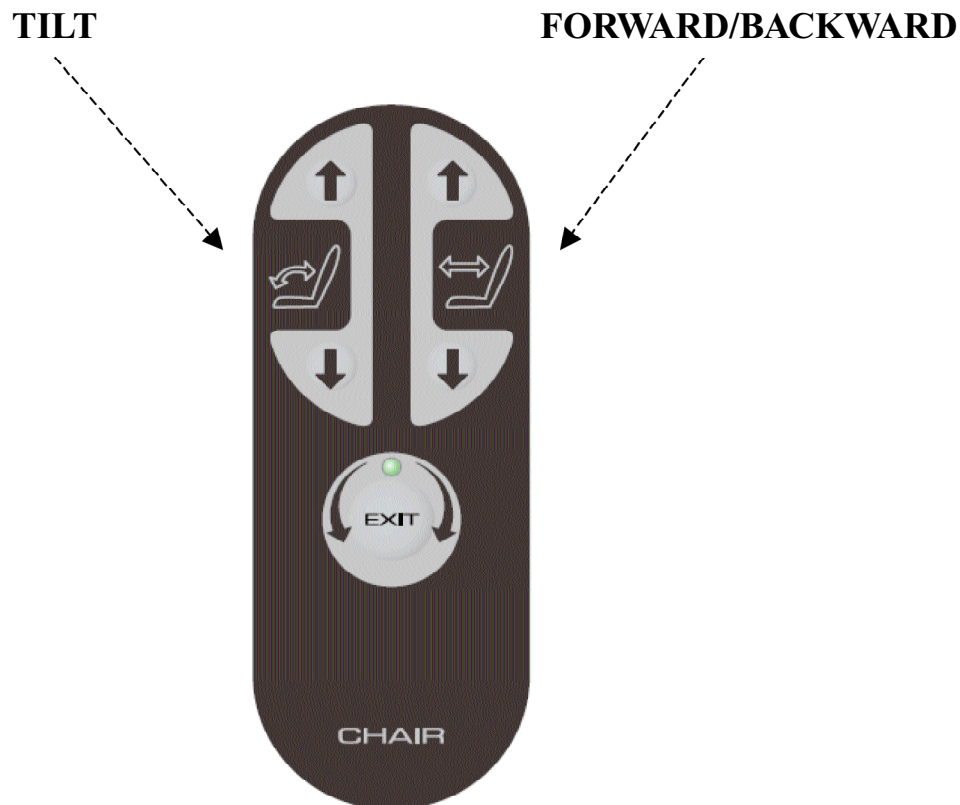

Tilt and Forward/Backward

The client can utilize these buttons to achieve the most comfortable position. The chair will automatically stop when fully tilted, full forward/backward or when you release these buttons.

MAESTRO® PEDICURE SPA

EXIT

This control was designed with the safety and convenience of your client in mind. In order to prevent accidental swiveling of the client chair, the chair is locked during the pedicure and can only move forward, backward or recline. After the pedicure is completed, press and hold the “Exit” button for two (2) seconds. The chair will then return to it’s “Home” position. After the chair stops, the locking mechanism will disengage and the chair can now swivel to the left or right, so the client can safely exit the chair.

NOTE:

After client exits, the chair will swivel back into the straight forward position. The swivel option will be available for ten (10) seconds, and then the chair will lock. To unlock the chair thus enabling the next client to enter, press and hold the “Exit” button again.

ACOUSTIC THERAPY CONTROL KEYPAD (3)

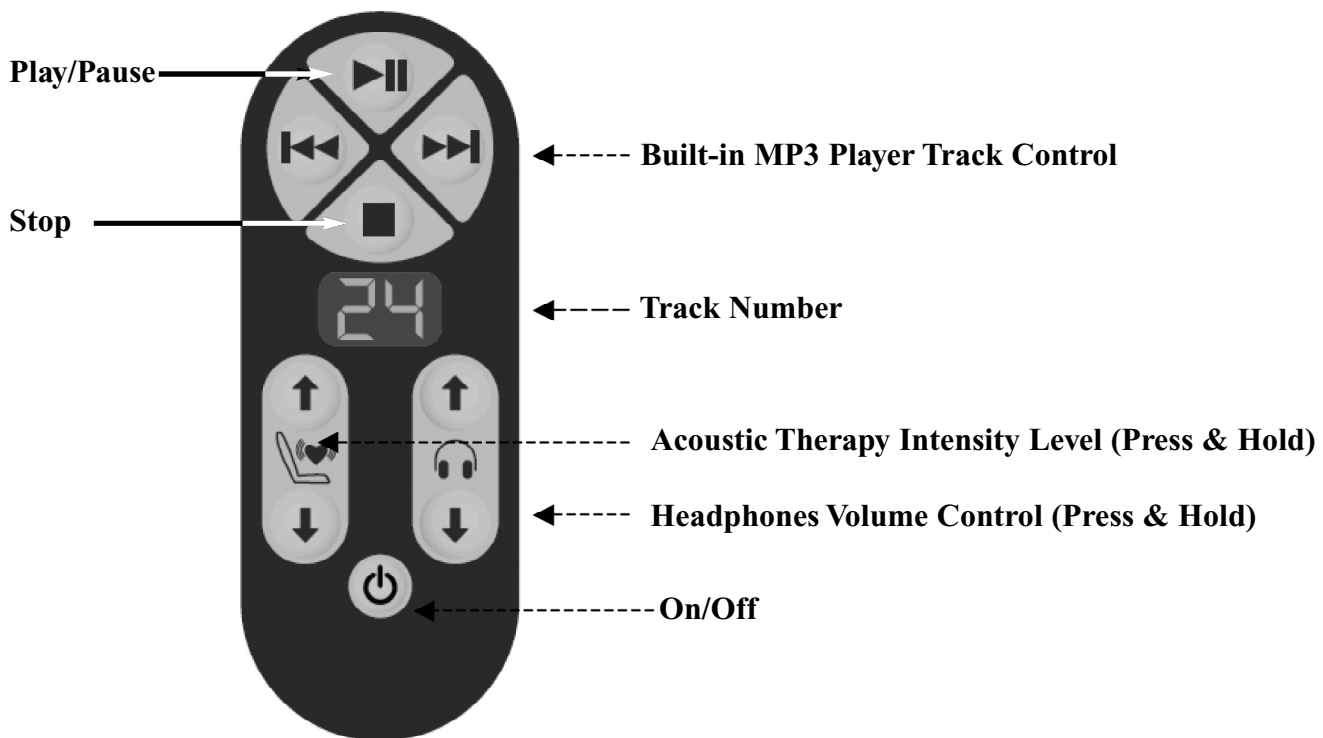


DIAGRAM “A”

One may choose from several specially composed passages that are preloaded into the pedicure spa’s built-in MP3 player or utilize their own MP3 player to create their own Acoustic Therapy experience. The jack for one’s own MP3 player is located at the front of the chair.

MAESTRO® PEDICURE SPA

INSTRUCTIONS FOR BUILT-IN MP3 PLAYER

To ensure a wonderful and relaxing massage experience, please read and follow instructions carefully (refer to Diagram “A”).

Step 1

Press on/off button on control keypad (3).

Step 2

Press play/pause button. The Acoustic Massage system will start. Press the track control arrows to choose from numerous selections. Note: Press the play/pause button **ONLY ONCE**, pressing twice will pause musical selection.

Step 3

To increase volume and/or intensity:

In chair: Press and hold appropriate button on control keypad (3).

Headphones: Press and hold appropriate button on control keypad (3).

Notes and Comments on the Built-in MP3 Player

- Tracks may be changed at any time.
- If the play/pause button is pressed to pause a selection, one must press the play/pause button a second time to start the MP3 Player again.
- Volume/Intensity of headphones or imbedded pulsars are controlled independently of each other.
- Clean headphones after each client with alcohol wipes provided with each pedicure spa. (For additional wipes please contact Continuum Footspas at 877 255 3030)
- MP3 Player will automatically shut off when chair swivels allowing client to exit.
- If one plugs in their own MP3 player, the built-in MP3 player will become inoperative.

MAESTRO® PEDICURE SPA

User Maintenance Instructions Cleaning and Disinfecting

IMPORTANT

YOU ARE REQUIRED TO CHECK WITH YOUR STATE BOARD FOR MANDATORY CLEANING AND DISINFECTING REQUIREMENTS AND PROCEDURES.

The following procedures are important guidelines that will help in keeping your pedicure spa clean and trouble free for years. It is extremely important to clean and disinfect each and every pedicure spa after each pedicure, after the last pedicure of the day and once a week for overnight cleaning.

After Each Client Procedures

1. **Drain** all water from the basin.
2. **Scrub all visible residue** from the inside walls of the basin with a brush or liquid soap and water. Use a clean and disinfected brush with a handle. Brushes must be cleaned and disinfected after each use.

IMPORTANT

The two (2) foot massage rollers located in the basin must be removed and cleaned. When using the EPA registered disinfectant both rollers must be in place within the basin.

3. **Rinse** the basin with clean water.
4. **Refill the basin** with clean water and circulate the correct amount (read the label for mixing instructions) of the EPA registered Hospital liquid disinfectant through the basin for **10 minutes**.
5. **Drain, rinse** and **wipe** dry with a clean **paper** towel.

MAESTRO® PEDICURE SPA

End of Each Day Procedures

1. **Remove** the covers from both NoPipe™ Jets. No tools are required. Simply grip the cover and twist off. To replace, position covers on front of jets, twist and lock.
2. **Clean** the screens and the area behind it with a brush, liquid soap and water to remove all visible residue and replace properly cleaned screens.
3. **Fill** the basin with warm water and chelating detergent and circulate the chelating detergent through the spa system for 5-10 minutes (follow manufacturer's instructions).
4. **Drain** the soapy solution and rinse the basin.
5. **Refill the basin** with clean water **and circulate** the correct amount (read the label for mixing instructions) of the EPA registered Hospital liquid disinfectant through the basin for 10 minutes. (Make sure both foot massage rollers are in place within the basin).
6. **Drain, rinse** and wipe dry with a clean **paper** towel.
7. Allow the basin to dry completely.

At least once each week overnight procedures:

After completing the End of Each Day procedures:

1. Do not drain the liquid disinfectant solution - Turn off the unit and leave the disinfecting solution in the unit overnight **(at least 6 to 10 hours)**.
2. In the morning drain and **rinse**.
3. **Refill** the basin with clean water and **flush** the system.

MAESTRO® PEDICURE SPA

Information about Disinfectants and Detergent Cleaners

- A.** EPA registered liquid Disinfectants used in the salon:
- i. Must have words **bactericidal, fungicidal and virucidal** and **Hospital** or **pseudomonacidal** on the label.
 - ii. Must be mixed, used, stored and disposed of according to manufacturer's label instructions.
*It is against Federal Law to use an EPA registered disinfectant contrary to its label.
 - iii. Must be prepared fresh every day and replaced immediately when the solution becomes visibly contaminated.
 - iv. Are ineffective when proper cleaning is not performed before use.
 - v. Require complete immersion in the correct amount of liquid disinfectant for 10 minutes after cleaning of all visible residue. Complete immersion means enough liquid to cover all surfaces of the item.
 - vi. Spray Disinfectants are used for cleaning surfaces only and is not adequate for disinfecting tools and pedicure equipment in the salon.
- B.** EPA registered Hospital "One-step" cleaner/Disinfectants may be used for disinfecting pedicure equipment if:
- i. They are EPA registered, **Hospital, bactericidal, fungicidal and virucidal** and have the words "**One-Step**" on the label.
 - ii. Tools and equipment are first cleaned of large amounts of residue.
 - iii. Are used exactly as described by the manufacturer's instructions.
- C.** All bottles and containers (other than the original manufacturers' container) containing any disinfectant must be properly labeled listing the contents, percentage solution (concentration), and date of mixing.
- D.** Surfactant chelating detergents help break down residue from pedicure products and are effective in hard water. Hard water contains calcium and magnesium ions, which can inactivate Disinfectant and create residue films that are difficult for ordinary detergents to remove.
- E.** All brushes used to remove visible debris from the footspa, tub or basin must be properly cleaned and disinfected between each use.
- F.** You must record the time of each cleaning procedure in the salon pedicure cleaning log. Keep this log available to show clients. It demonstrates that you regularly clean and disinfect your pedicure equipment, and that your clients are safe.
- G.** Read and follow the instructions provided with the pedicure equipment to ensure proper use.
- H. Water Sanitizers** - Unlike Disinfectants, water sanitizers (such as powders, tablets and ozone), can be added to the water with the client's feet during a pedicure. They can minimize the growth of some organisms in water but should never be used to replace proper cleaning and disinfecting.

MAESTRO® PEDICURE SPA

Care and Maintenance of Wood, Basin and Upholstery

Wood Surfaces

Maintaining the beautiful wood finish of your Maestro Pedicure Spa is easy. Simply clean and polish with any good quality liquid or paste wax polish on a regular basis. While the wood finish is extremely durable and water resistant, it is advisable to wipe dry any water that may splash onto the wood. By doing so, one minimizes the occurrence of dried water spots as well.

If by chance the wood becomes scratched, simply use any light to medium cherry touch up stain. These touch up “pens” are readily available at most hardware stores.

Basin

The Maestro’s solid surface basin is extremely durable and stain resistant. In addition to cleaning and disinfecting procedures as outlines by your state board, one may chose to scrub the basin as well. Simply use any nylon scouring pad (ie; Scotch Bright™) together with a good cleaning powder (ie; Bar Keeper’s Friend™). This additional cleaning will keep the basin of your Maestro Pedicure Spa looking brand new for many years. **NOTE: DO NOT USE THE NYLON SCOURING PAD ON THE ADJACENT LEG SUPPORTS.**

Upholstery

Simply use a mild detergent with warm water and gently clean any dirt or grime that may appear on the seat, seat back or arms. The leather-like material is very durable and with reasonable care should look like new for many years to come.

Leg Supports (2)

Again, a mild detergent and warm water is all that’s needed to clean the padded leg supports. However care should be taken to prevent nail polish or acetone from coming in contact with the leg supports. These products may damage or discolor the outer “skin” of the foam. **NOTE: DO NOT USE THE NYLON SCOURING PAD ON THE ADJACENT LEG SUPPORTS.**

MAESTRO® PEDICURE SPA

If You Don't Read Anything Else, Please Read This!

Tips for Getting the Most from Your Maestro® Pedicure Chair

- Always use a hand towel to cover and protect the footrest/leg support area. It will certainly help to keep your Maestro looking brand new.
- While we strongly recommend using an abrasive cleanser and a Scotch Brite® medium duty pad for cleaning the basin, DO NOT use this for cleaning the two adjacent leg supports. Doing so will damage the outer layer of the leg support. Use only a mild cleaner and soft cloth to remove dirt from the leg supports. Better yet, as suggested above, use a hand towel to cover and protect this area.
- As a result of residual pressure all sprayers drip somewhat. Shut the sprayer off by pressing "Sprayer" located on the Tech Keypad. Depress the button on the handheld sprayer and gently shake any excess water into the basin. Rather than return it to the saddle, you may choose to place the sprayer hose between the leg supports with the sprayer head in the basin.
- Press hold the "Exit" button for three seconds to return the chair to the home position. You may have to move the chair ever so slightly to disengage the chair locking mechanism. This is perfectly normal.
- Leg supports have been designed and engineered to lock in the up position. It may be necessary to gently push down on the leg support to make sure it locks securely. To unlock, lift up and carefully position to side of basin.
- While the wood finish on your accessories is water resistant, harsh chemicals may damage the finish. **Please be careful.**
- For your convenience we have designed a storage compartment for your Pedicure Log Book. It is located directly beneath the shoe/handbag storage shelf.

May 2009

www.salonpedicurespas.com

MAESTRO[®] PEDICURE SPA

NOTES:

MAESTRO® PEDICURE SPA

After Client Pedicure Cleaning Log

Date (m/d/yr): _____ Station # _____ Serial # _____

Service No.	Client	Time	Staff
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			

Date (m/d/yr): _____

Service No.	Client	Time	Staff
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			

Date (m/d/yr): _____

Service No.	Client	Time	Staff
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			