

LUXURY

Scalp Massage Bed Manual



CATALOGUE

Before Use

1.Safety Precaution	1
2.Product Features	3
3.Product Structure Design.....	4
4.Grid Pad Placement	4
5.Preparation Before Installment	5

Usage Method

1.Operation Method of Shampoo Bed	7
(Automatic Operation)	
2.Instructions for Intelligent Remote Control	7
3.Instructions after Use	8

In Case of Doubt

1. Maintenance Method	10
2.Maintenance & Storage	10
3. Troubleshooting	11
4. Description	12





CHAPTER

01

BEFORE USE

Safety Precautions

Product Features

Product Structure Design

Water Circulation

Preparation Before
Installment / Use of Bearing
Feet

SAFETY PRECAUTIONS

- Please read this “**SAFETY PRECAUTIONS**” carefully and use it correctly before use
- The following precaution will help you use this product safely and correctly to prevent danger.
- Each precaution is divided into “warning” and “attention” according to the degree of danger of accident.
- After detailed reading, please put it in an easy place to read and keep it properly.

WARNING

DO NOT SIT ON HANDRAILS, LEG MESSAGE AND OTHER PARTS	In order to avoid overturning injury and damage to the machine
DO NOT USE POWER SUPPLY WITH NON SPECIFIC VOLTAGE	Using other voltages may cause accidents such as electric shock and fire
WHEN THE SHAMPOO MASSAGE BED FAILS	Please unplug the power plug, immediately and call the seller for inquiry & repair
IN CASE OF POWER FAILURE	Please cut off the power switch and unplug the power in order to prolong the service life of the machine itself
WHEN NOT IN USE	Please turn off the power switch & unplug the power plug from the socket
WHEN THE POWER CORD. & PLUG ARE DAMAGED	Dust and humidity will cause insulation aging. In order to avoid danger, it must be replaced by the manufacturer or its maintenance department or similar full-time personnel
THE MACHINE SHOULD BE PLACED ON A STABLE FLOOR FOR USE	When placed in an unstable place, it may cause loud noise and make you uncomfortable during message
WHEN THE CLOTH IS FOUND TO BE DAMAGED	Please do not use it and inform the seller immediately to avoid accidents



Under the following conditions, please use it with advice of your doctor

- Patients who are being treated by doctors, especially those who feel abnormal
- Patients with abnormal spine (such as those with bent spine)
- Patients with malignant tumors
- Patients with various acute diseases (osteoporosis)
- Pregnant women, women in psychological period
- People who must keep quiet
- People with heart disease (angina pectoris, myocardial infarction & other heart patients & cardiac pacemakers)
- Patients with high fever
- Physically weak
- People with perception disorders



Be Careful

PLEASE MAKE SURE TO INSTALL GROUNDING	In order to avoid electric shock caused by fault & leakage. In addition, please consult the seller when installing grounding
DO NOT WIPE WITH GASOLINE, TIANNA WATER, ETC	It may cause aging, discoloration & fire
DO NOT RIDE IN THE BACKREST OR ARMREST	May cause accidental injury & failure
DO NOT NOT MOVE ON THE WOOD FLOOR OR CARPET	May damage the ground
DO NOT USE IMMEDIATELY AFTER MEALS	May cause physical discomfort
DO NOT MOVE AFTER CARRYING PEOPLE OR OBJECTS	May cause injury & failure
PLEASE DO NOT WASH YOUT HAIR. THE MASSAGE BED CAN CARRY MORE THAN 2 PEOPLE	May cause injury & failure
DO NOT USE WITHOUT WEARING TREE CLOTHES	Direct skin massage may cause skin pain
DO NOT USE HARD OBJECTS, SHARP OBJECTS, OR COLLISIONS HANDRAILS	So as not to affect the appearance of handrails
PATIENTS WITH LUMBAR SPONDYLOSIS ARE ADVISED NOT TO MOVE THIS PRODUCT	SO as not to hurt the waist

PRODUCT FEATURES

APPEARANCE DESIGN

Streamline & 3-dimensional appearance design is adopted, which is beautiful & generous as a whole.

LEG AIR PRESSURE DESIGN

The full air pressure massage makes the leg massage feel more substantive

BAROMETRIC MASSAGE

The massage feels stronger and deeper, providing youthful with a super sensory enjoyment, which can meet your broader coverage from legs, waist to hands.

180° SUSPENSION DESIGN

Designed strictly according to ergonomic structure, it is more comfortable to use.

SAFETY MOTOR EQUIPMENT

DC24V safety motor design is adopted, with low noise and more comfortable massage feeling.

SIMPLE MAINTENANCE OF WATER PARTS

The installation, maintenance and replacement of head basin, water switch and sprinkler are simple & convenient.

VARIOUS MASSAGE TECHNIQUES

This shampoo massage bed has finger pressure, massage, kneading, hammering, air pressure, back opening & other techniques, and can combine these basic techniques for massage.

AUTOMATIC BACK DETECTION


Infrared positioning accurately measures different body types, automatically detects the length of the spine, and adjusts the massage to a comfortable state.

PRODUCT STRUCTURE DESIGN



WATER CIRCULATION


Before turning on the water and electricity, please connect the drain, hot water and cold water pipes under the bottom of the wash basin.

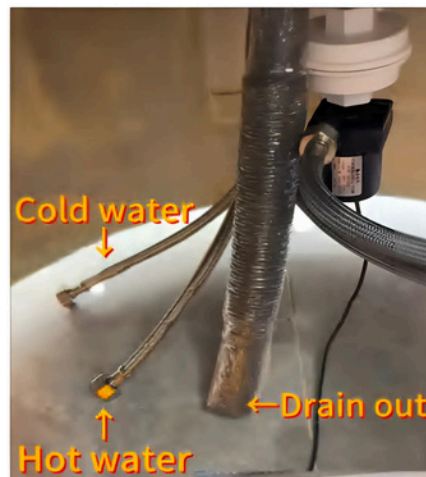

PREPARATION BEFORE USE

1. FOR SETTING PLACE

- Please avoid placing the massage shampoo bed in the place where the sun shines for a long time or near the high-temperature heater etc.
- In order to prevent the ground damage and use feeling caused by shaking, please place the shampoo massage table in a flat area.
- Try to avoid placing the shampoo massage bed in an area with large water stains.

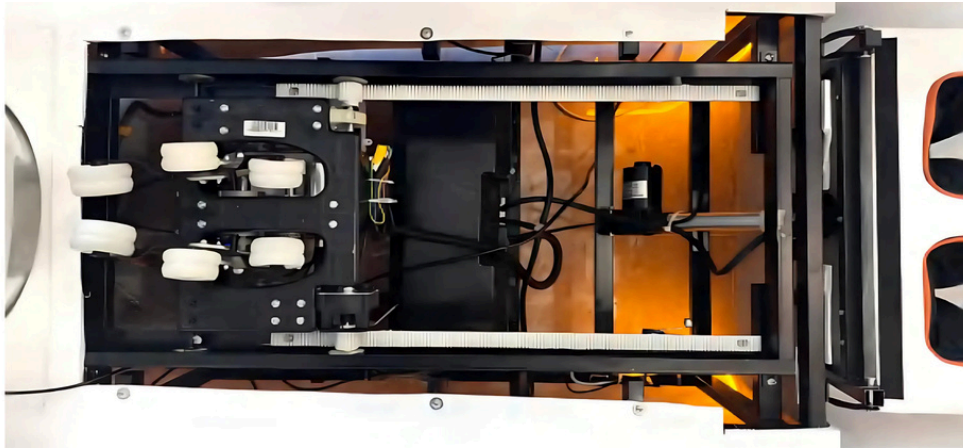


2. ENSURE THE SPACE OF THE SHAMPOO MASSAGE BED

1. When placing the shampoo massage bed, pay attention to keeping the distance between the shampoo massage bed and the wall or other objects.
2. Confirm whether there are people, pets, obstacle, etc. on the machine.

3. POWER ON METHOD

1. Plug the power plug into the wall socket before inserting the power plug. Confirm that the power switch is in the off position.

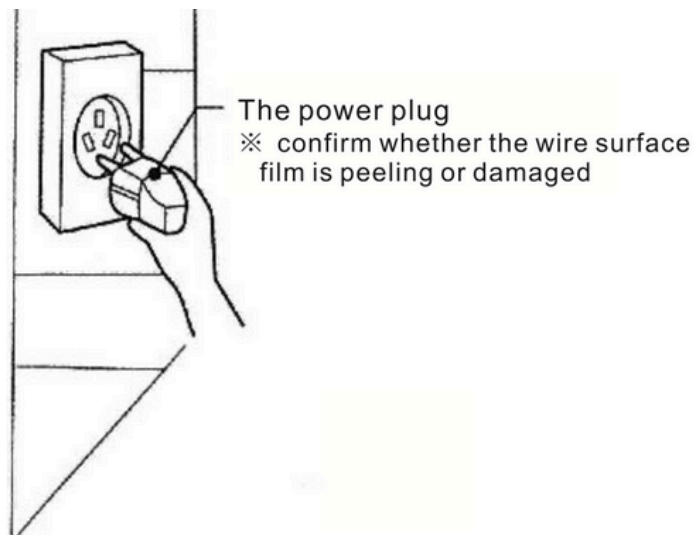



CHAPTER

02

USAGE METHOD

Operation Method of
Shampoo Bed
(automatic operation)

Instructions for Intelligent
Remote Control


Instructions After Use

OPERATION METHOD OF SHAMPOO MASSAGE BED (AUTOMATIC OPERATION)

1. INSERT THE POWER PLUG INTO THE SOCKET


2. TURN ON THE POWER SWITCH (AS SHOWN IN THE FIGURE)

- (The power switch is at the bottom of the right side of the fuselage first place the switch button at =. The remote control will make a beep.

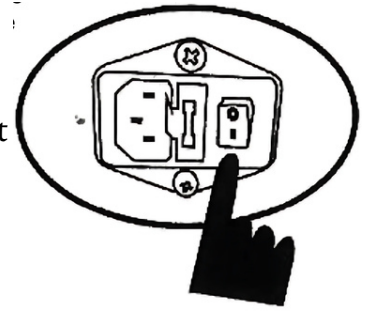

3. START THE "ON/OFF" KEY (AS SHOWN IN THE FIGURE)

- This key is the on key of the remote control. After starting up, the display will light up and the automatic function will be turned on; Press shut down again to turn off the display & stop the automatic function.

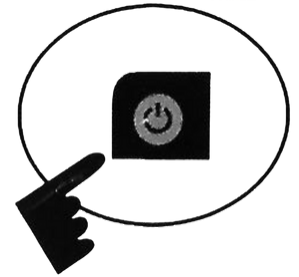

INSTRUCTIONS FOR INTELLIGENT REMOTE CONTROL




POWER ON: Please gently tap the switch button once

POWER OFF: Tap and hold the switch button for 3 seconds

INSTRUCTION AFTER USE

RESTORE THE SHAMPOO MASSAGE TABLE TO ITS ORIGINAL STATE

- Massage the hands & feet back to the original position
- Press the open key once, and the massage hands and feet will return to their original positions.

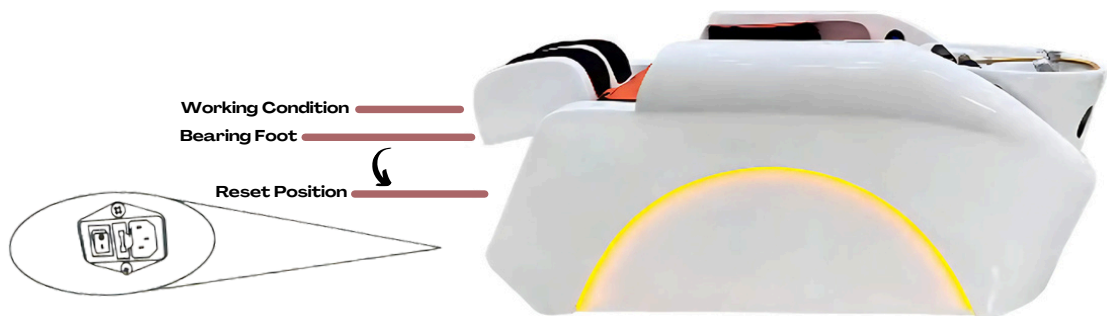

- Turn the switch at the bottom right of the fuselage to the off position & turn off the power.



MOVE METHOD

- As shown in the figure, unplug the power cord from the plug, put it on the shampoo and massage bed, and then lift it up one by one to move it to the position you need.

BE CAREFUL

1. When moving, pay attention not to drag the power cord on the ground to prevent damage to the power cord.
2. DO NOT drag the shampoo massage bed on the floor to prevent damage to the power cord.
3. Please DO NOT drag the shampoo massage bed on the cement floor and other floors to prevent damage to the shampoo massage bed and foot mats.



CHAPTER

03

IN CASE OF DOUBT

Maintenance Method

Maintenance & Storage

Troubleshooting

Description

MAINTENANCE METHOD

WARNING

When carrying out the maintenance and cleaning, please turn off the power switch first and unplug the power plug from the socket.

MAINTENANCE METHODS AND STEPS OF SHAMPOO MASSAGE BED

METHODS: The maintenance methods are different according to the material of the **toilet cloth**. Please confirm the material of the cloth before maintenance. When cleaning, please use soft dry cloth to wipe (do not let chemicals such as petroleum essence, alcohol, or diluent drop on the shampoo massage bed), otherwise it will lead to damage to the shape and deterioration of the leather cover. Wet and wring the soft cloth with warm water and appropriate detergent, wipe it by patting, and then gently wipe it with a dry cloth to let it dry naturally. (Do not dry it by rapid drying)

STEP: Please wipe the following parts in the above way

1. Body shell
2. Shampoo basin
3. Pillow pad
4. Backrest leather

FUSELAGE (Handrail Part)

1. Please tighten the soft cloth in the diluted neutral washing, and then screw the cloth dry.
2. Wipe the dust on the machine table with a wrung dry cloth, and finally wipe it with a clean dry cloth.

MAINTENANCE & STORAGE

USUAL MAINTENANCE

1. After using the machine, if there are stains on the machine, please wipe it with a wet cloth soaked in neutral detergent, then wipe it with a wet cloth stained with clean water, and then wipe it with a dry cloth.
2. Extend the service life of the machine (please let the machine rest for 15 minutes after 120 minutes of use).
3. After each use, reset the backrest and foot rest of the shampoo massage bed.
4. The scaffold should be placed gently, and do not press, sit or step on it.

STORAGE METHOD

Please keep it under the following conditions:

- Temperature: 0 ° C-40° C
- Humidity (no condensation) 30%rh~85%rh
- Please be careful not to store it in places with high temperature, humidity and direct sunlight.
- Do not keep it in. a place with corrosive gas.

PLACE OF STORAGE

- First clean the machine, and then put it in a dry and dust-free place.
- Don't use the shampoo massage bed in the environment with too much dust oil, humidity, or smoke.
- Don't put the shampoo massage bed too close to the heating out.
- Don't put the shampoo massage bed in the place where the sun shines directly.
- Don't use the shampoo massage bed outdoors.

TROUBLESHOOTING

PHENOMENON	INSPECTION METHOD	PROCESSING METHOD
The sound of "whew" and "tap" appears in the action	It belongs to the normal sound of the motor and does not need any inspection	No treatment required
The sound is quite loud during massage	Whether it is used continuously or for a long time for more than 4 hours	Please cut off the power and let it rest for more than 1 hour
Feel the surface heat	Is it longer than 4 hours	Shut down and rest for half an hour to hours before using
Sometimes the shampoo bed stops	Whether the force is too large and the power supply is loose	Remove the load and try again or check the power supply
Stops or stop halfway	Failure to press on/key after power on	Press the "on/off" key once and select any function key
	The timer action cuts off the massage function	Please press the "on/off" key and function key again
	The massage ball did not rise to the highest level just after the power was turned on	Press the function key after the massage ball rises to the highest position
	Power is not connected	Plug in the power plug and turn on the power switch
When the backrest rises to the top, the backrest vibrates with frequency	Whether the pressure is too large	Reduce force (non-mechanical failure)

When the other settings on the control box do not work properly, please turn off power, Turn on the power for a while and try again: If there are still abnormal phenomena after the above treatment, please contact the local sales department.

DESCRIPTION

MODEL	BZ-168
FUNCTION	3 kinds of automatic functions, backrest, tripod electrical lifting, forehead kneeling, backhand kneading, hammering, kneading/hammering force adjustment, hair air pressure, wait air pressure, leg air pressure, 180° ergonomic design
TRIP	780mm
LYING ANGEL	180° lie flat
POWER SUPPLY	110V~240V, 50~60Hz
STAFF CONSUMPTION	120W
TIMING SETTING	The default is 15 minutes. There a four times available: 15 minutes, 25 minutes, 35 minutes and 45 minutes
SAFETY DEVICE	Prevent overheating, overcurrent, over-voltage, program abnormal protection, and the automatic shutdown function of the foot support pressure protection device.
NET WEIGHT/GROSS WEIGHT	HOST: 80/0
PACKAGE SIZE	Main box: 1840x820mm

*Specifications are subject to change without notice