


OWNER MANUAL

PLEASE SAVE THIS MANUAL
FOR FUTURE REFERENCE

Diva™
FOOT-SPA

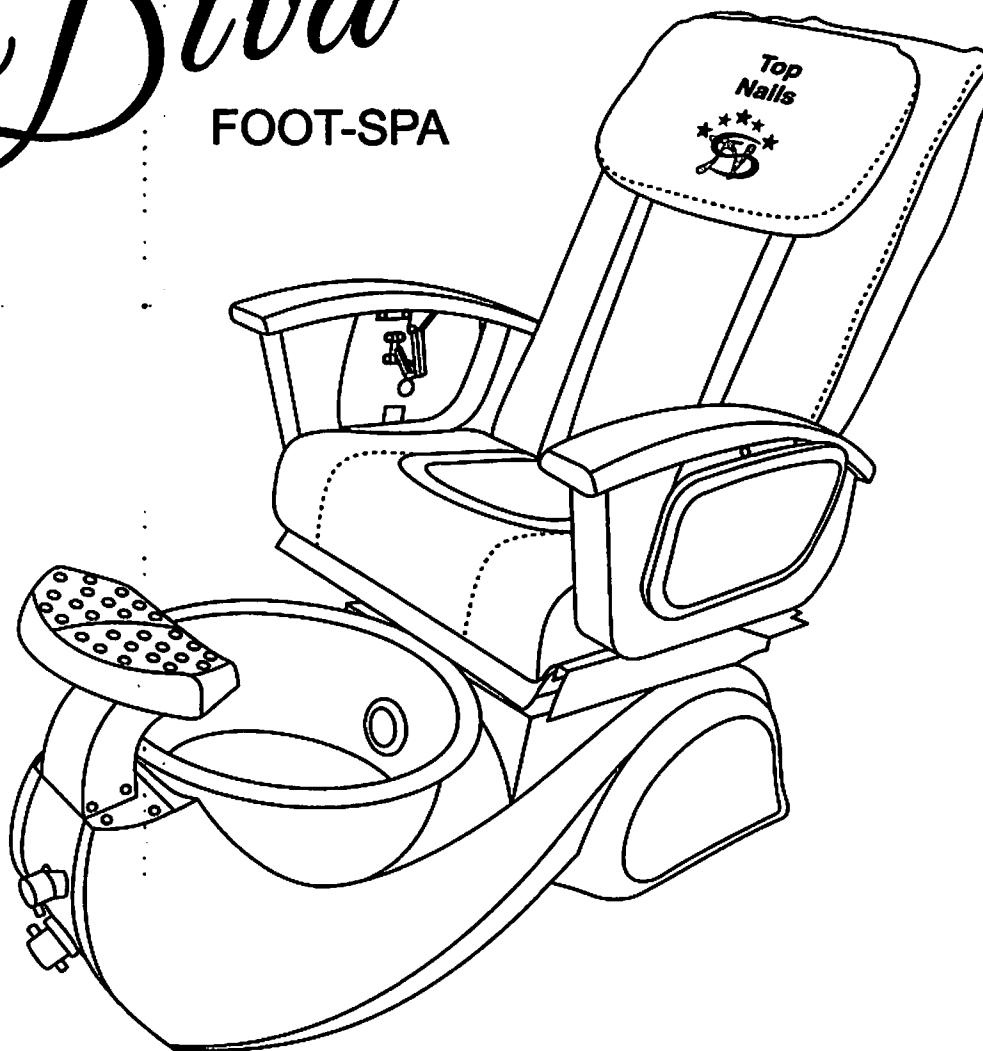

Manufactured by Top Nails
For distribution by Top Nails Supply



www.topnailsupply.com

READ AND FOLLOW INSTRUCTIONS CAREFULLY

SAFETY AND PRECAUTION:

This product is to be connected to a branch circuit outlet protected by a Class A GROUND FAULT CIRCUIT INTERRUPTER (GFCI), and the GFCI shall be tested regularly for continued protection and correct operation. If a Class A GFCI protected outlet is not available, **DO NOT USE THIS PRODUCT!** Please contact a licensed electrician for installation of a Class A GFCI according to local electric codes, or equivalent.



Warning

**THIS PRODUCT IS FOR IN DOOR USE ONLY
DISCONNECT POWER SUPPLY CORD BEFORE SERVICING AND CLEANING
MAXIMUM LOAD – 250 lbs.**

ATTENTION:

- LIRE LES INSTRUCTION DU FABRICANT AVANT DE METTRE EN MARCHE
- UTILISER SEULEMENT A L'INTERIEUR
- COUPER LE COURANT AVANT DE PROCEDRE AU DEPANNAGE,
AU NETTOYAGE



Warning


1. Excessive water temperature is dangerous and should be checked **BEFORE** use.
2. Maximum temperature of the water should never exceed 100 degrees F.
3. Always enter and exit the footspa from the side slowly and carefully. *Salons are solely responsible for instructing the customer on the proper procedure. Do not stand in the tub.*
4. **NEVER** bring and / or operate any electrical devices into or near the footspa.

RECEIPT AND INSPECTION

PLEASE TAKE NOTE! Thoroughly inspect each shipment immediately upon arrival. It is important that you notify the driver and insist on a notation of the damage. Make this notation directly on the freight company's way bill or bill of lading. Failure to note damage on the way bill or bill of lading may impede and/or prevent any claims that you may have against the freight carrier.

If concealed loss or damage is found, you must notify the carrier at once and request an inspection. **DO NOT DISCARD THE SHIPPING BOX.** If you give the carrier a clear receipt for goods that have been damaged in transit, you do so at your own risk and expense.

IDENTIFY YOUR FOOT-SPA

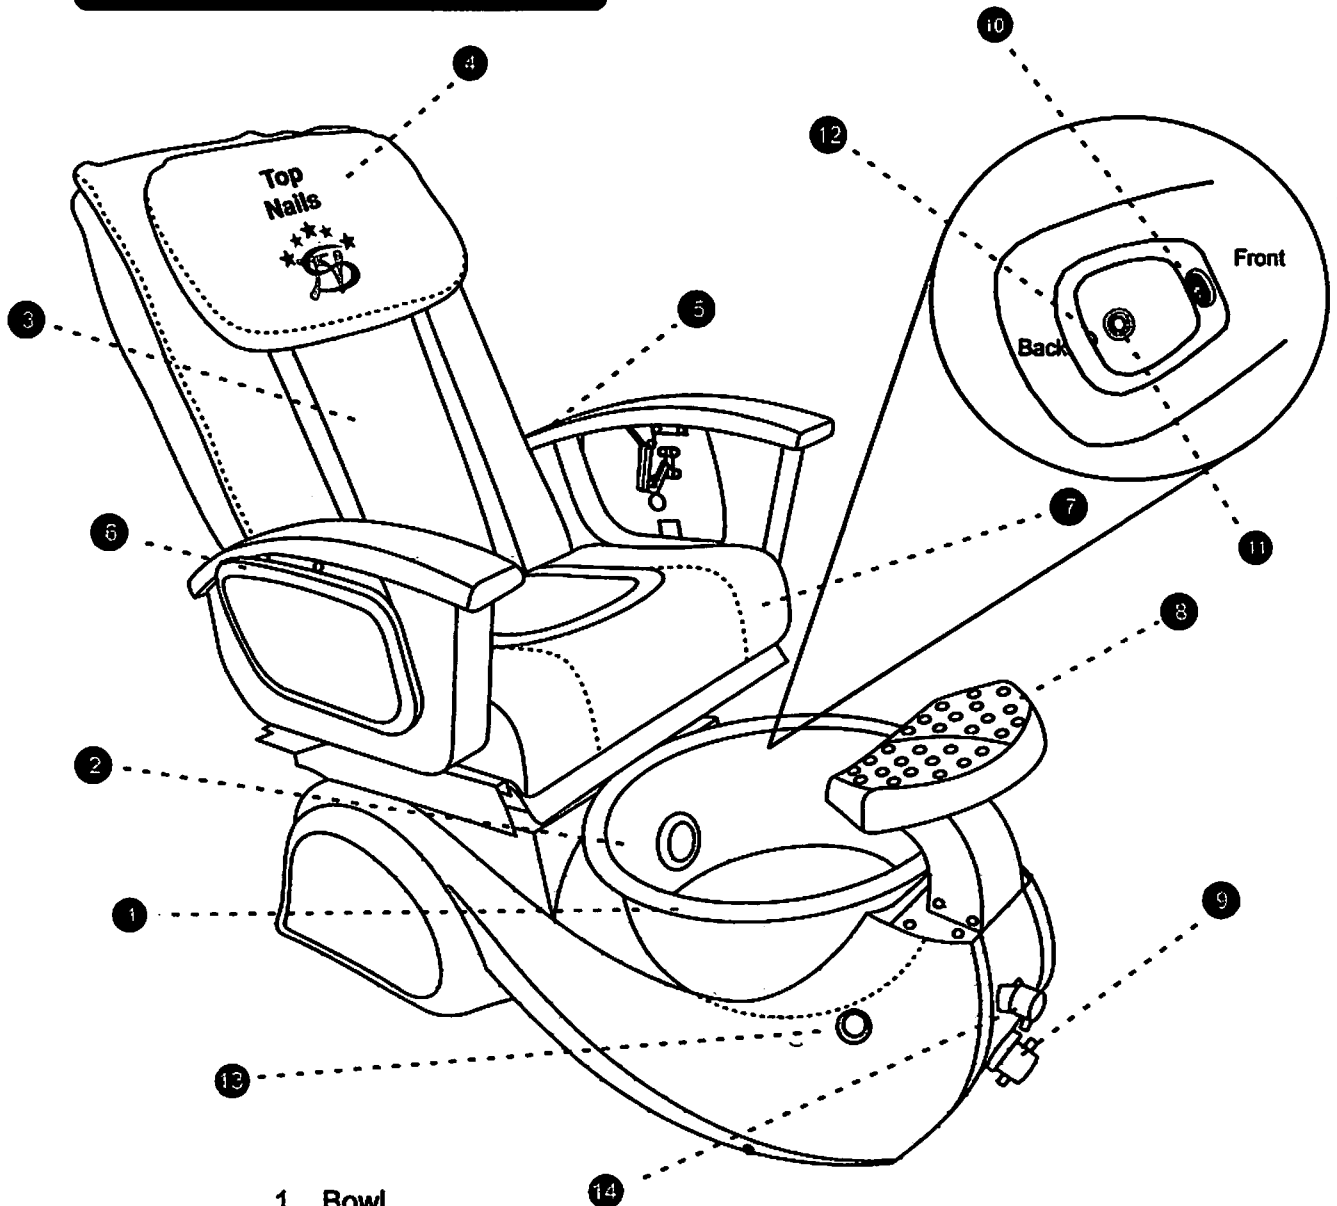


1. Bowl
2. Water Filler
3. Back Cushion & Massage
4. Headrest Cushion with Logo
5. Wooden Armrest
6. Flip-out Manicure Tray
7. Seat Cushion
8. Adjustable Footrest
9. Front Control Panel
10. Jet
11. Drain
12. Light
13. On - Off
14. Drain Control


IDENTIFY YOUR FOOT-SPA

SEAT OPERATION

Armrest can be raised up/down

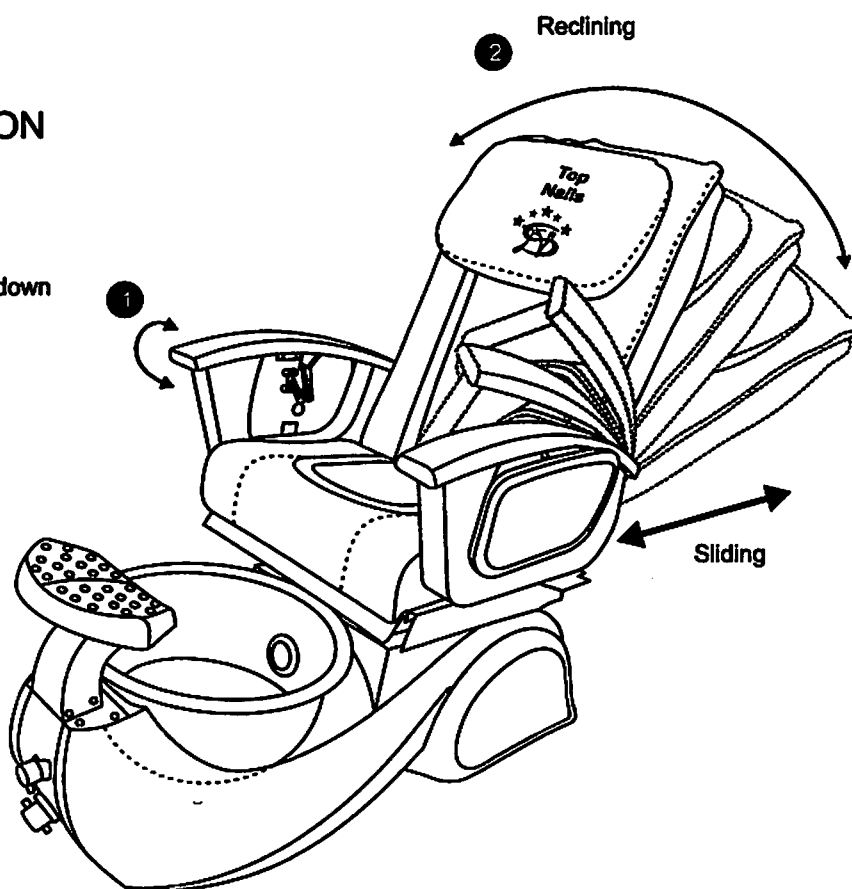


SPA DIMENSION

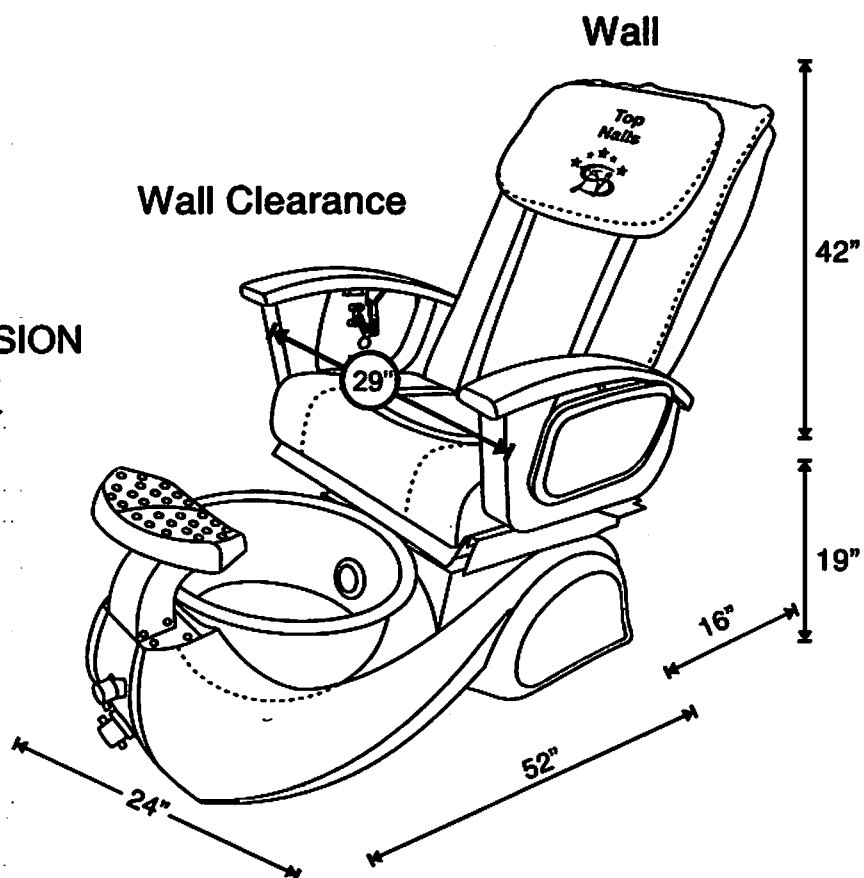


INSTALLATIONS

Attaching The Seat to The Base

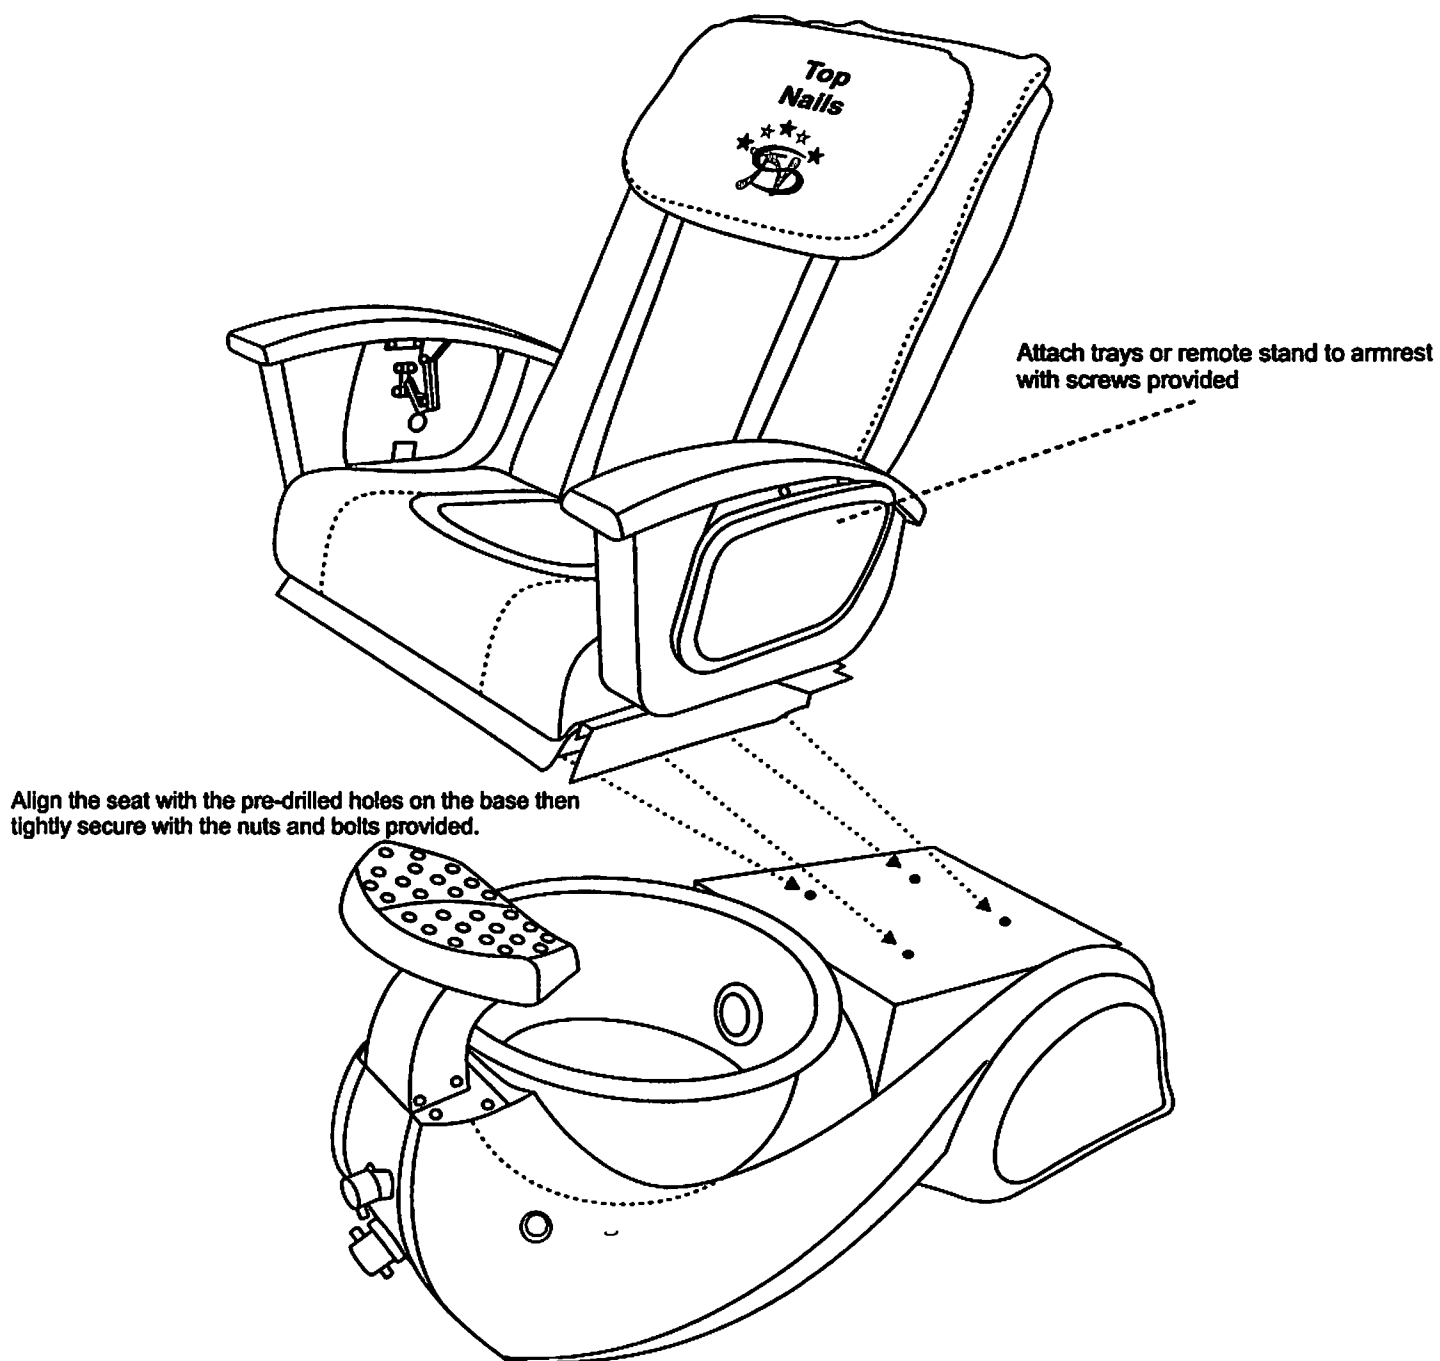


wall Drain installation

Wall

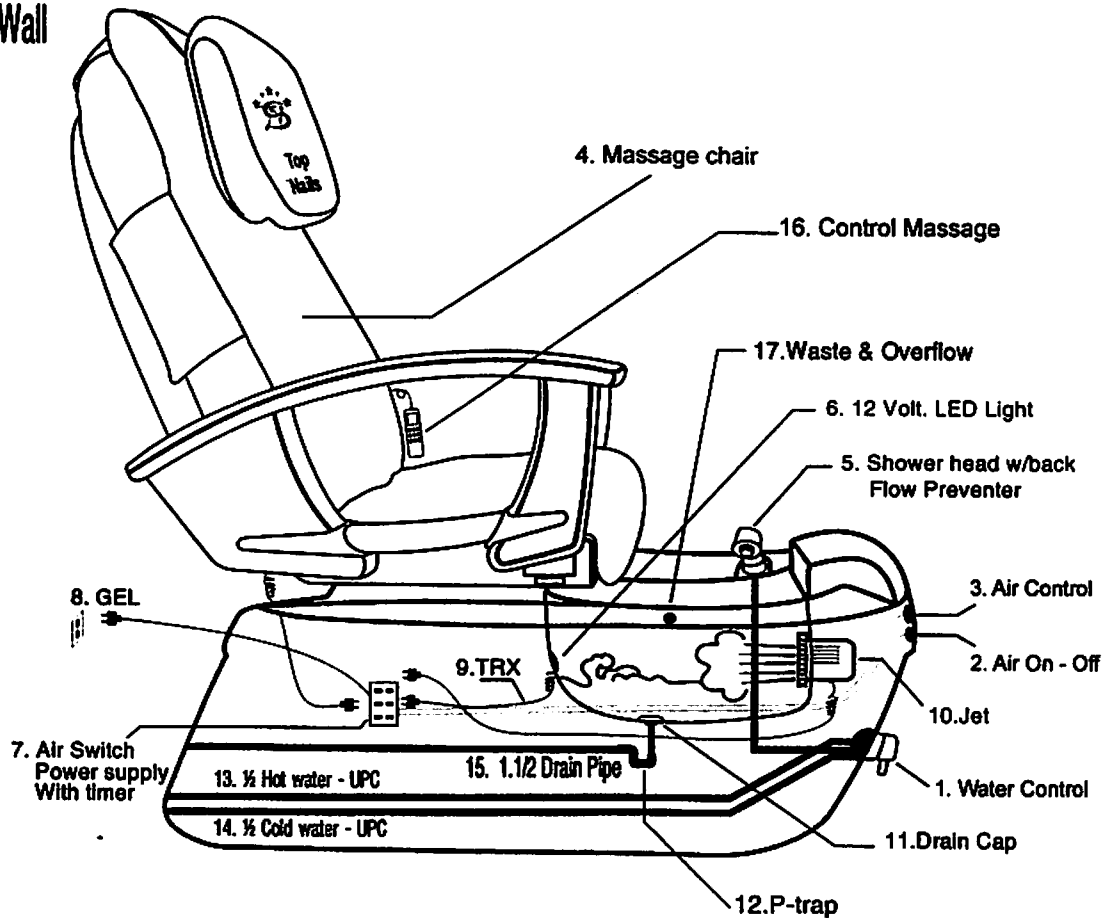

Gravity Drain Installation


Wall

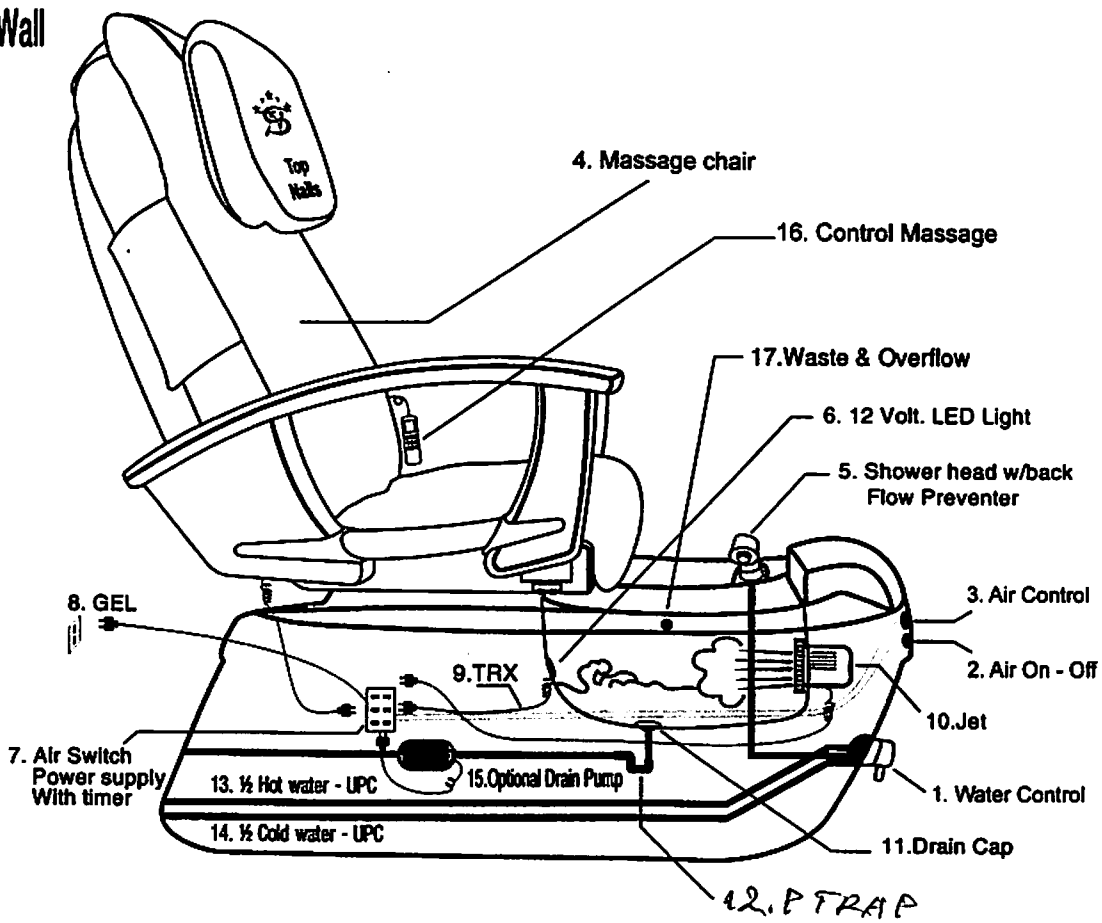


INSTALLATIONS

Plumbing Connections

Gravity Drain

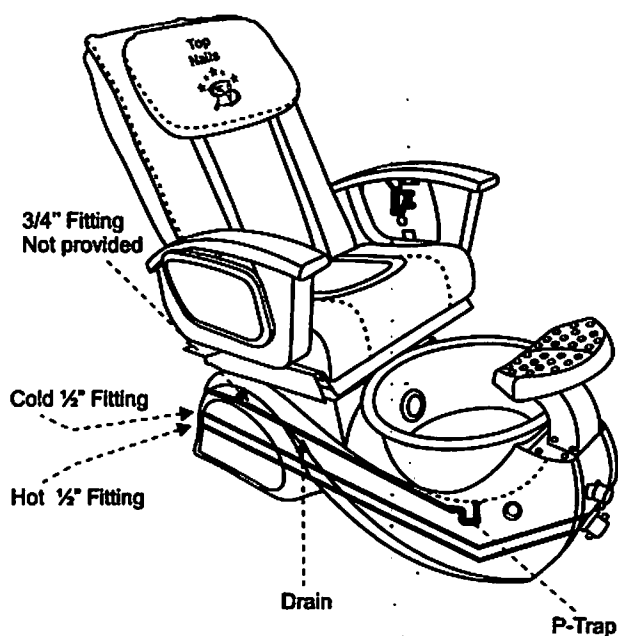

Power Drain

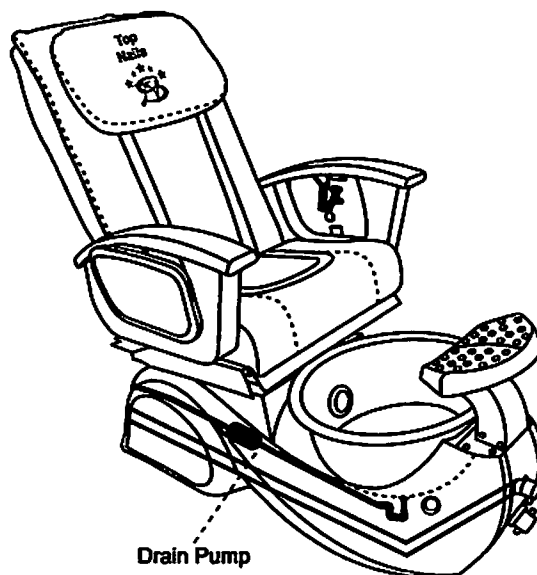

1. Discharge pump may be connected to an existing sink drain or floor drain. It can also pump up to 7 ft high, but this will increase the length of the drain time. The drain connection is at the rear of the unit by a 1/2" fitting.
2. Gravity drain uses a standard gravity drain. A floor drain is recommended. Connection via a P-Trap is supplied.
3. Hot and cold water supply connections are located at the rear of the unit (1/2" fittings). Please be advised that the hot and cold water supply lines are not fitted with optional back flow Preventers unless ordered at initial sale.
4. Have a qualified licensed electrician to install the wiring according to local codes. The Cleanjets are 1/10 hp, 120V, 1.2 AMP 60OHZ. A 15 amp GFI protected circuit must be used to supply power to the unit. The roller back massage chair uses a 115V supply.
5. Spa base should be anchored securely to the floor. The base may be anchored through the opening in the back of the base wherever access is convenient for the installer.

**FAILURE TO ANCHOR THE BASE MAY RESULT IN PERSONAL INJURY OR DAMAGE TO THE UNIT.
DAMAGE AS A RESULT WILL VOID THE WARRANTY.**

READ AND FOLLOW INSTRUCTIONS CAREFULLY

SAFETY AND PRECAUTION:

This product is to be connected to a branch circuit outlet protected by a Class A GROUND FAULT CIRCUIT INTERRUPTER (GFCI), and the GFCI shall be tested regularly for continued protection and correct operation. If a Class A GFCI protected outlet is not available, **DO NOT USE THIS PRODUCT!** Please contact a licensed electrician for installation of a Class A GFCI according to local electric codes, or equivalent.



Warning

**THIS PRODUCT IS FOR IN DOOR USE ONLY
DISCONNECT POWER SUPPLY CORD BEFORE SERVICING AND CLEANING
MAXIMUM LOAD – 250 lbs.**

ATTENTION:

- LIRE LES INSTRUCTION DU FABRICANT AVANT DE METTRE EN MARCHÉ
- UTILISER SEULEMENT A L'INTERIEUR
- COUPER LE COURANT AVANT DE PROCEDRE AU DEPANNAGE,
AU NETTOYAGE



Warning

1. Excessive water temperature is dangerous and should be checked **BEFORE** use.
2. Maximum temperature of the water should never exceed 100 degrees F.
3. Always enter and exit the footspa from the side slowly and carefully. *Salons are solely responsible for instructing the customer on the proper procedure. Do not stand in the tub.*
4. **NEVER** bring and / or operate any electrical devices into or near the footspa.

RECEIPT AND INSPECTION

PLEASE TAKE NOTE! Thoroughly inspect each shipment immediately upon arrival. It is important that you notify the driver and insist on a notation of the damage. Make this notation directly on the freight company's way bill or bill of lading. Failure to note damage on the way bill or bill of lading may impede and/or prevent any claims that you may have against the freight carrier.

If concealed loss or damage is found, you must notify the carrier at once and request an inspection. **DO NOT DISCARD THE SHIPPING BOX.** If you give the carrier a clear receipt for goods that have been damaged in transit, you do so at your own risk and expense.

ELECTRICAL AND SPA COMPONENT SPECIFICATIONS

All electrical connections **MUST** be made by a qualified, licensed electrician in accordance with Local and National Electrical and Building Codes. A 110V~50/ 60 Hz, 15 Amp, GFCI protected grounded circuit **MUST** be used to supply power to the Foot Spa. A dedicated circuit must be used with a GFCI. All wiring must conform to National & Local Electrical Codes.



WARNING: IT IS EXTREMELY IMPORTANT THAT THE FOOT SPA OPERATES WITH GFCI PROTECTION

VERY IMPORTANT

Both chair and seat are adjustable. When both are at maximum positions one must allow 18" (44 cm) from back wall to foot spa. This minimum distance assures unobstructed recline. Distance may be shortened, however, seat back will not recline to maximum without wall interference.

SPA SPECIFICATION:

Spa Descriptions:

- * Construction: Marble composite, high gloss, acetone-proof gel coat.
- * One (1) Air source controls.
- * Electro-mechanically operated reclining and sliding seat with hand held control.
- * 1 no-pipe jets. (Pipe-free technology.)
- * Height adjustable foot rest.
- * Extendable wash and rinse water spray.
- * Spout is positioned above water line; air gap is 3 times larger than water inlet's diameter to accommodate with back-flow prevention required
- Per varying city requirements, Top Nails does not supply backflow preventer.
- * Both left and right arms swing open with Nova & Dolphin . Xo.slide forward & backward

SPECIFICATIONS	
Dimensions & Weights	Nova : L=56", W=33", H=53"; 270 lbs. Dolphin: L=56", W=33", H=52"; 250 lbs. Xo : L=49", W=28", H=52"; 220 lbs. Shipping weight: 320 lbs, 300 lbs, and 270 lbs respectively.
Spa Water Capacity	~5 US. Gallon
PureFlo	110 VAC/85 W x 2 motors
Seat & Back Motors	28 V DC Linear Actuators; 3.2A- 80VA output
Massage Motors	24VDC, 2A
Discharge Pump	Motor – 120VAC at 85W 60Hz Maximum flow rate 600 GPH @3' (6 GPM)
Power Source	115 ~50/60HZ, 10A for conventional jets; 6A for PLT jets
Electrical Switches	One (1) On / Off push, air-activated safety switch for Whirlpool Pump One (1) On / Off push, air-activated safety switch for Discharge Pump Two (2) low voltage controls for massage motors and seat movement motors
Plug & Play Installation	Installation should be made with connection at the external interface parts. Please consult with your local plumber.
Safety	All parts from there pedicure spas are approved or meet ETL,UL, and CSA conphiance requicement

OPERATION AND CARE INSTRUCTIONS

Filling

Close the over-flow/waste control. Utilizing the single lever faucet located on the front of the Foot Spa, fill the tub to the water level mark line located on the back tub wall. You must completely submerge all jets. If during the operation of the whirlpool, the water level decreases, simply add more water.

Starting Whirlpool

Press the 'WHIRLPOOL' button on the front of the Foot Spa to turn on. Press again to shut off.

Draining

Turn the over-flow/waste assembly to drain water from the tub and plumbing system. Press the 'DISCHARGE' button on front of the Foot Spa to turn on. Press again to shut off when water is drained.



Warning: Do NOT turn the Jets 'ON' unless adequate water is in the tub. Do NOT run discharge pump when dry.

WARRANTY IS VOID WHEN THE PUMP HAS BEEN RUN DRY

NOTE: Whirlpool action can cause even small amount of soap or body oil to foam excessively. For this reason, refrain from using these products during the whirlpool cycle.



CAUTION:

DO NOT USE if you are diabetic, have poor circulation, or if any area of your feet or legs is inflamed or has an open sore. Consult your physician before using if you have any kind of fungal infection, swelling, fracture or persistent pain.

MAXIMUM LOAD ± 300 lbs.

TEXAS BOARD OF BARBERING AND COSMETOLOGY REGULATIONS

ORDER OF ADOPTION BOARD OF BARBERING AND COSMETOLOGY

Title 16, Division 9 of the Texas Code of Regulations.

(1) The Board hereby Amends Section 980.1 of Article 12 to read as follows:

980.1. Procedures for Cleaning and Disinfecting Whirlpool Footspas, and Air-Jet j Basins.

(a) As used in this section, "whirlpool footspa" or "spa" is defined as any basin using circulating water.

(b) An air-jet basin is defined as any basin using an air jet stream system to move water .

(c) After use upon each patron, each whirlpool footspa or air-jet basin shall be cleaned and disinfected in the following sequential manner:

- (1) All water shall be drained from the basin.
- (2) The inside walls of the basin shall be scrubbed and cleaned of all visible residue with a clean brush and liquid soap (labeled as such on soap product) and water.
- (3) The spa basin shall be rinsed with water.
- (4) The spa basin shall be refilled with clean water.
- (5) The water in the basin shall be circulated with the correct amount (read manufacturer label for mixing instructions) of the EPA-registered hospital-liquid disinfectant that is labeled as a bactericide, fungicide and virucide, through the basin for at least 10 minutes.
- (6) The spa basin must be drained, rinsed, and wiped dry with a clean paper towel.

(7) Record this procedure in the pedicure-cleaning log. The log shall contain the date and time of each cleaning, initials of the person who completed the procedure, and shall indicate that the cleaning was done after a client.

(d) At the end of each day and after the last client, each whirlpool footspa or air-jet basin shall be cleaned and disinfected in the following sequential manner:

- (1) The screen and any other removable parts shall be removed.
- (2) Scrub all visible residue from the screen, inside walls of the basin, any other removable parts, and the area behind them with a clean brush and liquid soap and water.
- (3) Reinsert the clean screen and any other removable parts.
- (4) Fill the basin with warm water and detergent (labeled as such on detergent product) and circulate the detergent through the spa system for at least 10 minutes (follow manufacturer's instructions).
- (5) Drain the detergent solution and rinse the basin.
- (6) Refill the basin with clean water and circulate the correct amount (read the label for mixing instructions) of the EPA-registered Hospital liquid disinfectant which the label claims is a bactericide, fungicide, and virucide through the basin for at least 10 minutes.
- (7) Drain, rinse, wipe the basin dry with a clean paper towel and allow basin to dry completely.
- (8) Record this procedure in the pedicure-cleaning log. The log shall contain the date and time of each cleaning, initials of the person who completed the procedure, and shall indicate that the cleaning was done at the end of the day.

(e) At least once each week, after completing the procedures provided in subsection (d) (1 through 6) each whirlpool footspa and air-jet basin shall not be drained and the following sequential procedures shall be followed:

- (1) Do not drain the disinfectant solution. The unit shall be turned off and the disinfecting solution shall be left undisturbed in the unit for 6 to 10 hours.
- (2) After the disinfectant solution has been sitting between 6 to 10 hours, drain and rinse the basin with clean water.
- (3) Refill the basin with clean water and flush the system.
- (4) Record this procedure in the pedicure-cleaning log. The log shall contain the date and time of each cleaning, initials of the person who completed the procedure, and shall indicate that the cleaning was done weekly.

(f) The pedicure-cleaning log shall be made available upon request by either a patron or a board representative.

(g) A violation of this section may result in an administrative fine and/or disciplinary action. Each footspa or air-jet basin not in compliance with this section may result in a separate violation.

NOTE: Authority cited: Section 7312, and 7406 Business and Professions Code.
Reference: Section 7312(e), Business and Professions Code.

(2) The Board hereby Adopts Section 980.2 of Article 12 to read as follows:

980.2. Procedures for Cleaning and Disinfecting Pipe-less Footspas.

(a) As used in this section, "Pipe-Less" footspa is defined as any unit with footplates, impellers, impeller assemblies and propellers.

(b) After use upon each patron, each Pipe-less footspa shall be cleaned and disinfected in the following sequential manner:

- (1) All water shall be drained from the spa basin.
- (2) Remove footplate, and any other removable components according to the manufacturer's instructions.
- (3) Scrub all visible residue from the impeller, footplate, inside walls of the basin, and/or other components and the areas behind or under each with a clean brush and liquid soap (labeled as such on soap product) and water. Rinse with clean water.
- (4) Reinsert the properly cleaned impeller, footplate, and/or other components.
- (5) Refill the basin with clean water and circulate the correct amount (read the label for mixing instructions) of the EPA-registered hospital-liquid disinfectant which the label claims is a bactericide, fungicide, and virucide, through the basin for at least 10 minutes.
- (6) Drain, rinse and wipe the basin dry with a clean paper towel.
- (7) Record this procedure in the pedicure-cleaning log. The log shall contain the date and time of each cleaning, initials of the person who completed the procedure, and shall indicate that the cleaning was done after a client.

(c) At the end of every day and after performing the procedures provided in subsection (b) (1 through 7) and after the last client, each pipe-less footspa shall be cleaned and disinfected in the following sequential manner:

- (1) Fill the basin with warm water and detergent (labeled as such on detergent product) and circulate the detergent through the spa system for at least 10 minutes (follow manufacturer's instructions).
- (2) Drain the detergent solution and rinse the basin.
- (3) Refill the basin with clean water and circulate the correct amount (read the label for mixing instructions) of the EPA-registered hospital-liquid disinfectant which the label claims is a bactericide, fungicide, and virucide, through the basin for at least 10 minutes.
- (4) Drain, rinse and wipe the basin dry with a clean paper towel.
- (5) Allow the basin to dry completely.
- (6) Record this procedure in the pedicure-cleaning log. The log shall contain the date and time of each cleaning, initials of the person who completed the procedure, and shall indicate that the cleaning was done at the end of the day.

(d) At least once each week, after completing the procedures provided in subsection (c) (1 through 3), and the disinfectant solution in each pipe-less footspa shall not be drained and the following sequential procedures shall be followed:

- (1) The unit shall be turned off and the disinfecting solution shall be left in the unit undisturbed for 6 to 10 hours.
- (2) After the disinfectant solution has been sitting between 6 to 10 hours, rinse and wipe the basin dry with a clean paper towel.
- (3) Record this procedure in the pedicure-cleaning log. The log shall contain the date and time of each cleaning, initials of the person who completed the procedure, and shall indicate that the cleaning was done weekly.

(e) The pedicure-cleaning log shall be made available upon request by either a patron or a board representative.

(f) A violation of this section may result in an administrative fine and/or disciplinary action. Each pipe-less footspa not in compliance with this section may result in a separate violation.

NOTE: Authority cited: Section 7312, and 7406 Business and Professions Code.
Reference: Section 7312(e), Business and Professions Code.

(3) The Board hereby Adopts Section 980.3 of Article 12 to read as follows:

980.3. Procedures for Cleaning and Disinfecting Non-Whirlpool Foot Basins or Tubs.

- (a) As used in this section, "Non-Whirlpool Foot Basin" or "Tubs" are defined as any basin, tub, footbath, sink and bowl -and all non-electrical equipment that holds water for a client's feet during a pedicure service.
- (b) After use upon each patron, each Non-Whirlpool Basin or Tub shall be cleaned and disinfected in the following sequential manner:
- (1) All water shall be drained from the foot basin or tub.
 - (2) The inside surfaces of the foot basin or tub shall be scrubbed and cleaned of all visible residues with a clean brush and liquid soap (labeled as such on soap product) and water.
 - (3) The foot basin or tub shall be rinsed with clean water.
 - (4) Refill the foot basin or tub with clean water and the correct amount (read the label for mixing instructions) of the EPA-registered hospital-liquid disinfectant. which the label claims is a bactericide, fungicide, and virucide. Leave the disinfecting solution in the foot basin or tub for at least 10 minutes.
 - (5) Drain, rinse and wipe the basin dry with a clean paper towel.
 - (6) Record this procedure in the pedicure-cleaning log. The log shall contain , the date and time of each cleaning, initials of the person who completed the procedure, and shall indicate that the cleaning was done after a client.
- (c) The pedicure-cleaning log shall be made available upon request by either a patron or a board representative.
- (d) A violation of this section may result in an administrative fine and/or disciplinary action. Each non-whirlpool foot basin or tub not in compliance with this section may result in a separate violation.

NOTE: Authority cited: Section 7312, and 7406 Business and Professions Code. Reference: Section 7312(e), Business and Professions Code.

PIPELESS JET CLEANING INSTRUCTIONS

1. Turn off the power to the whirlpool motor.
2. Drain out all water in the tub basin.
3. Twist the jet cap counter clockwise to unlock and remove.
4. Spray an EPA registered disinfectant into the jet housing. Note: there is no need to remove any parts in the housing.
5. Scrub & rinse out the disinfectant. For complete sanitation, check with your local state board requirements.
6. Line up the jet cap with the jet housing and twist clockwise to lock it in place.

CLEANING PROCEDURE IS REQUIRED BY STATE BOARDS

New Safety Recommendations for Foot Spas

The Bureau of Barbering and Cosmetology recommends that salons using whirlpool pedicure foot spas follow these disinfection procedures to ensure proper cleaning and maintenance of the equipment and to prevent the spread of bacterial or parasitic disease:

Please follow the guideline below for your Top nails. Pedicure Spa: Nova, Dolphin, Xo, Spa.

After Each Customer

1. All water shall be drained and all debris shall be removed from the spa basin.
2. The spa basin must be cleaned with soap or detergent and water
3. The spa basin must be disinfected with an EPA-registered disinfectant with demonstrated bactericidal, fungicidal, and virucidal activity which must be used according to manufacturer's instructions.
4. The spa basin must be wiped dry with a clean towel.

At the End of Each Day

1. The screen shall be removed, all debris trapped behind the screen shall be removed, and the screen and the inlet shall be washed with soap or detergent and water.
2. Before replacing the screen, the screen shall be totally immersed in an EPA-registered disinfectant with demonstrated bactericidal, fungicidal and virucidal activity which must be used according to the manufacturer's instructions.
3. The spa system shall be flushed with low sudsing soap and warm water for at least 10 minutes, after which the spa shall be rinsed and drained.

At Least Once a Week

1. The spa basin shall be filled completely with water and 1 teaspoon of 5.25% bleach for each gallon of water, or a solution of Sodium Hypochlorite of approximately 50 ppm used according to manufacturer's instructions.
2. The spa system shall be flushed with the bleach and water solution, or Sodium Hypochlorite solution, for 5-10 minutes and allowed to sit for 6-10 hours.
3. The spa system shall be drained and flushed with water before use upon a patron.

Note: ***A cleaning log should be kept with each pedicure spa***

Each State will have slight differences in cleaning policies, please check with your State's Bureau of Barbering and Cosmetology for specific details.

Violation of this section may result on an administrative fine and/or disciplinary action.
Each footspa is not in compliance with this section may result in a separate violation.

NOTE: Authority cited: Section 7312, Business and Profession Code. Reference: Section 7312(e), Business and Profession Code.

Additional Information about Disinfectants and Cleaners

- A. Sanitation is cleaning and must be performed before using any disinfectant.
- B. Disinfection is killing most germs and must follow proper cleaning of all visible residue.
- C. EPA registered liquid disinfectants used in the salon:
 - 1. Must have the words 'bactericidal, fungicidal and virucidal' and 'Hospital' on the label.
 - 2. Must be mixed, used, stored and disposed of according to manufacturer's label instructions. It is against Federal Law to use an EPA registered disinfectant contrary to its label.
 - 3. Must be prepared fresh every day and replaced immediately when the solution becomes visibly contaminated.
 - 4. Are ineffective when proper cleaning is not performed before use.
 - 5. Require complete immersion in the correct amount of disinfectant for 10 minutes after cleaning of all visible residue. Complete immersion means enough liquid to cover all surfaces of the item.
 - 6. Spraying disinfectants is not recommended and is not adequate for disinfecting pedicure tools and pedicure equipment in the salon.
- D. EPA registered Hospital "One-step" cleaner/disinfectants may be used for disinfecting pedicure equipment if:
 - 1. They are EPA registered as Hospital, bactericidal, fungicidal and virucidal and have the words 'One-step' on the label.
 - 2. Tools and equipment are first cleaned of large amounts of residue.
 - 3. Are used exactly as described by the manufacturer's instructions.
- E. All bottles and containers (other than the original manufacturers' container) containing any disinfectant must be properly labeled listing the contents, percentage solution (concentration), and date of mixing.
- F. All brushes used to remove visible debris from the footspa, tub, or basin must be properly cleaned and disinfected between uses.
- G. Record all cleaning and disinfecting procedures in the salon pedicure cleaning logbook.



TN SPA LIMITED WARRANTY

TN Spa warrants to its original buyers of the new _____ foot-spas that these products will be free from defects in parts and workmanship during the Standard Warranty Period of One (1) Year. This limited warranty is automatically included to the newly purchase spas, and the valid time and date of shipment will justify the beginning and ending of the warranty period.

TN Spa pedicure spas have been meticulously tested and exceeded the most stringent quality US standards setting to ensure optimal performance for plumbing mechanical components. If you discover any defects in material or workmanship during the Standard Warranty Period and TN Spa agrees that defect exists, TN Spa will, at its option, repair or replace the defective part at no charge to you. The defective item(s) must be properly packages, with the Return Material Authorization (RMA) or ticket number, provide by Customer Service Department, clearly displaced outside of the packaging, to obtain warranty service.

To request warranty service and before returning any defective parts, please contact TN Spa Service Center: 1-866-912-7727. Once TN Spa determined that a repair is required, they will issue an RMA or ticket number.

Limited Warranty's Articles:

1. *All sales are final. No refund.* If permitted, all returned merchandises are subject to 25% being deducted (withdrawn) from total purchase price for restocking fees plus all shipping fees.
2. One (1) year limited warranty on parts only (Power Activator System, Discharge Pump, Mechanism System, Pure Flo Pipe – less Jets, Electrical) Exclude: HTT Massage System.
3. One (1) year warranty for the massage system.
4. One (1) year limited warranty on spa shell. If defect occurred, TN Spa will fix it.
5. FREE telephone technical support.
6. All claims must have a valid Serial Number and Purchase Invoice.
7. TN Spa will provide replacement parts at no charges in exchange for defective parts within the period of one (1) year.
8. All defective parts owned to Top Nails must be sent back within 30 days or warranty is null.
9. Any claims that cannot be justified over the phone, customer should submit a picture and purchase invoice to TN Spa before repair or replacement can be processed.
10. Any service and repair performed on the products without TN Spa authorization will result in Void Warranty.
11. Hawaii State, Alaska State and International Countries are subject to all shipment fees throughout Standard Warranty Period.

Limited Warranty Does Not Cover:

- Normal wear and tear
- Debris lodged in discharge pump causing it not to drain water
- Spa running dry causing jets burn
- Calcium build-up that cause whirlpool-pump failure
- Abuse, neglect, or mistreatment
- Physical damage when exceeding maximum allowable weight (250 lbs.) on spa chair
- Damage caused by unauthorized modification or repair
- Invalid serial numbers or serial numbers have been removed or defaced on spa chair
- Minor scratches, chip, or dents might occur during transit (delivery)
- TN Spa Limited Warranty is subject to update without notice.



WARNING: FOR PROPER INSTALLATION

FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY AND/OR WARRANTY WILL BE NULL.
YOU MUST HAVE A QUALIFIED, LICENSED PLUMBER TO CONNECT THE SPA IN PLACE SAFELY.

CERTIFICATE OF COMPLIANCE

Certificate Number 20140813-E465096
Report Reference E465096-20140813
Issue Date 2014-AUGUST-13

Issued to: HUYNH TOP NAILS SUPPLIES INC
102, 3112 N JUPITER RD
GARLAND TX 75044


This is to certify that PLUMBING ACCESSORIES
representative samples of Pedicure Spa, Models Diore, Diva, Dolphin, Kia, Sola.

Have been investigated by UL in accordance with the
Standard(s) indicated on this Certificate.


Standard(s) for Safety: UL 1951 - Swimming Pool Pumps, Filters, and Chlorinators.
CAN/CSA C22.2 No. 68-09 - Motor-Operated Appliances
(Household and Commercial).

Additional Information: See the UL Online Certifications Directory at
www.ul.com/database for additional information

Only those products bearing the UL Listing Mark for the US and Canada should be considered as
being covered by UL's Listing and Follow-Up Service meeting the appropriate requirements for US
and Canada.

The UL Listing Mark for the US and Canada generally includes: the UL in a circle symbol with "C" and
"US" identifiers:  the word "LISTED"; a control number (may be alphanumeric) assigned by UL;
and the product category name (product identifier) as indicated in the appropriate UL Directory.

Look for the UL Listing Mark on the product.

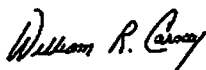

William R. Carney, Director, North American Certification Programs
UL LLC

Any information and documentation involving UL Mark services are provided on behalf of UL LLC (UL) or any authorized licensee of UL. For questions, please
contact a local UL Customer Service Representative at www.ul.com/contact

