


OWNER'S MANUAL

Please read user's Manual thoroughly before using pedicure spa



SpaSalon.us wholesale



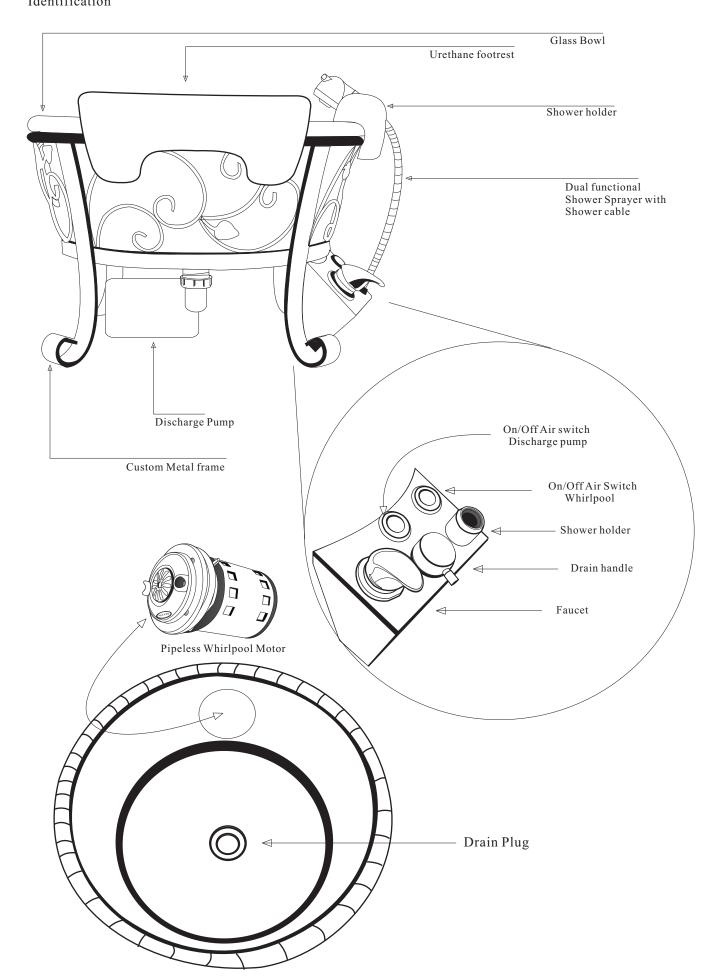

Lenox -GS Specification

Glass Bowl with Stand

Shipping Information

Dimension 28"L x 27"W x 34"H - Include Spa Basin, Stand, and Carton

48"L x 40"W x 6"H - Per Single Shipment 66"L x 37"W x 6"H - Per Multi Shipment

Weight 125 lbs - Include Glass Bowl, Stand, carton and pallet

230 lbs - Multi shipment

Lenox-GS information

Dimension 25"L x 25"W x 15.1/2"H

Net Weight 75 lbs

Water Capacity 5.5 Gallons

Pipeless Motor 115V, 60Hz, 0.3A, 30W

Discharge Pump 120V, 60 Hz.

Power source 115V, 2.5A, 60Hz (GFCI Protected)

Caution: Pedicure Spa must be installed by a licensed electrician and a licensed plumber, conforming to all local and national electrical code.

Construction Glass Bowl, Metal Stand, Pre-Plumbed w/D Pump

Chair Specification Recommended Vertical dimension from seat bottom to

Floor 16"

Magnetic Pipeless 2 water channels, Fully drained, easy to clean and santize.

No closed loop circulating pipes.


Electrical Switches On/Off air activated switch / Optional power Pump

Dura-Jet III

Safety Instructions

When using electrical equipment, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

- 1. Read and follow all instructions before using the equipment.
- 2. Keep the cord out of heavy traffic area. To avoid fire hazard NEVER put the cord under the rugs, near heat generating devices.
- 3. Always turn off the equipment before servicing.
- 4. Do not drop or insert any object into any openings.
- 5. Do not operate any equipment with a damage parts.
- 6. Any other use not recommended by the manufacturer may electrical shock or injury to persons.
- 7. Never use outdoors
- 8. Do not attempt to repair or adjust any electrical or mechanical functions on the unit.

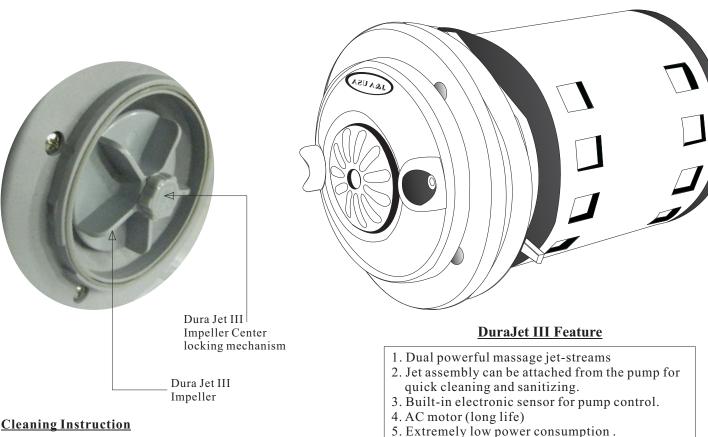

6. Manufactured in USA.

Cleaning Instruction

- 1. Turn the unit off and wait until the motor is fully stops.
- 2. Remove the front jet cover and notice the locking screw in the center
- 3. Remove the locking center screw (turn counter clockwise) and pull out impeller from housing.
- 4. Use Anti-Bacterial solution (EPA Registered) to clean all part/s.
- 5. After sanitization, place impeller onto the motor shaft and fasten with center locking screw (Turn clockwise)

DURA-JET III Specifications

Model: DURA_JETIII -120Vac, 0.4 Amp. 60Hz,

Pump: Dual Air Jet Flow


Mounting: Single 3.5" hole Diameter Auto tighten Mounting screws(4)

MAGNA-JET (OPTIONAL)

Safety Instructions

When using electrical equipment, Basic safety precautions must be followed to reduce the risk of fire, electrical shock, and injury to Persons.

- 1. Read and follow all instructions before using the equipment.
- 2. Keep electrical cord out of heavy traffic area. To avoid fire hazard NEVER place electrical cord under the rug, near heat Generating devices.
- 3. Always turn power off the equipment before service.
- 4. Do not drop or insert any object into any openings.
- 5. Do not operate any equipment with damaged parts.
- 6. Any other use not recommended by the manufacturer may cause electrical shock or cause injury to person/s.
- 7. Never use it outdoors
- 8. Do not attempt to repair or adjust any electrical or mechanical.

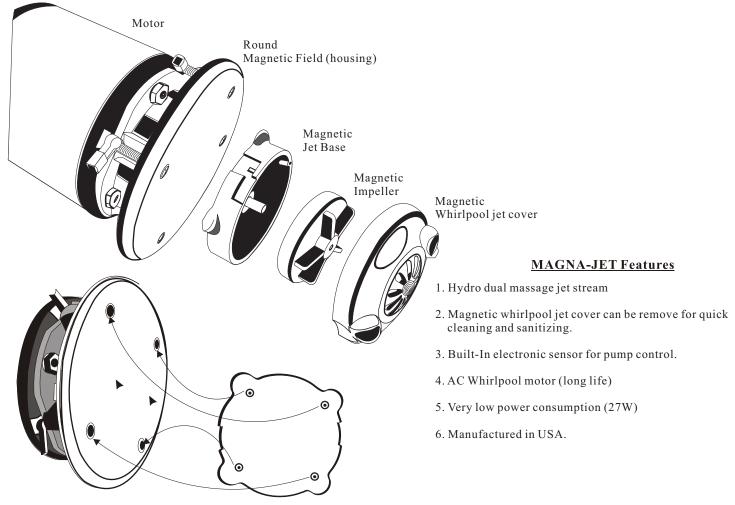

Cleaning Instruction

- 1. Turn off the unit and wait until the motor is fully stops.
- 2. Hold Hydro whirlpool jet cover firmly and pull to separate from the round magnetic field.
- 3. Turn hydro whirlpool jet cover to left to open and pull out impeller.
- 4. Use Anti Bacterial solution (EPA Registered) to clean all parts.
- 5. After sanitize all parts, place impeller and close hydro whirlpool jet cover to turn right to lock
- 6. Hold firmly the whirlpool cover jet and gently place it onto the round magnetic field. Do not release the hydro whirlpool jet cover until Jet cover is on the round magnetic housing.

MAGNA-JET Specifications

Model: MAGNA-JET - 120VAC, 60Hz, 1.0Amp, 27W

Pump: Hydro-Massage Dual jet Flow

Mounting: Single 3.5" hole Diameter

Auto tighten Mounting screws(4)

How to USE Magnetic jet!


WARNING: DO NOT RUN DRY, BASIN MUST FILLED WITH WATER TO LEVEL INDICATOR.

CAUTION: MAGNETIC JET COVER ASSEMBLY MUST ALIGN WITH DISCHARGE PORT POSITIONED AT 3/9 O'CLOCK.


WHEN READY TO USE, **MAKE** SURE JET COVER IS POSITIONED AT **3 /9 OCLOCK** FOR PROPER WHIRLPOOL ACTION IN THE BASIN. IF JET COVER IS **NOT** ALIGN AT 3/9 O'CLOCK, WATER WILL SPLASH OUTSIDE OF THE BASIN.


PROPER WAY TO USE MAGNETIC JET SYSTEM

- 1- FILL THE WATER TO WATER LEVEL INDICATOR.
- 2- HOLD MAGNETIC JET FIRMLY TO BRING CLOSER TO THE ROUND MAGNETIC FILED AND DO NOT RELEASE THE MAGNETIC JET PREMATURELY OR THIS WILL CAUSE IMPACTS ON THE JET COVER AND THE ROUND MAGNETIC FIELD(HOUSING) SHORTENING THE LIFE EXPECTANCY OF THE JET COVER. WHEN THE JET COVER NEARS THE ROUND MAGNETIC FIELD, PLACE JET COVER ONTO THE FOUR DIMMPLE AREA (SEE DIAGRAM). THE JET COVER MUST ALIGN WITH DISCHARGE PORTS POSITIONED AT 3/9 O'CLOCK.
- 3- WHEN FINISHED WITH CLIENT, DO NOT REMOVE MAGNETIC JET UNTIL MOTOR IS FULLY STOPPED.
- 4- WHEN MOTOR IS FULLY STOPPED, REMOVE MAGNETIC JET COVER FROM THE MOTOR AND REMOVE JET COVER AND IMPELLER FOR SANITIZATION.

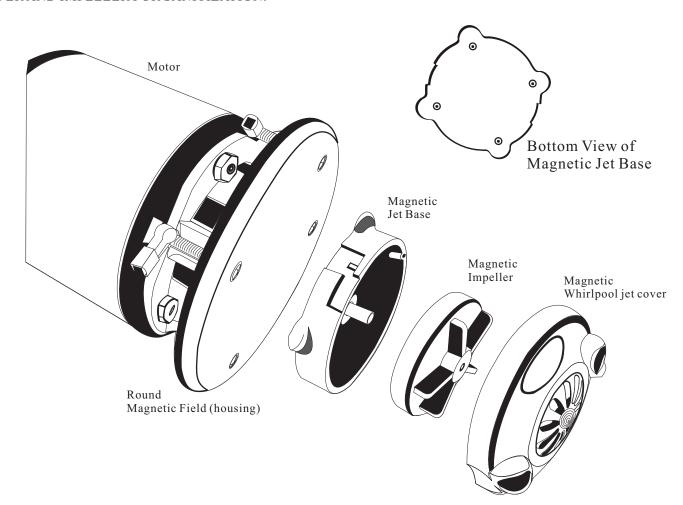

Lenox GS Dimension

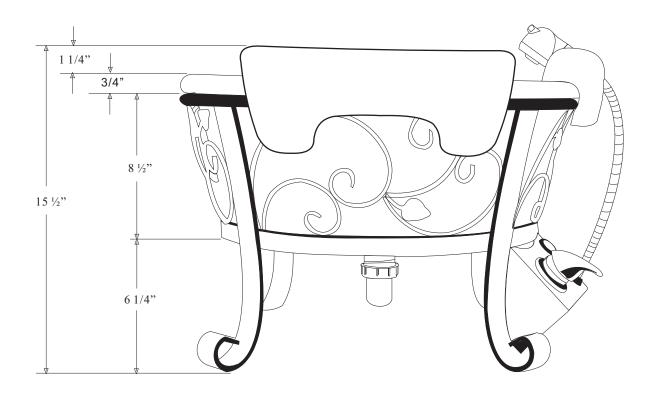

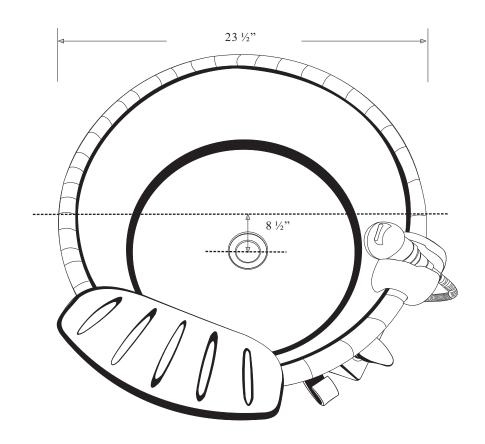



Electrical Requirements:
One dedicated GFCI protected wall outlet (15 amp) MUST be used per_unit


Each unit will be supplied with standard three ground electrical cord

Provided

- Multi Outlet Power box
- Pre- installed Discharge Pump (1 1/4") with 2 minute timer
- Pre- Plumbed hot and Cold (1/2") Water Supply

Requirements

- Utility Valve(2) Hot and Cold (3/8")
- Hot and Cold braided flex hose (1/2" x 3/8" x desirable length from the wall)
- Flex Hose (1 1/4") or tube connection to be made from discharge pump To main Drain.

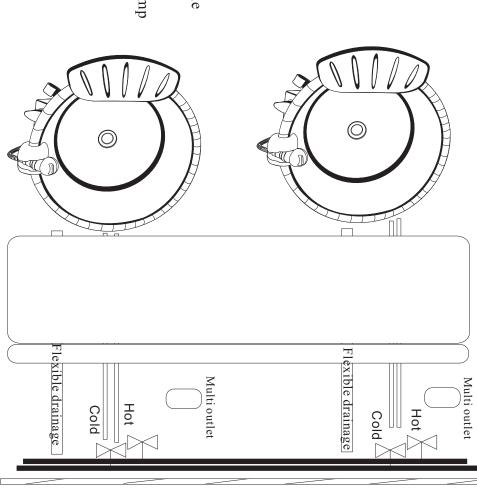

DISINFECTING YOUR PEDICURE SPA

Note: Please be advised that it is responsibility of purchaser/user to adhere strictly to the following procedure. Any non-compliance will be considered negligence of the purchaser/user.

The Bureau of barbering and cosmetology requires that salons using whirlpool pedicure spas use the following disinfecting Procedures to ensure proper cleaning and maintenance of the equipment, and to prevent bacterial infection.

After each customer:

- 1. Drain all water and remove all debris from the pedicure spa.
- 2. Clean the surfaces and walls of the basin with soap or detergent and rinse with clean, clear water.
- 3. Disinfect with an EPA registered disinfectant with bactericidal, fungicidal, and virucidal activity.
- 4. Wipe dry with clean towel.

At the end of the day:

- 1. Remove the intake suction screen, All debris trapped behind the screen of each pedicure spa must be removed. And the screen and the inlet shall be washed with soap or detergent and water
- 2. Before replacing the screen, Totally immersed the screen into an EPA- registered disinfectant with bactericidal, Fungicidal, and virucidal activity.
- 3. Finally, flsh the whirlpool system with low-suding detergent and warm OR an EPA registered cleanser for 10 minutes. Rinse with clean flash water and drain.

Every other week

- 1. After following the outlined required cleaning procedures for the end of each day, fill the basin with warm water And 1 teaspoon of 5.25% powdered bleach for each one gallon of water.
- 2. Circulate the solution through the whirlpool system for 5 to 10 minutes.
- 3. The solution rests for over night (at least 6-10 hours)
- 4. The following morning (before the first customer) drain and flush the system with water.

USER RECOMMENDATION

PLEASE READ THE MANUAL THROUGHLY BEFORE USE TO ENSURE CORRECT OPERATION.

THOSE UNDER A DOCTORS CARE OR WHO ARE EXPERIENCING ONE OF MORE OF THE FOLLOWING DONDITIONS SHOULD CONSULT THEIR DOCTOR BEFORE USE.

- You are receiving medical treatment or are feeling ill.
- Your body shows any cute symptoms.
- You have heart disease.
- You are pregnant or having a menstrual period.
- Your doctor has ordered you to rest.
- You have a back disorder resulting from an accident or disease.
- You have a high fever.
- You have sensory disorders.
- You have medical electrical device (e.g. pacemaker).
- You have service interruption in the circulation of the legs.
- You are diabetic.

FAILURE TO DO SO MAY RESULT IN ACCIDENTS AND HEALTH PROBLEMS.







Glass bowl Care and Cleaning

CARE AND CLEANING

Clean the surface of your *JSG Oceana* glass product with mild soap and warm water. Wipe the entire surface completely dry with a clean, soft cloth.

LIMITED ONE - YEAR WARRANTY

JSG Oceana Glass products are warranted free of manufacturing defects. JSG Oceana LLC will, at its election, repair, replace, or make appropriate adjustment where JSG Oceana LLC inspection discloses any such defects occurring in normal usage within one year after installation. JSG Oceana is not responsible for installation or removal costs. Proof of purchase requires the original sales receipt from the original consumer purchaser and must accompany all warranty claims.

Implied warranties, including that of merchantability or fittness for a particular purpose, are expressly limited in duration to the duration of this warranty. *JSG Oceana* LLC disclaims any liability for special, incidental or consequential damages.

Some States do not allow limitation on how long an implied warranty lasts or the exclusion or limitation or special, incidentals, or consequential damages, so these limitations and exclusions may not apply to you. This warranty gives you specific rights. You may also have other rights which vary state to state

This limited warranty provides specific legal rights as they apply within U.S.A, and other rights may be available, but may vary fro country to country.

Crystalline material and air bubbles are a unique characteristic of art glass. They are an inherent part of the glass making process and are not detrimental to the mechanical strength or function of the glass basins. Each piece of *JSG Oceana* is individually inspected for durability and superior performance.

Limited Warranty

Pedicure Spa

IMPORTANT

To validate the limited warranty, The Limited Warranty Registration Form MUST be filled out completely and return to J&A USA within 30 days of original purchased date. This Limited Warranty is valid if J&A USA received registration form.

J&A USA Inc. Pedicure Spas has designed and manufactured with the highest standards and expressly warrant the pedicure spa as follows:

To the original owner of the J&A USA Inc. Pedicure Spa may repair or replace, at its option, any pedicure spa found to be defective in material or workmanship upon inspection by a authorized representative of J&A USA Inc. This limited warranty covers the following:

Base - Twenty four (24) month from date of shipment from J&A USA facility.

Components / Parts - Twenty four (24) month from date of shipment from J&A USA facility.

Stool - Ninety (90) days from date of shipment from J&A USA facility.

Shipping Costs - Twenty four (24) month from date of shipment. J&A USA will cover normal shipping costs associated with replacement parts. Expedited shipping cost will incur an additional charge.

Labor - Twelve (12) month from date of shipping, J&A USA Inc will cover reasonable labor costs associated with the installation of replacement parts found to be defective in material or workmanship upon inspection by authorized representative of J&A USA INC.

No labor cost or replacement parts will be covered under this limited warranty if at the sole discretion of J&A USA INC. it is determined a failure was caused by negligence, accident or improper use, improper installation or lack of proper maintenance as in the Owner's Manual.

NO CONSEQUENTIAL, INCIDENTAL, CONTINGENT, INDIRECT, SPECIAL OR OTHER DAMAGES WILL BE

ALLOWED. This warranty is null and void if the pedicure spa is removed from its original installation or is not installed accordance with specifications of pedicure spa or national, state or local codes, regulation and ordinances. Furthermore, this limited warranty is null and void if the pedicure spa is subjected to improper installation or maintenance, negligence, improper cleaning or any other circumstance beyond J&A's control. To validate limited warranty, pedicure spa must be installed by a licensed plumber and/or electrician in accordance with local and / or State code and pedicure spa installation instructions.

Warranty Exclusion

- 1- Unauthorized repairs and/or modification or tampered in any way.
- 2- Damage due to freight, accident, natural disaster and /or abuse or misuse
- 3- Stain, fading or discoloration of seat, back cover, armrests (Upholsteries), Tray or Footrest
- 4- Fading, discoloration or staining of basin or Any portion of surface of pedicure spa caused by water additive or improper water treatment (such calcium built up) and/or cleaning agents/s
- 5- Damage or malfunction due to improper installation including but not limited to, failure to comply with all national, state and local plumbing, electrical and building codes.
- 6- Magnetic jet assembly (base, impeller and cover) due to J&A provided an extra jet assembly to accommodates wear-tear.
- 7- Damage drain pump due to residue built up in drain pipe and / or due to the lack of maintenance.

Parts for which labor / Service is NOT COVERED - Following components are simple to replace and DO NOT require a service technician. Therefore, though the part is covered under the guidelines of the warranty agreement.

- 1- Panel
- 2- Jet cover, impeller and / or jet assembly
- 3- Faucet Cartridge, Shower Head
- 4- Footrest
- 5- Air actuate On/Off Button
- 6- Drain Plug
- 7- Remote control

During the Limited Warranty period, J&A will, at its sole discretion, repair or replace any defective component. All component parts removed under this Limited Warranty become property of J&A USA Inc. And all replacement component /s MUST be return to J&A USA Inc. within 20 days of replacement. If not, replaced component/s will be charge as its cost/s.

This limited warranty is for the original owner and **not** transferable. The original owner agrees by using pedicure spa the obligation of J&A USA shall not extend to indirect or contingent damage or injury. Furthermore, the obligations of J&A are limited to those set forth herein. The limited warranty is the exclusive remedy and is in lieu of all other warranties, express or limited, including but not limited to, any implied warranty of fitness or merchantability for a particular purpose. No distributor or other person has the right or authority to bind J&A USA INC to changes to this limited warranty. Consequently, J&A USA INC is **not** responsible for such warranties or representations.

Limitation of liability

TO THE EXTENT ALLOWED BY LOCAL LAW, EXCEPT FOR THE OBLIGATIONS SPECIFICALLY SET FORTH IN THIS WARRANTY STATEMENT, IN NO EVENT WILL J&A OR ITS THIRD PARTY SUPPLIERS BE LIABLE FOR ANY DAMAGED CAUSED BY J&A'S PEDICURE SPA OR THE FAILURE OF J&A PEDICURE SPA INCLUDING ANY LOST PROFIT OR SAVINGS, BUSINESS INTERRUPTION, LOSS OF USE OR ANY OTHER COMMERCIAL OR ECONOMIC LOSS OF ANY KIND, OR SPECIAL, INCREMENTAL, OR CONSEQUENTIAL DAMAGES. THIS LIMITATION OF LIABILITY APPLIES WHETHER DAMAGES ARE SOUGHT, OR A CLAIM MADE, UNDER THIS LIMITED WARRANTY OR AS A TORT CLAIM, A CONTRACT CLAIM OR ANY OTHER CLAIM.