



FIORI 8000

Pedicure Spa Base Manual

**PLEASE KEEP MANUAL IN A SAFE PLACE
PLEASE READ AND FOLLOW ENTIRE MANUAL
PRIOR TO USE**

Table of Contents

Receipt and Inspection	3
Warnings and Precautions	3
Safety Information	4
Specifications	5
Dimension Diagrams	6
Unboxing and Wall Clearance	8
Installation Instructions	9
Basin assembly – Diamond Base.....	9
Preparing Drain Pipe Assembly	9
Mounting the brackets.....	9
Installing Basin.....	10
Basin Assembly – Crystal Base	12
Preparing Drain Pipe Assembly	12
Mounting the brackets.....	12
Installing Basin.....	13
Care and maintenance	14
Limited Warranty	15

Receipt and Inspection

Please Note! It is the responsibility of the buyer to carefully inspect all shipments upon arrival. If damages are apparent, have delivering driver note this on the bill of lading prior to signing for goods. Failure to note damages at receipt will waive any damage claims.

If damages are present, please contact shipping company **IMMEDIATELY** to make a claim.

Warnings and Precautions

DANGER: Product should be only connected to a grounded electrical outlet protected by a Ground Fault Circuit Interrupter (GFCI) to prevent the risk of electric shock.

DANGER: Always turn off and disconnect from outlet before attempting service or repairs.

DANGER: Do not allow children to use the pedicure spa without the supervision of an adult

WARNING: Do not use other electrical corded appliances within 5 feet of the spa basin.

WARNING: People who use medications and/or have any serious medical history should consult a physician prior to using a pedicure spa.

CAUTION: Water temperature should be checked prior to use; Water temperature should not exceed 105 degrees F.

CAUTION: Do not step/stand in/on basin damage to bowl may cause injury

CAUTION: Maximum load capacity of the massage chair is 350 pounds.

Safety Information

- Do not operate this unit without a properly grounded electrical outlet with a proper GCFI installed.
- Do not attempt to operate unit if the power cord has become damaged
- This unit is not designed for use outdoors or in extreme temperatures(below 40, above 100)
- Do not operate massage chair on any part of the body that is swollen, inflamed, or wounded.
- Do not operate unit if it has been damaged or malfunctioning
- Discontinue using this unit if abnormal noises occur.
- Always turn off and disconnect unit from outlet before attempting service/maintenance
- Check the water temperature before placing feet into the bowl. Water should not exceed 105 F
- Do not use flammable sprays or gases near Pedicure Spa
- Do not put hands or fingers near the massage mechanisms while the chair is operating.
- Do not place anything on top of the power cord; Keep clean, dry, away from anything that may cause damage
- Carefully enter and exit the spa, do not step or stand in the bowl.
- Be careful not to drop anything into the spa basin
- Discontinue use if there is any discomfort experienced during massage.
- Disinfect the spa basin and jets, between each use with the appropriate disinfectant.
- Do not use the massage chair for more than 15 mins at a time.
- Do not allow children around the spa unsupervised
- Misuse of massage chair can result in damage, injury, or death.

Warning – Electrical grounding instructions

Professional Electrician Installation/Instruction highly recommended

The massage chair and basin combo must be grounded via a GFCI(Ground Fault Circuit Interrupter) to prevent electrical shock in case of damaged or malfunctioning electrical components.

Never use product without properly grounded plug!

Specifications

Shipping Weight:

Chair – 160lbs

Basin – 100lbs

Arms – 50lbs(pair)

Dimensions:

Upright and Retracted: 51in X 34in X 54in

Upright and Basin Extended: 68in X 34in X 54in

Reclined and Basin Extended: 81in X 34in X 40in

Electrical requirements: 120V AC, 15 amp, 60 Hz: Separate and Dedicated 15 amp GFCI

Weight Capacity: 300lbs

Basin Capacity:

Diamond Bowl – 5.25 Gallons

Crystal Bowl – 6 Gallons

Plumbing:

Recommended Water Pressure: 55-70 PSI – 400-500 KPA


Water Temperature: 50°F - 105°F


Water Supply Lines: Hot/Cold supply lines are 1/2" with standard faucet fitting

Drain Pipe Outlet: 1" Schedule 40 PVC Coupler @ rear of spa connected via telescopic drain pipe.

Gravity type drainage systems do not require back flow fitting, Optional discharge pump/wall drain systems require a check valve to be installed at the drain pipe outlet after the telescopic drain pipe. Use 1" PVC slip check valve after the telescopic drain pipe.

Dimension Diagrams

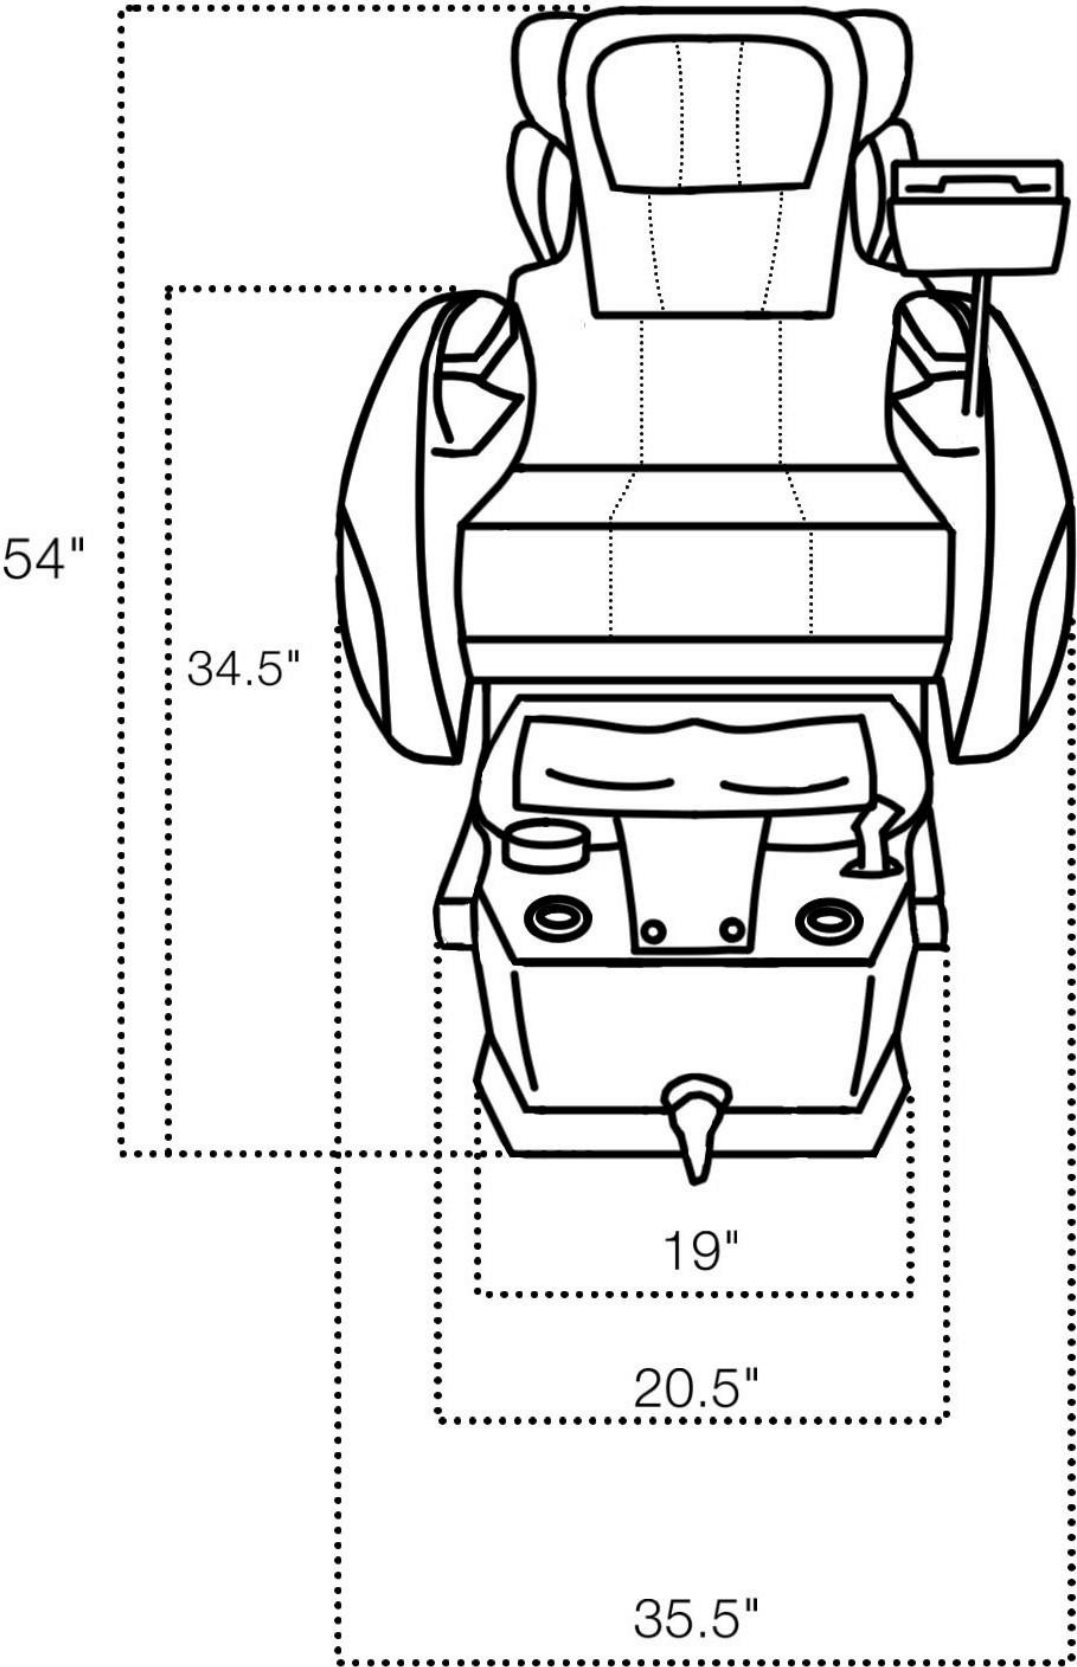

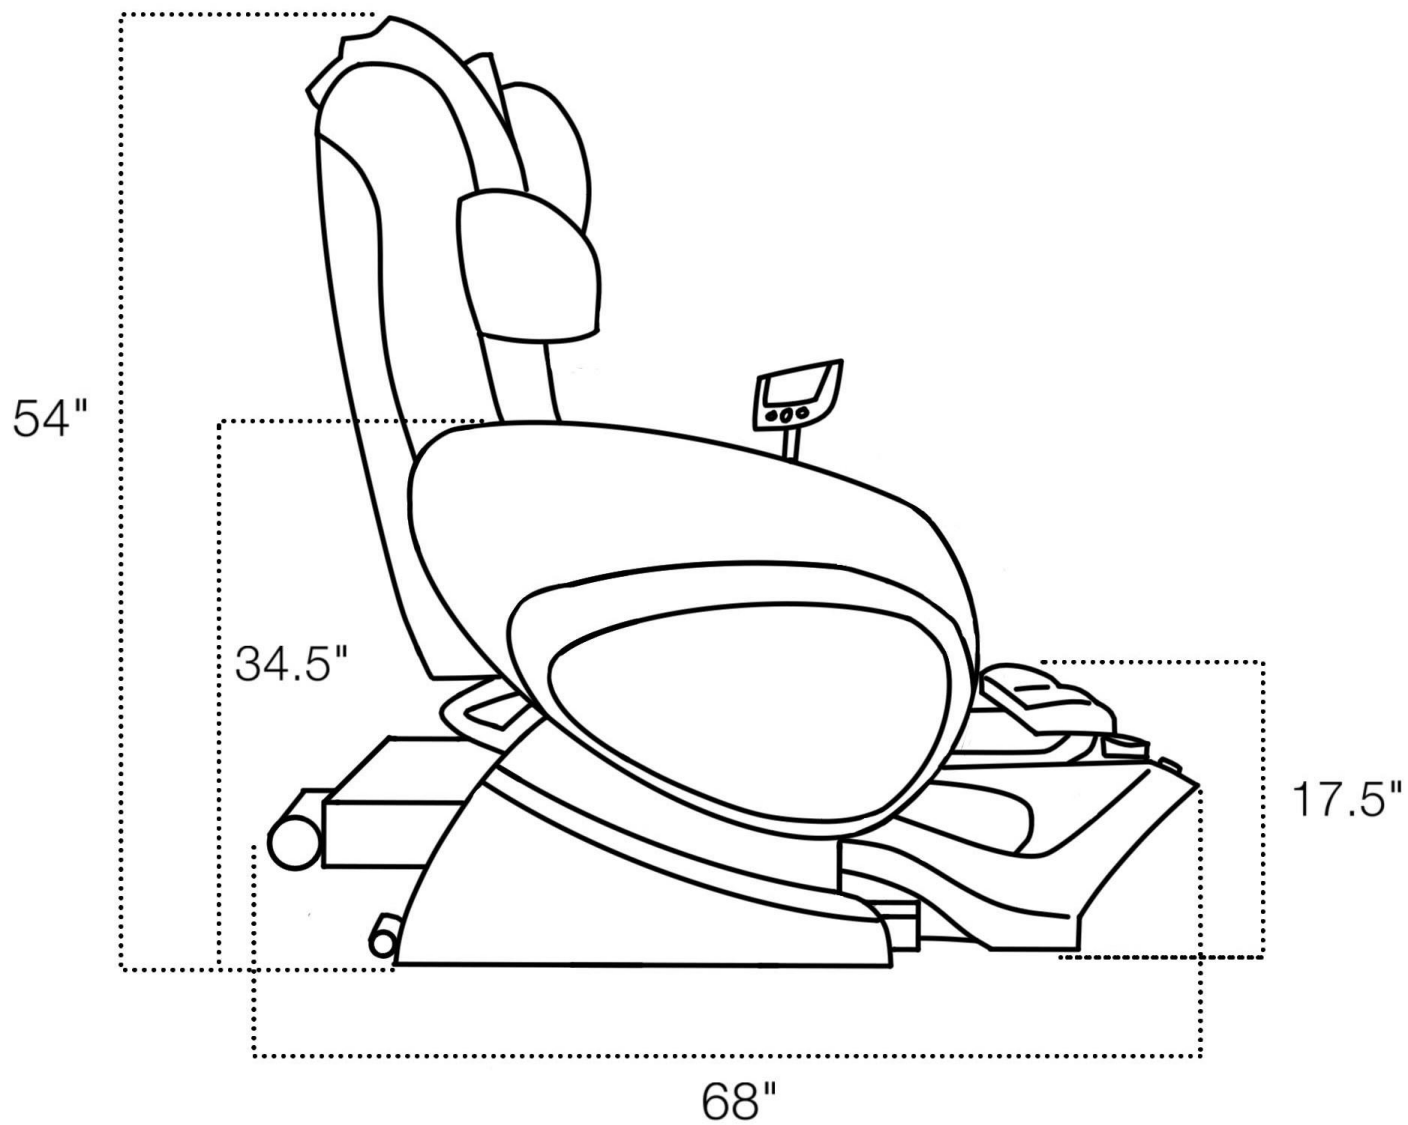

Unboxing and Wall Clearance

When you receive your pallet from the truck, please do a thorough inspection for damages to the outside of the box. Holes, scratches, scrapes, collapses, and missing boxes should be reported to the driver immediately and should be noted on the bill of lading prior to signing for the packages.


When removing boxes from the pallet please remove with care as boxes are large and heavy, Start with removing the 4 thinner boxes on the side, you will need 2+ people to help remove the box from the top (Approx. 160lbs), the middle 2 boxes are the basins. Be careful not to drop or have anything dropped on these boxes as they are glass and fragile.

Once the boxes are removed from the pallet. Carefully remove strap on massage chair box and lift the carton over the chair. Remove the rest of the packing foam and cardboard.

Please see 8000 chair manual for arm and chair back installation instructions.

Wall Clearance


Please place spas with at least 20 inches away from the wall at during its most upright position.

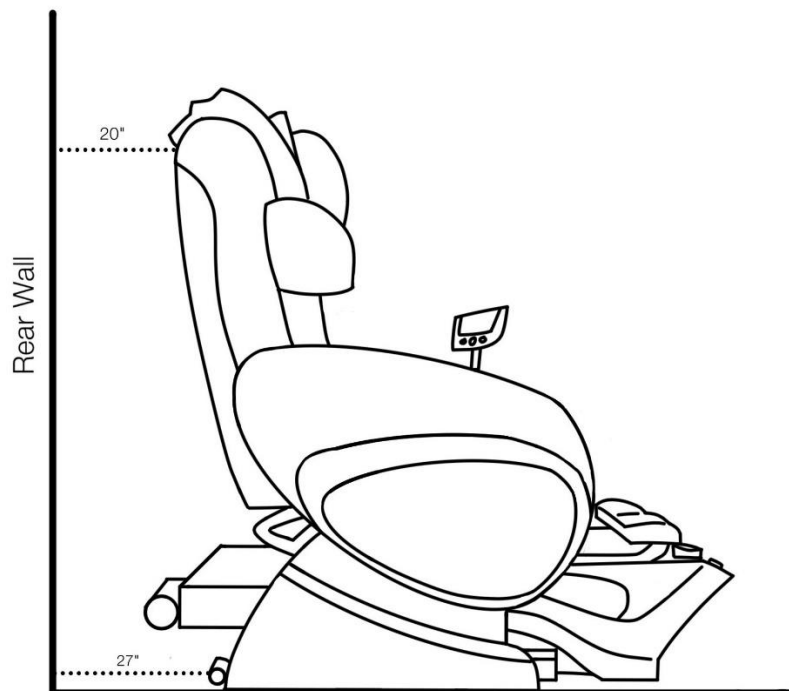

Installation Instructions

Basin assembly – Diamond Base

Preparing Drain Pipe Assembly - Place threaded cap portion of the drain coupler onto the telescopic drain pipe, apply PVC Glue to the outside of the pipe and inside edge of flange(see picture). Please allow glue to fully set prior to use. (See directions on glue bottle)

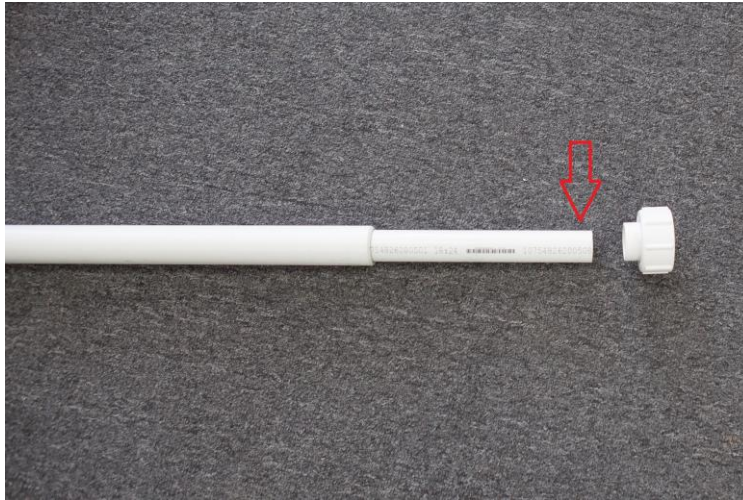

Mounting the brackets - The shorter flanged motor bracket is to be mounted in the center of the spa chair using the 3rd and 5th holes from the motor bracket (see picture) using the two 1" bolts. The taller flanged drain pipe bracket is to be mounted to the left of the motor bracket using the same 3rd and 5th holes also with the two 1" bolts.




Installing Basin - Mount the motor to the bracket using the large clevis pin and clip. Connect the 2 wiring harnesses (1 black and 1 white) to the spa chair, Turn on spa chair and push and hold the left arrow button to send the push rod forward until it stops.



Install Bearing Block Guide using the 4 longer 1 ½" bolts and Allen wrench tool provided.



Push basin under chair and align the push rod assembly to the rear of the basin, attach using large clevis pin and clip. Run the hot and cold supply lines underneath control box, and fasten the telescopic drain pipe to the threaded drain on the rear of the spa.

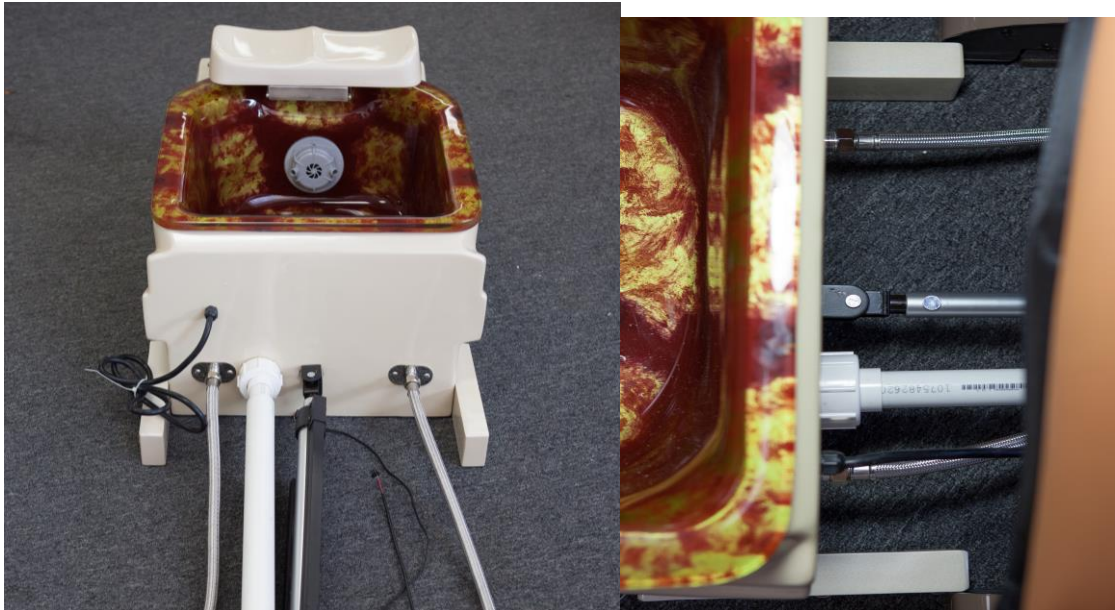

Mount the rear of the drain pipe to the drain mounting bracket using the smaller clevis pin and clip.



If extension cords are required please be sure to use a 12 gauge cord.

Basin Assembly – Crystal Base

Preparing Drain Pipe Assembly - Place threaded cap portion of the drain coupler onto the telescopic drain pipe, apply PVC Glue to the outside of the pipe and inside edge of flange(see picture). Please allow glue to fully set prior to use. (See directions on glue bottle)



Mounting the brackets - The shorter flanged motor bracket is to be mounted in the center of the spa chair using the 2nd and 4th holes from the motor bracket (see picture) using the two 1" bolts. The taller flanged drain pipe bracket is to be mounted to the left of the motor bracket using the same 2rd and 4th holes also with the two 1" bolts.



Installing Basin - Mount the motor to the bracket using the large clevis pin and clip. Connect the 2 wiring harnesses (black and white) to the spa chair, Turn on spa chair and push and hold the left arrow button to send the push rod forward until it stops.



Push basin under chair and align the push rod assembly to the rear of the basin, attach using large clevis pin and clip. Run the hot and cold supply lines underneath control box, and fasten the drain pipe to the threaded drain on the rear of the spa.



Mount the rear of the drain pipe to the drain mounting bracket using the smaller clevis pin and clip.



If extension cords are required please be sure to use a 12 gauge cord.

Care and maintenance

After each use:

- Make sure that the Jet motor is turned off, wait for impeller to come to a complete stop
- Remove Impeller housing from magnetic motor and disassemble
- Sanitize Impeller assembly(Jet Cover, Impeller, and Motor base/shaft) & basin bowl with Anti-Bacterial Solution(DO NOT USE ACETONE)
- Rinse Impeller assembly and basin bowl with cool water
- Massage Chair upholstery can be cleaned with a clean damp cloth, clean off any residue left from pedicure after each use to prevent stains.

End of the day:

- Check all air, water, and electrical connections for cracks, leaks, or damage
- Wipe down chair/basin with damp cloth to prevent stains
- Dust/clean control box with dry cloth or duster to prevent overheating

Periodic Maintenance

- Inspection/lubrication of massage roller and track is required every 6 months to ensure proper function and long service life.
- Prior to inspection please ensure that the unit is off and unplugged.
- To get to massage rollers, begin by removing the covers on the front of the chair, and removing the black friction cloth by unzipping on all sides.
- Inspect motor track(white delrin tracks on the left and the right) for damage or foreign objects, as well as proper lubrication(light film of grease on the track)
- If the track seems dry or under lubricated, lubricate using white lithium grease that can be purchased from local auto parts store.

Limited Warranty

All Fiori 8000 purchases includes a limited warranty for the original purchaser. This warranty covers the Massage Chair, Spa bases, and their components to be free of Material, Workmanship, Manufacturing defects for up to one year from the original purchase date. No other warranties expressed or implied.

Purchaser is responsible for all labor and shipping costs. W.S. Industries, Inc. is not liable for any damages or reduction in performance directly or indirectly resulting from misuse, unauthorized repairs or modifications, freight damage, water damage, neglect, improper cleaning techniques or solutions, improper application or installation, or normal wear and tear. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts. So the above limitations may not apply to you. W.S. Industries, Inc. covers replacement parts only for defective items, replacement parts for damaged items can be purchased.

W.S. Industries, Inc. is not warranted in any way, except as expressly stated in this limited warranty and by operation of law

By using this pedicure spa, the Purchaser agrees that the obligation of W.S. Industries, Inc. shall not extend to indirect or consequential damage, injury, serious bodily harm, or death which may result from pedicure spa use. Purchaser agrees that the obligations of W.S. Industries, Inc. are limited to those set herein and that there are no other obligations except those expressly agreed to in writing by W.S. Industries, Inc. No dealer or other person has any authority to bind W.S. Industries, Inc. to changes or additions to this warranty or its products; accordingly, W.S. Industries, Inc. is not responsible for any such warranties or representations.