



SPAzi®

By LC CORP



Owner's manual


Model: Z470

SpaSalon.us
wholesale

WWW.THESPAZI.COM

Owner's manual

Table of Contents

Inspection of the Spa Zi - model  470	3
Introduction	4
Specification	5
Identified parts	6
Spa Installation & Fiber Glass arm assembly Instruction	7
Safety Instruction	9
Drain pump installation (optional)	10
Health risk warning	11
Operation & use Adjust footrest	12
Cleaning & Maintenance	13
Warranty & Service	16

Inspection of the SpaZi - Model Z470

Inspect your Z470 and contact your local SpaZi dealer or call SpaZi at 800-887-0880 for any visible damage.

Record important information

Installed by:

Installation Date:

Serial number:

(Locate in the back of Spa Base)

Registration form has been mailed on:

(It is very important to mail your Registration Form to SpaZi. Failure of doing so may cause the product warranty to be voided).



8105 Anderson Rd
Tampa, FL 33634.
Tel: 1-800-887-0880

Warning

The Spa must be installed by a qualified, licensed plumber and is in compliance with the local government.. Failure to comply may result in serious injuries and Warranty will be voided.

We strongly recommend that all outlets connected to pedicure spas to include a GFCI device (Ground Fault Circuit Interrupters) This will reduce the risk of electric shock.

Read this User's Manual thoroughly before installation and use

Introduction

SpaZi would like to thank you for your purchase of the Z470. With an impressive design and a highly quality control production, Z-450 of SpaZi surpasses the industry's standard for performance and comfort.

With SpaZi Z470 you can be assured of an uncompromised cleaning standard and safe pipe-less technology; Pipe-less jet features a convenient, removable screen plate for easy cleaning. You will be pleased with our world-class massage chair; a full function massage system includes kneading, tapping, rolling system that provide your clients with the ultimate relaxing moment. All parts in Z470 are made to the highest safety standard.

With minimal maintenance and care, your Z470 will give you years of carefree service.

Specifications:

Dimension: <i>(With seat back)</i>	52"L x 28"W x 52"H
Net weight:	252 lbs
Shipping weight:	302 lbs
Capacity of tub:	5 US gallons
Spa base:	Fiber glass with steel frame
Power source:	120V AC, 12 Amp, 60Hz



Identified parts.



1. Chair with massage system
2. Hand shower
3. Water spout
4. On/Off Air Switch
5. Massage & recline control
6. Hot & Cold mixing valve

7. Adjustable footrest
8. Air control
9. LED light
10. Overflow
11. Drain control Knob
12. Jet motor

Spa Installation Instruction:

Electrical Service

An 120 V, 60 Hz, 12 Amp GFCI protected grounded circuit must be used to supply power to the Spa Zi Z470 The Service must performed by qualified licensed electrician.

Water Supply

All plumbing connections must conform to local codes
For the state of MA: proper backflow protection shall be installed.


Hot water supply temperature

The hot water supply temperature must not exceed 120 degree F (48 degree Celsius).
Adjust your hot water heater accordingly.


Hot and Cold water supply lines

Carefully connecting the coming water supply lines to the appropriate hoses locate on the back of the Z470 It is recommended to shut off all valves during installation.

Electric wiring diagram- w/o Drain pump

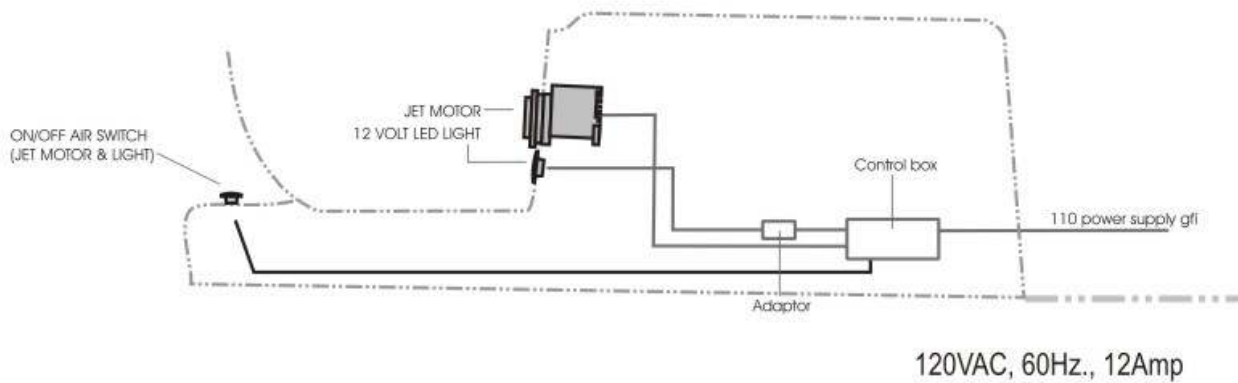

Electric wiring diagram- with Drain pump (optional)

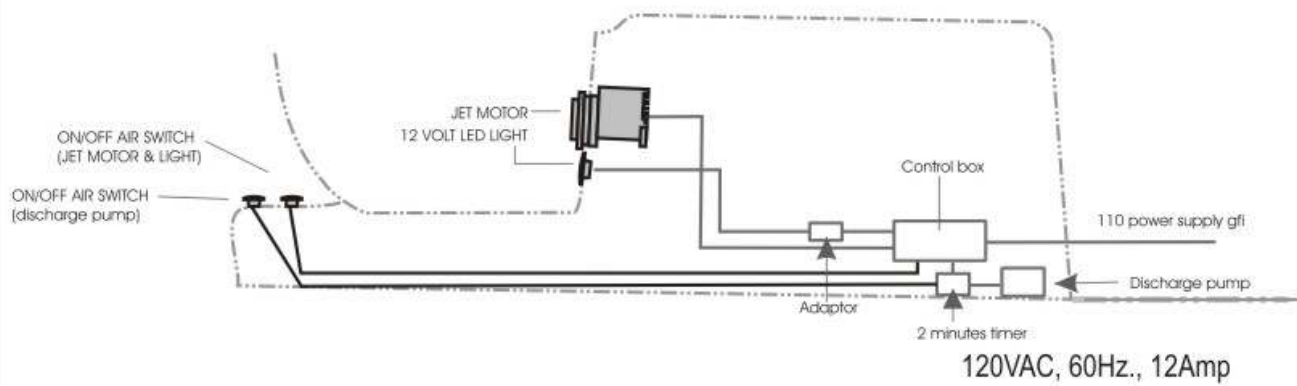

Massage chair assembly: *(See details in chair user's manual)*



Drain line Installation:

Warning

The Spa must be installed by a qualified, licensed plumber.
Failure to comply may result in serious injuries and
Warranty will be voided.

- **Gravity drain:**
Spa **470** uses a standard gravity drain. A floor drain is recommended
P-Trap is supplied.
- **Discharge pump:** (Optional)
Discharge pump is installed by manufacturer


Safety instruction

Caution: Basic precaution should always be observed, including the followings:


Those with the following conditions, but no limited to, should consult with their physician prior to using this product:

- A - Malignant tumor
 - B - Heart disease
 - C - Conditions requiring rest
 - C - Back disease or back trouble from injury by accident.
- Always enter and exit the pedicure spa slowly and carefully.
 - Do not permit children to use this unit unless they are supervised at all time.
 - Do not use outdoors
 - Do not use this unit if abnormal sound is heard.
 - Make sure all operation switches are in OFF position before connecting the power cord to an electrical outlet.

Pump Drain Installation (optional)

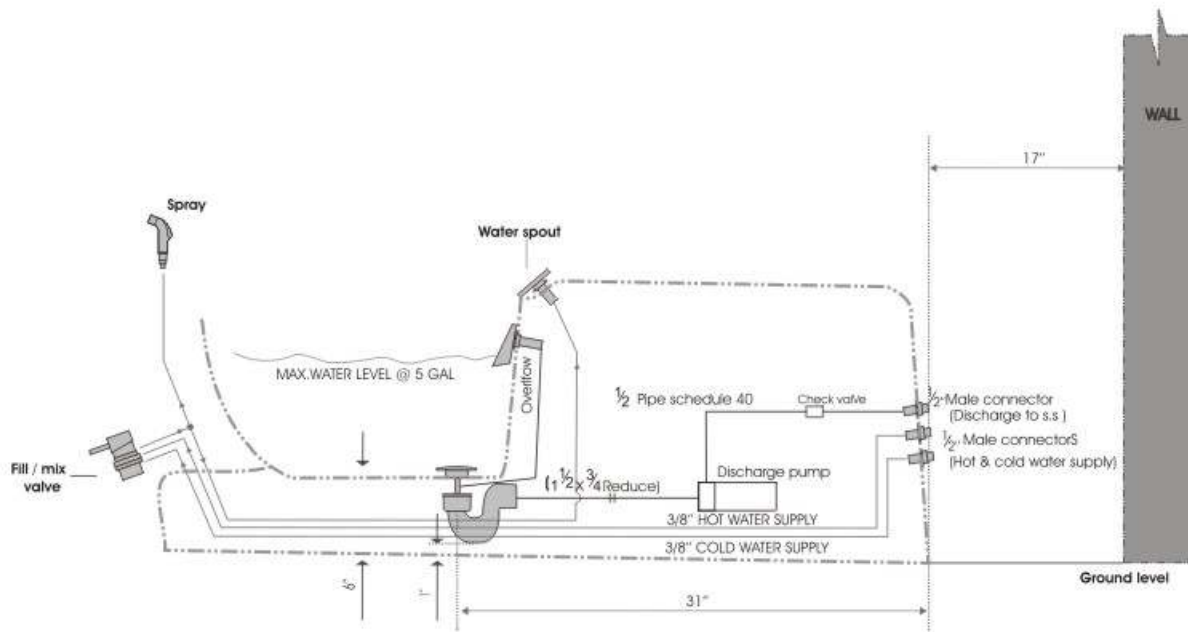

Gravity Drain Installation

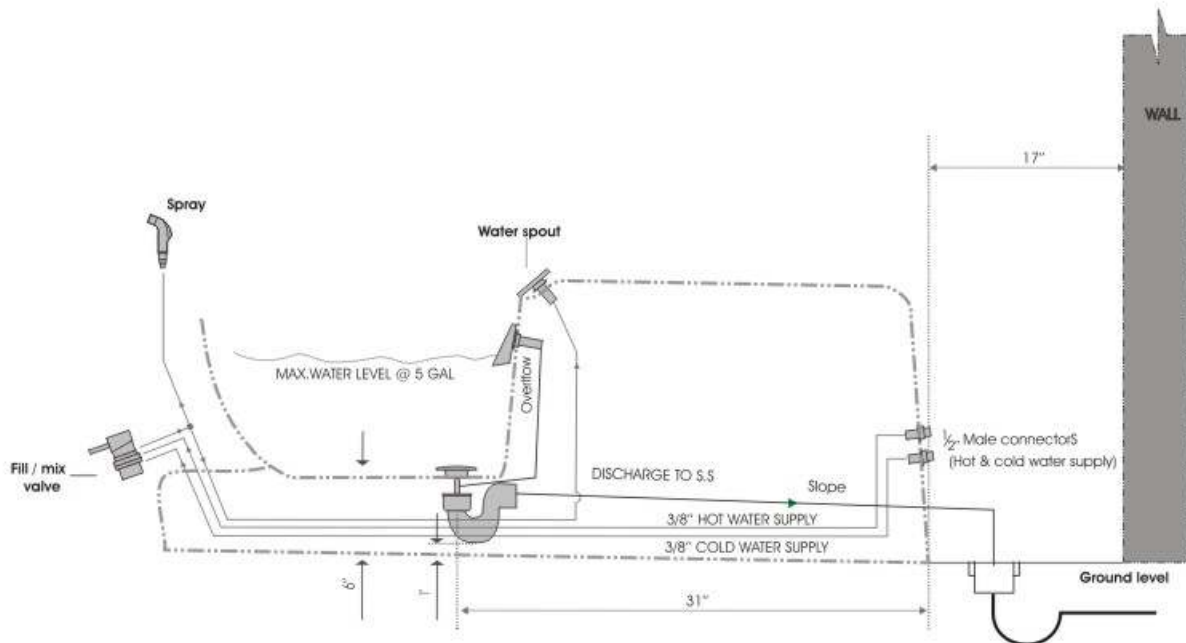

Health risk warning

Individuals whose feet or legs are inflamed or have open wounds should not be allowed to use the pedicure spa at any time.

Nail technicians should advise clients to consult their physician before using the pedicure spa if there is any sign of fungal infection, swelling, fracture, or persistent pain. In some cases diabetics may experience improved circulation in their feet, but should first consult their physician prior to receiving a pedicure. The client's massage and pedicure spa experience should be pleasant and comfortable.

Warning


Grounding instructions and methods:

We strongly recommend that all electrical outlets connected to the pedicure spas to include a GFCI device (Ground Fault Circuit Interrupter) in order to reduce the risk of electric shock.

In the event of break down or malfunction, the grounding provides a path of the least resistance for electrical current to reduce the risk of electric shock.

Operation and use

1 - Fill Sink:

Your Spa  470 is provided with a single hot and cold mixing valve, located on the Front Center of the Spa. This is a pressure balance valve that requires you to lift the handle to start the water flow and turn the valve to the temperature level desired. Fill water until the jet motor is completely submerged.

2 - Start Whirlpool

Press ON / OFF power button, located next to the footrest, to turn jet motor and Spa light, To stop the whirlpool function, press the button again.

3 - Adjust air control

The air control button is situated on the Spa base, just under the chair. You can control the supply of air to the jet motor by turning this chrome knob in a clockwise direction.

4 - Hand shower

The Spa Zi is equipped with a self held sprayer, located under or to the left of the footrest. To activate the hand shower pull the hand shower, lift handle of hot and cold mixing valve and depress the thumb control on the sprayer handle.

5 - Adjust footrest

Spa Zi allows you to adjust the height of the footrest by lifting it up. To have the footrest back to normal position, pull the footrest down (see picture below).



6 - Drain whirlpool sink

A - Gravity Drain

Open the drain plug by turning the control knob on the right of the spa tub.

B - Discharge pump (Optional)

Open the drain plug by turning the control knob. Press discharge pump button, located on front side of spa base.

7 - Massage chair

Please see chair User's Manual for operation and use of the chair.

Cleaning & Maintenance

Pedicure Spa owner should always contact your local governing agency for their specific cleaning, disinfecting requirements and regulations for pedicure spas. For your clients safety, always use the regulations as a minimum standard for cleaning and disinfecting. Combining your state's standards with the regimen listed below may provide your clients with a safe and healthy pedicure spa environment experience.

See Exhibit A for the completed list of state board contacts

Below is the recommended Cleaning and Disinfection Procedures for Foot Spa Basins in Salons by Environmental Protection Agency (EPA) - December 2006

Customer precautions - protecting the client

1. **Check the condition of the client's feet and legs:** If open sores or skin wounds are present (including insect bites, scratches, scabbed-over wounds, or any condition that weakens the skin barrier), explain to the client why they should not use the foot bath.
2. **Complete pedicure or wax after the foot bath soak:** Any procedure that risks damage to a client's skin should not be done before soaking feet in the foot spa basin.

Step by step instructions for disinfecting pedicure foot spa equipment

After Each Client: (this can take place any time after the client's feet are out of the footbath, while feet are massaged, toes are painted, or other opportunities)

1. Drain the water from the foot spa basin or bowl and remove any visible debris.
2. Clean the surfaces of the foot spa with soap or detergent, rinse with clean water, and drain.
3. After cleaning, disinfect* the surface with an EPA-registered hospital disinfectant (for description) according to the manufacturer's directions on the label. Surfaces must remain wet with the disinfectant for **10 minutes or the time stated on the label**, which may be shorter.
* For whirlpool foot spas, air-jet basins, "pipe-less" foot spas, and other circulating spas: It is best to disinfect by filling the basin with clean water, adding the appropriate amount of liquid disinfectant, and turning the unit on to **circulate** the disinfectant for the entire contact time.
4. After disinfection, drain and rinse with clean water.