INSTALLATION & OPERATING

TABLE OF CONTENTS

SECTION 1	
SAFETY & PRECAUTION	Page 4
SECTION 2	
IDENTIFY YOUR FOOT SPA	Page 5
SECTION 3	
FOOT-SPA CLEARANCE	Page 7
SECTION 4	
INSTALLATIONS	Page 8
SECTION 5	
OPERATIONS & USE	Page 13
SECTION 6	
CLEANING & MAINTENANCE	Page 16
SECTION 7	
WARRANTY & SERVICE	Page 17

SAFETY & PRECAUTION

Thank you for the purchase of the LUXE spa of Spa Tech LLC. Please carefully read all the instructions in prior to installing the spa. Especially, please pay additional attention on the stated precaution and warning statements.



This product is to be connected to a branch circuit outlet protected by a Class A Ground Fault Circuit Interrupter (GFCI), and the GFCI must be tested regularly for continued protection and correct operation. If the GFCI outlet is not available. DO NOT USE THIS PRODUCT! Please contact a licensed electrician for installation of a Class A GFCI according to local electrical codes or equivalent.

THIS PRODUCT IS FOR INDOOR USE ONLY. DISCONNECT POWER SUPPLY CORD BEFORE SERVICING AND CLEANING.



It is required that this Foot Spa being installed by a licensed plumber and electrician in accordance with local codes. Plumbing and Electrical installations must be adhered to in order for the warranty to be in effect and to insure the WARNING utmost in safety. Chair and Spa Basin have a maximum seating capacity of 250 pounds.

THE BASIC PRECAUTIONS MUST ALWAYS BE OBSERVED:

- 1. Read and follow closely all instructions.
- 2. Do not let children use this unit unless they are supervised at all times.
- 3. Use this unit only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never drop or insert any object into opening.
- 5. Do not block jets during whirlpool operation.
- 6. The unit must connected to an electrical supply circuit that is protected by a GFCI.
- The clean jet motor is magnetically driven and insulated twice; therefore, it does not require to be bonded. PLEASE SAVE THESE INSTRUCTIONS.

NOTE: Keep the spa tub dry and clean at all times after serving each customer. Refer to the State Board's sanitation regulations applied on pedicure spa.



- Use SOFT SPONGE to clean glass bowl for avoiding surface scratches.
- 2. Excessive water temperature is dangerous and should be checked before use.
- 3. Maximum water temperature should never exceed 90 degrees F or warm level.
- 4. Always enter and exit the Foot Spa slowly and carefully.
- 5. Never operate any electrical devices into or near the Foot Spa.
- 6. All of these components must be factory installed: Jet, drain pump, massage chair, led light.


This product in whole is in compliance with the applicable UL LISTED standard, issued by Underwriters Laboratories Inc.,

IDENTIFY YOUR FOOT SPA




Page 5

IDENTIFY YOUR FOOT SPA (Cont'd)

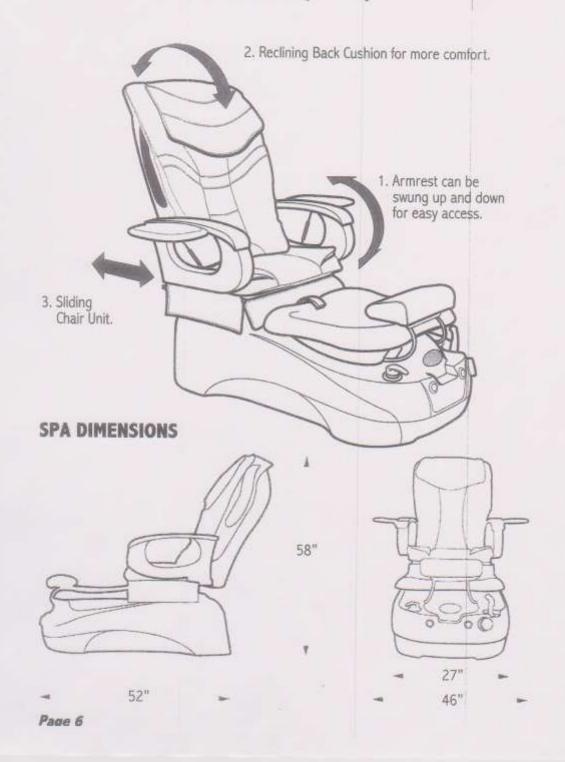



FOOT SPA CLEARANCE **WALL CLEARANCE** 16.00"-60.00" -SPACING 16.00" Page 7

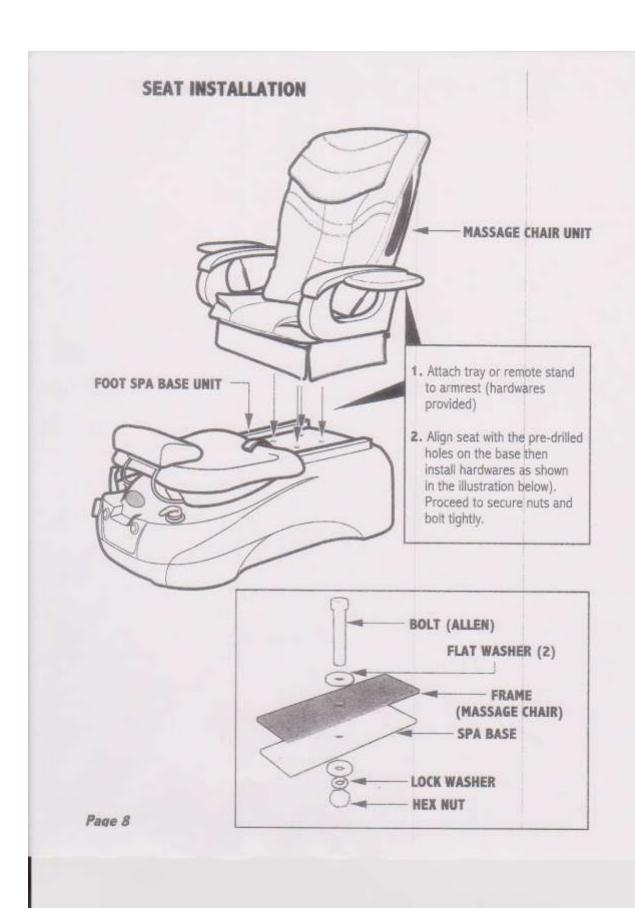

WHIRPOOL JET INSTALLATION


PURE JET INSTALLATION

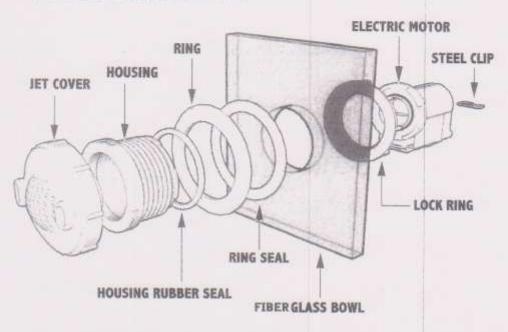

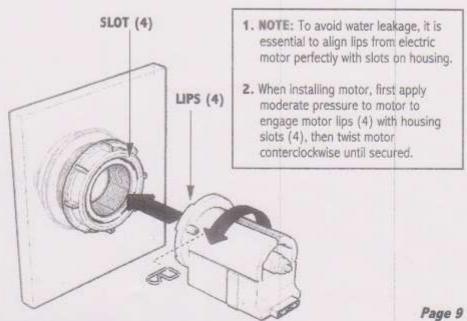


WHIRPOOL JET INSTALLATION (Cont'd)

MAGNAJET 500 INSTALLATION

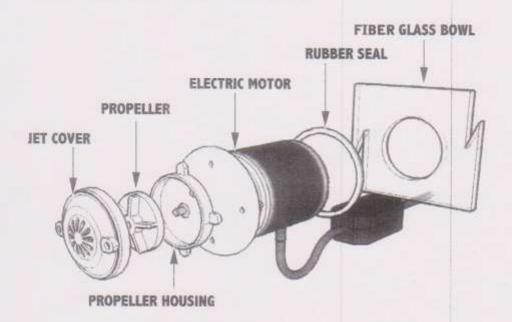


PLUMBING CONNECTIONS

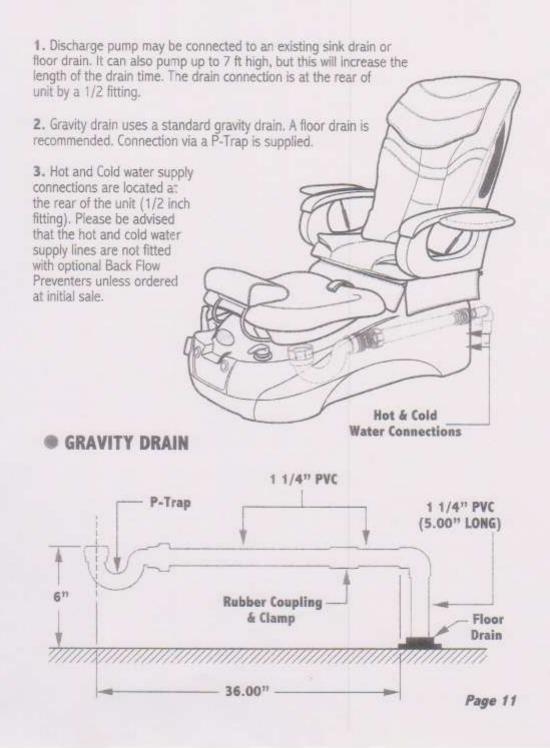

PLUMBING CONNECTIONS (Cont'd)

POWER DRAIN

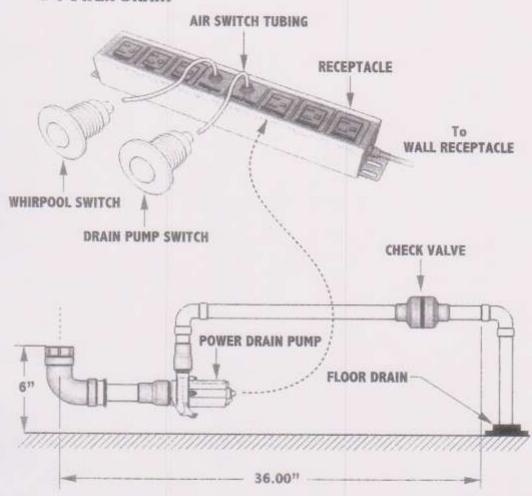

- 4. Have a qualified licensed electrician to install the wiring according to local codes. The clean jets are 1/10hp, 120V, 1.2 AMP 600 HZ. A15 AMP GFI protected circuit must be used to supply power to the unit. The roller back massage chair uses an 115V supply.
- Spa base should be anchored securely to the floor. The base maybe anchored through the opening in the back of the base wherever access is convenience for the installer.

FAILURE TO ANCHOR THE BASE MAY RESULT IN PERSONAL INJURY OR DAMAGE OF THE UNIT. DAMAGE AS A RESULT WILL VOID THE WARRANTY.

SPECIFICATIONS

CHAIR SPECIFICATIONS

Massage Robot: 2 Motor/ 4 Roller Massage Operating Voltage: 115 V

Electrical Input Ratings (Whole Spa Unit): 120 VAC. 6.0 A, 60 Hz (GFCI Protected)

Maximum Weight Capacity: 250 Lbs

Maximum Water Temperature: 40 Degree C (104 Degree F)

Weight: Chair 220 Lbs

Shipping Weight Chair - 270 lbs

Foot Spa Clearance for Reclining / Sliding Operation: Refer to Page 6 & 7 for dimensions

Six (6) Massage Functions: Press, Kneading, Flapping, Percussion, Knocking, Kneading & Flapping.

Massage Head Storage: Auto stop at top Automatic Timer Shut-Off: 15 minutes

Note: Due to our policy of continuous improvements, all specifications are subject to change without notice Also, all dimensions and weights are approximate

BASIN SPECIFICATIONS

Hot and cold water inlet supply lines are using 0.5" diameter fittings

Drainage: Refer to page 11 & 12; built with drain pump for wall drain or a gravity drain for floor drain

Empty weight: 120 lbs Shipping weight: 170 lbs

Capacity of basin: 5 U.S. Gallons

Chromo therapy Light: 120V, 60 Hz, 21W with Class 2 P.S: Input: 120V, 60Hz, 21W; Output: 12Vac, 400mA

Motorized, Massaging Chair: 120V, 60 Hz, 2.0A, 180W with a hand-held low voltage remote controller.

Drain Pump Motor: 120V, 60 Hz, 1.4A, 85W Whirlpool Jet System: 120V, 60 Hz, 1.2A, 30W

One On/Off air switch for Whiripool Jet & Led Light. One On/Off air switch for Drain Pump

Note: Due to our policy of continuous improvements, all specifications are subject to change without notice

Caution: Pedicure spa must be installed by a licensed electrician and a licensed plumber, conforming to all local and national electrical codes. Also, the spa basin should be anchored securely to the floor.

OPERATION AND USE (Cont'd)

BASIC PRECAUTION SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING:

1. Read and follow all instructions.

DANGER. To reduce the risk of injury, do not allow children to use this unit unless they are supervised at all times.

Use this unit only for its intended use as described in this manual. Do not use attachments that are not recommended by manufacturer.

4. Never drop or insert any object into opening.

5. Do not block jets during whirlpool operation.


The unit must be connected to an electrical supply circuit that is protected by a GFCI.

The clean jet motor is magnetically driven and insulated twice. Therefore
it does not require to be bonded.
 PLEASE SAVE THESE INSTRUCTIONS.



OPERATION AND USE (Cont'd)

SHIATSU REMOTE CONTROL

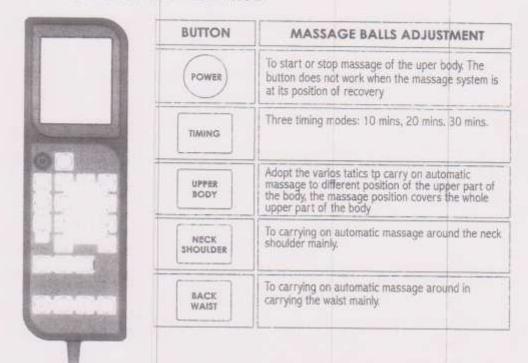

BUTTON	DISPLAY STATUS	MASSAGE BALLS ADJUSTMENT	
PRESS	100	Speed, Width, Strength	
KNEADING	2	Speed, Strength	
FLAPPING	19	Speed, Width, Strength	
KNEADING & FLAPPING	19)	Speed, Strength	
KNOCKING	10	Speed, Width, Strength	

CLEANING & MAINTENANCE

Please refer to the diagrams to remove jest covers for cleaning.

Spa Tech LLC., highly recommends the following cleaning regimen. You should always contact your local governing agency for their specific cleaning and disinfecting requirements and regulations for pedicure spas. For your clients safety, always use the regulations as a minimum standard for cleaning and disinfecting. Combining your states standards with the regimen listed below will provide your clients with a safe healthy pedicure spa environment experience.

ROUTINE MAINTENANCE

Powdered cleansers or abrasives at NOT RECOMMENDED. A clean towel or sponge are all that usually needed. A soft bristled brush may be used when excessive residue is present. Use a mild soap and water solution to clean the upholstery but do not over wet. Wipe dry with a clean towel. No internal maintenance of the spa components is necessary. Remove clean jest caps and spray with disinfectant after each use. For extra protection, our recommendation is that the system be flushed daily or weekly depend on using. To flush the clean jet system, fill spa with hot water to just above the jests. Add disinfectant. Run whirlpool for 15 minutes, drain and then wipe dry with clean soft cloth.

RECOMMENDATION:

Keep the spa tub dry and clean at all times after serving each customer. Refer to State Board's sanitation regulations required on pedicure spa.

NOTE

Cleaning or sanitizing is NOT disinfecting. According to the Centers for Disease Control and Prevention (CDC), and the US Environmental Protection Agency (EPA), disinfecting occurs only when there is a reduction of pathogenic microbes at 99,999 %. Sanitizing is only a reduction of 99.9 %. Cleaning of whiripool pedicure spas requires surfactant and chelating detergents that are low-foaming and have ability to remove body oils, organic oil additives, mineral oils, skin cells, nail clipping, etc, that can accumulate both in the basin and the jets which may become a fertile area for microorganisms to grow.

The use of oil based products can build up in the whirlpool system causing clogging in the jets.

Adherence to the above cleaning will minimize the build. Spa Tech LL does not recommend the use of mineral oil based products.

TESTING/FLUSHING FOOT SPA

After foot spa has been installed, fill tub with water just above the jets. Carefully check for leaks at drain and over flow. After checking underside for leaks, turn on system by pushing whiripool button and watch for leaks as water circulates. Let tub run full cycle. Open drain for water discharge.

WARRANTY & SERVICE

Spa Tech LLC., warrants to the original purchaser that the new pedicure spa will be free from defect during the Standard Warranty Period (listed below). The shipping date and the uniquely-coded Serial Number on the back of each spa chair will justify the start of the warranty period for the product. The warranty is null and void if the spa is taken from its initial place of installation, or it is not installed in accordance with federal, state or local codes and ordinances. Also, this warranty does not apply if the pedicure spa has been subject to misapplication, improper installation or maintenance, negligence, improper cleaning or other circumstances beyond Spa Tech's control.

WARRANTY

- 1. Limited One (1) Year warranty on Spa Shell.
- 2. Limited One (1) Year warranty on the Whirlpool pump.
- 3. Limited One (1) Year warranty on the Pure Jet.
- 4. Limited One (1) Year warranty on the Fiber Glass Bowl.
- Limited One (1) Year Parts-Only warranty which covers the Hydraulic System, Discharge Pump, Massage System and all Electrical Components.
- 6. Limited 30 days of labor.
- Spa Tech LLC., pays shipping charges on all replacement parts during the first 90 days of the stated Warranty Period. After 90 days, the consumer is responsible for all labor and shipping costs incurred.

EXCLUSIONS

- 1. Damage to pump parts and/or motor parts due to obstruction in plumbing line, etc.
- Staining, fading or discoloration of plastic surfaces due to exposure and/or the use of harmful cleaning agents or chemicals.
- Staining, fading or discoloration caused by improper or poor water additives not related to the maintenance of proper water are not covered by this warranty.
- 4. Staining, Fading or discoloration of seat, armrests or footrests.
- 5. Freight damage, misuse, neglect, accident, natural disaster and abuse.
- 6. Unauthorized repairs.

SERVICE

- 1. The Dealer shall forward all warranty-related matters to our Customer Service Department.
- 2. Serial Numbers and Original Invoice must accompany all warranty claims.
- Customers are responsible for shipping defective parts back to Spa Tech. These parts must be packaged correctly in order to protect against any further damage.
- 4. All parts are to be shipped by UPS Ground Service average 2-5 days.
- All defective parts must be shipped back to Spa Tech within 30 days of receiving the new replacement parts or warranty will be void.
- Any warranty claim that cannot be determined over the phone, customer must send photos and original invoice directly to Spa Tech before any repairs can be performed.

WARRANTY & SERVICE (Cont'd))

SERVICE (Cont'd)

Any service performed on the product without Spa Tech authorization will also void the warranty.
 Each service call from the customer will be assigned a Claim Number. The Claim Number will stay open until the problem is resolved.

No dealer or other person has any authority to bind Spa Tech LLC., to changes or additions to this warranty or its products. Accordingly, Spa Tech LLC., is not responsible for such warranties or representations.

TECHNICAL SUPPORT

11081 Westminster Ave, Garden Grove, CA 92843. Tell: 1-800-866-6377. - Fax: 714-554-1506 Website: www.spatechcorp.com