

ARON/METTE

BACKWASH UNIT MANUAL






Aron & Mette Shampoo Backwash Unit (120 pounds assembled).

- **3 shipping boxes: Bowl/Faucet/Bed.**
- **Attach the bowl to the base.**
- **Attach the faucet and shower hose. Attach a vacuum breaker if needed.**
- **Connect to a hot & cold water supply and to a waste water drain.**
- **Anchor the backwash unit to your floor (anchors are not included).**

NOTE:

A qualified Plumber should be employed to assemble these Shampoo Backwash Units. Install in a waterproof environment (for example on a tile or concrete floor). Wood floors should not be used without first putting down a waterproof rubber mat.

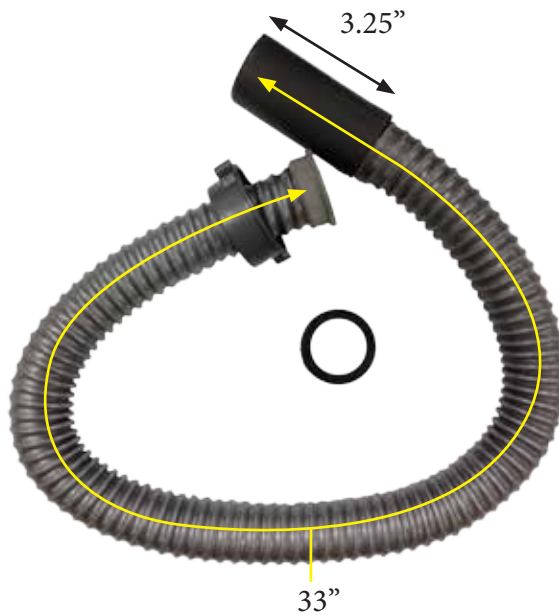

The grey Flexible Drain Hose pictured above has been made to American Standard fittings.

- 1.5 inches in diameter - total length of about 33" inches.
- Gaskets and Waste End fittings are included.
- Material: heavy-duty white polypropylene.

NOTE:

Remove the access door to gain access to the interior of the Backwash Unit (access hole is approximately 14" high by 6" wide).


Seat Cushion: 3" Thick



AYC Vacuum Breaker (if your plumbing codes require one).





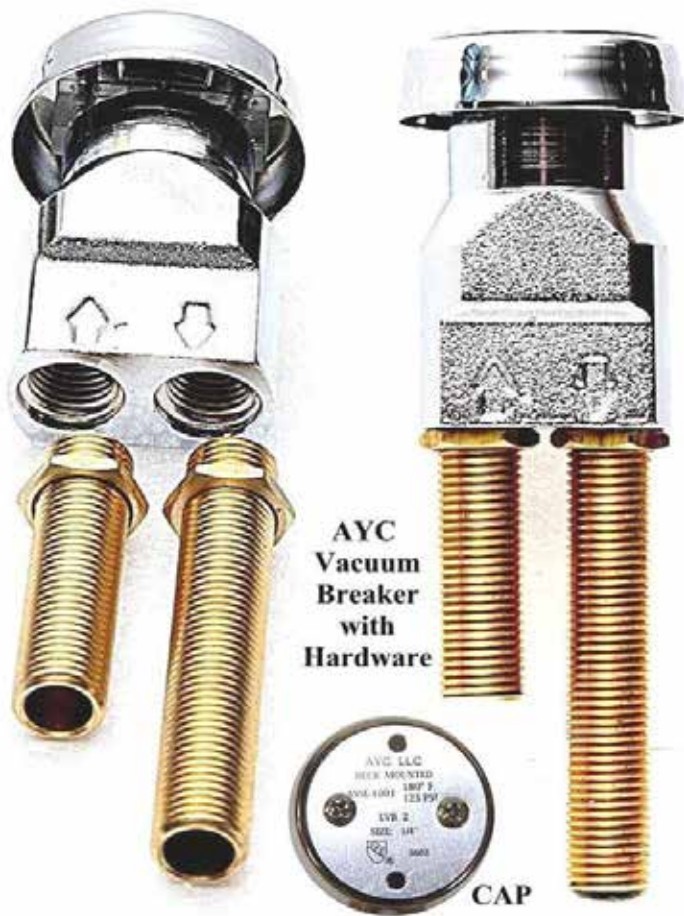

A vacuum breaker is an attachment that prevents water from being siphoned backward into the public drinking water system.

This prevents contamination should the public drinking water system's pressure drop.

A vacuum breaker typically contains a plastic disc that is pressed forward by water supply pressure, and covers small vent holes.

Should the supply pressure drop, the disc springs back opening the vent holes (which let in outside air), and preventing backflow of water.

Vacuum breaker is included with faucet set.


Check your local building codes to determine if this device is necessary.


SPECIAL NOTE:

Water pressure (at the faucet) should never exceed 60 PSI.

Optimal operating water pressure should be in the 30-PSI to 45-PSI range.

You should know where your water shut-offs are located as well as the location of your building's pressure regulator.

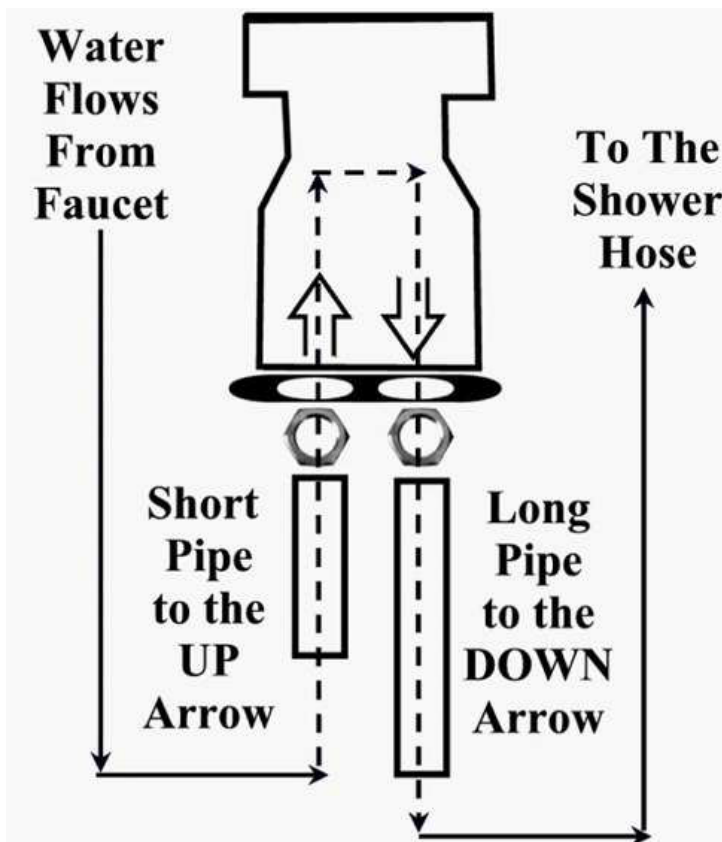

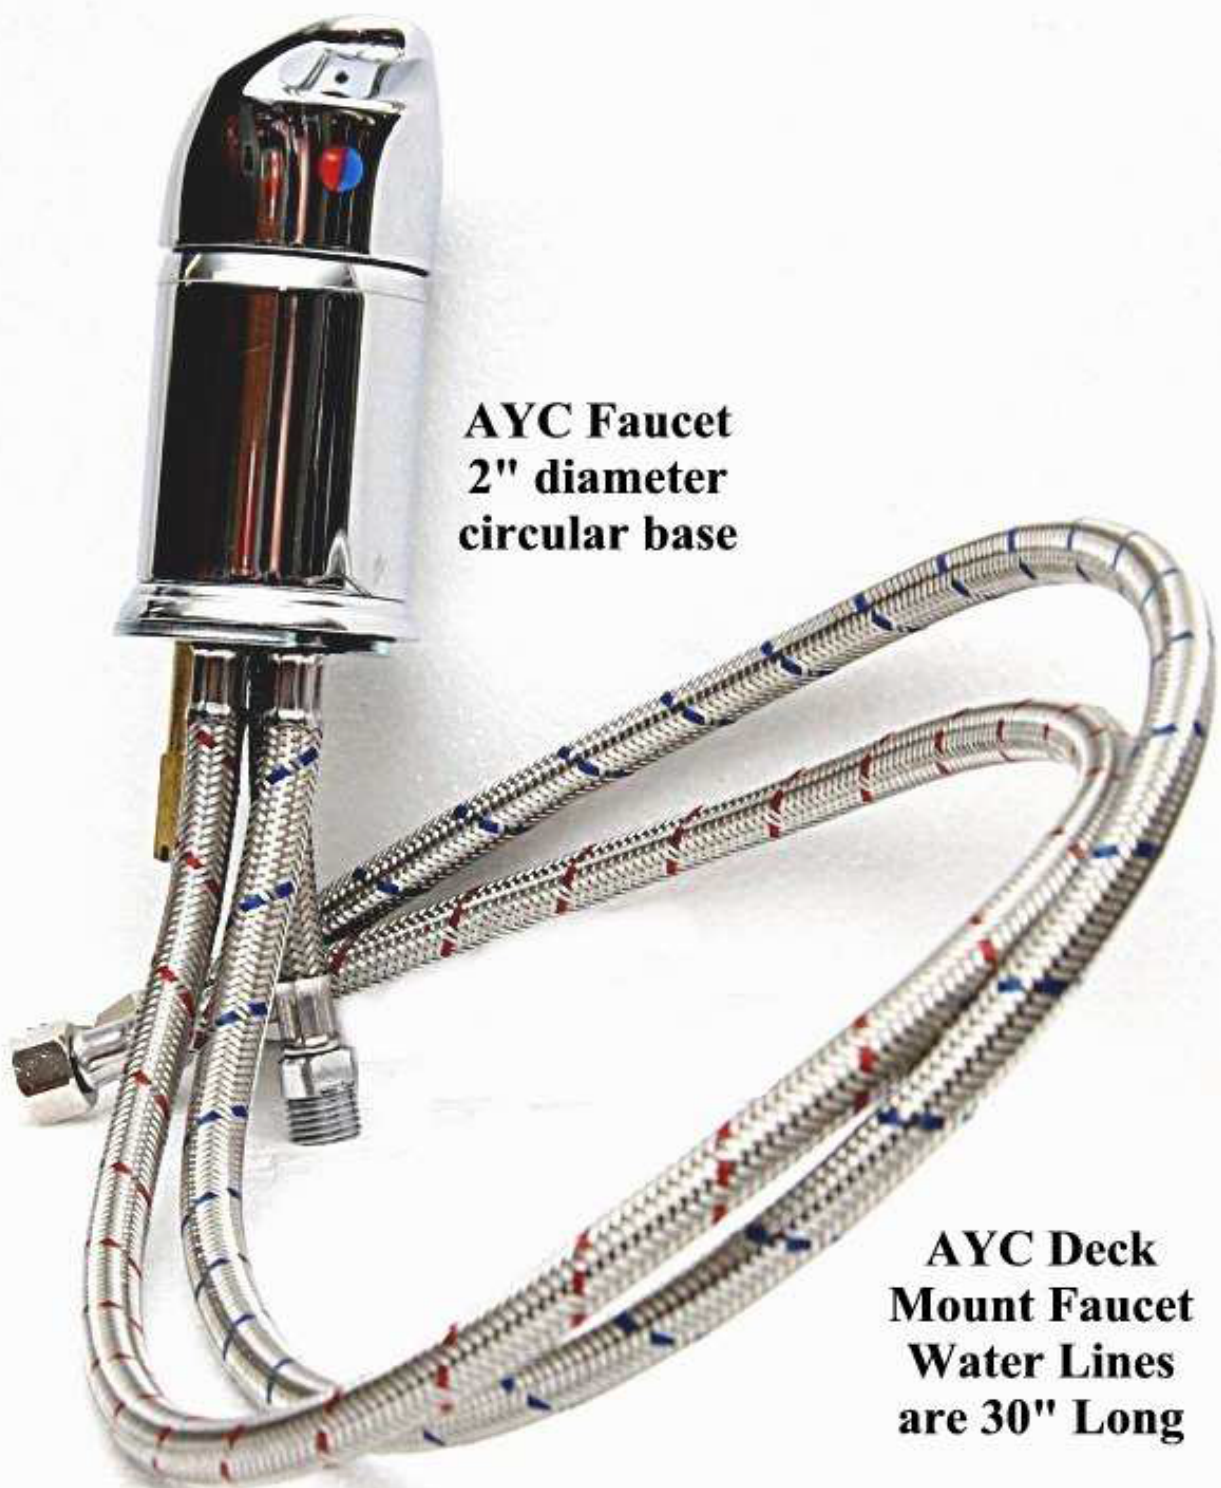


**AYC Faucet
2" diameter
circular base**

**AYC Deck
Mount Faucet
Water Lines
are 30" Long**



Freestanding - Shampoo Backwash Installation:

- 1) Can be against the wall or out away from the wall to allow access to shampoo from the rear.
- 2) Design your shampoo system to either dimensional setup.

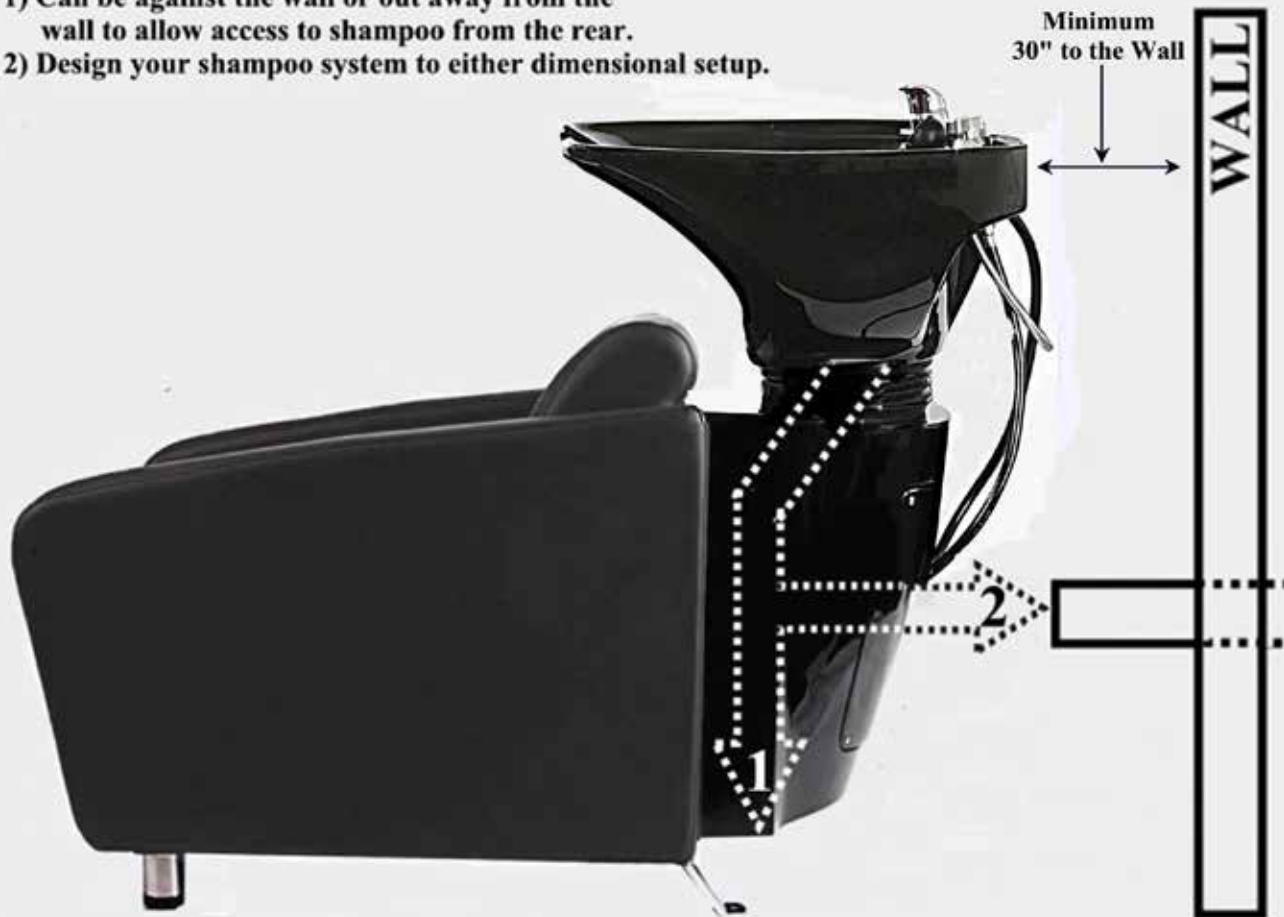

Minimum of 10" to the wall - when plumbing out the access door.

Floor Drain (1) - Minimum of 48" to the Wall.

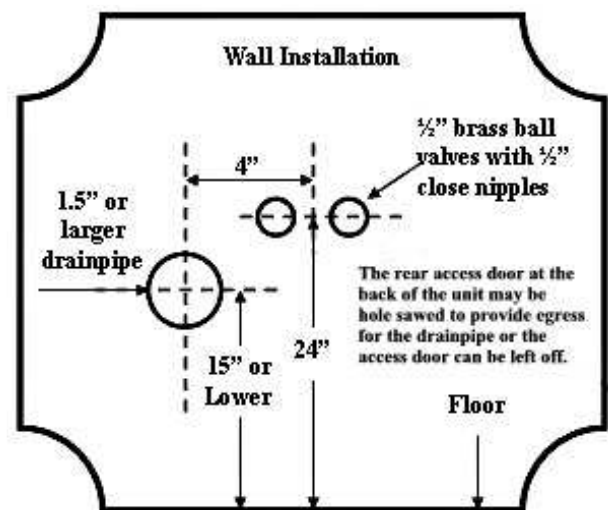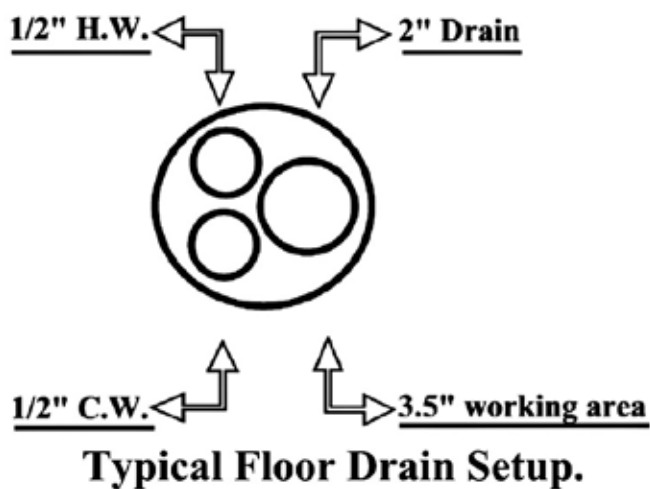

Scenario #1 = typical floor setup for the drain and water lines.

Scenario #2 = typical wall setup and dimensions for the drain & water lines.