CentriFuge Nail Table Installation Instructions





Nail Table parts included & needed for installation

- A) Marble Top (1)
- B) Left Leg with Exhausted Fan Motor and Filters (1)
- C) Table Top (1)
- D) Right Leg (1)
- E) Bolts (8), Washers (8), Allen Wrench (1)
- F) Armrest with Velcro strip (1)
- G) Brake Casters (4) Non-brake Casters (4)
- H) Screws (40)

- I) Stainless Steel Grill (1)
- J) Trash Bin (1)
- K) Optional Hi Powder LED Light (1)
- L) Carbon Filter (1), Dust Bag (1)



Remove drawer on Right Leg.



Step 2


Place flatten cardboard from shippping on floor.

Right Leg - Place Right nail table leg upside down on cardboard box to begin casters installation. Locate and position 4 caster indentations. Next, using 4 screws per caster, install 2 brake casters in front and 2 non-brake casters on rear for Right table leg. (see picture for image of brake and non-brake casters)

Left Leg - DO NOT turn Left nail table leg upside. Lay it flat (as shown in picture) on cardboard box. Install casters same as Right Table Leg.



Carefully position nail table legs and place the table parts in order. 1) Left leg 2) Table top in middle 3) Right leg.

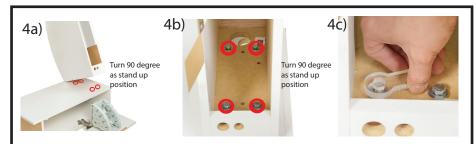

Step 4

Start Right table leg installation with 2 people. a) Lay Right table leg on cardboard box and aligning Table Top (turn 90 degree as stand up position) pre-drilled holes to Right leg pre-drilled holes. b) While one person is holding the Table Top in position, second person will insert 4 bolts and 4 washers into pre-drilled holes. c) Tighten bolts with Allen wrench.



Step 5

5a) With 2 people, insert Left leg power cord into Table Top side hole. 5b) Install Left leg by aligning Table Top pre-drilled holes to Left leg pre-drilled holes. 5c) While one person is holding the Table Top in position, second person will insert 4 bolts and 4 washers into pre-drilled holes. Do not tighten bolts completely (will do after install marble top in step 7).




Step 6 (Optional)
Skip this step if no LED Light has ordered. Place Hi-Power
LED Light inside Table Top and connect power cord through
Right Table Leg.

CentriFuge Nail Table Installation Instructions




Step 7

Carefully install marble top on nail table. Complete tighten bolts that attached Left leg to Table Top.

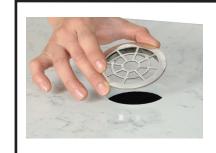

Step 8

Place Stainless Steel Grill in marble top pre-cut hole.

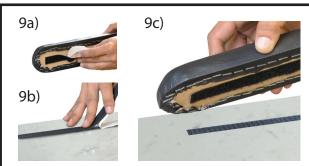

Step

Wipe off dust from marble top and armrest. To begin armrest installation, measure and align your armrest location before installing velcro.

- 9a) Place rough side of velcro underneath armrest
- 9b) Place soft side of velcro on marble top.
- 9c) Next, attach armrest to marble top.







Step 10

- 10a) On the Left table leg, place Dust Bag over the pipe (located over the fan).
- 10b) Place the Carbon Filter under the Dust Bag.



Step 11

Place drawer back on Right Leg.



Step 12

- a) Plug in fan and LED light to provided outlet (only plug in GFIC outlet).
- b) Test fan and LED light before put table in desired location.
- c) Installation is complete!