

Fiona spa pedicure chair ***ASSEMBLY INSTRUCTIONS*** **&** ***OPERATIONAL MANUAL***

Thank you very much for purchasing **FP-101 Valore Pedicure Spa**.

Please read this assembly instructions thoroughly and follow the step by step to assemble the chair.

CONTENT

Assembly Instructions	page 2
Fuse Check & Replacement	page 6
Safety Precautions	page 7



ASSEMBLY INSTRUCTIONS



Step 1:
Open the “Base” carton box first, and take out the “Seat cushion” aside. Then remove all packing stuff that is attached to the carton box.



Step 2:
Two men are needed to take out the base from the carton box to the desired position. See the picture above to hold the areas indicated.



Step 3:
Two men are needed to take out the backrest from the carton box. Then see next step.



Step 4:
Put the backrest onto the brackets (yellow arrow) on the base. One person is still needed to support the backrest until Step 10.



Step 5:
Insert the #1 pin (see page [A](#)) into the hole of the joint on both sides.



Step 6:
Insert an “R” clip into the hole on each #1 pin to prevent falling.

ASSEMBLY INSTRUCTIONS




Step 7:
Insert pipe plugs into both rectangle pipes.




Step 8:
Insert #2 pin into the holes on the "U" and the reclining motor to join them together.



Step 9:
Insert an "R" clip in to the #2 pin to fix it.

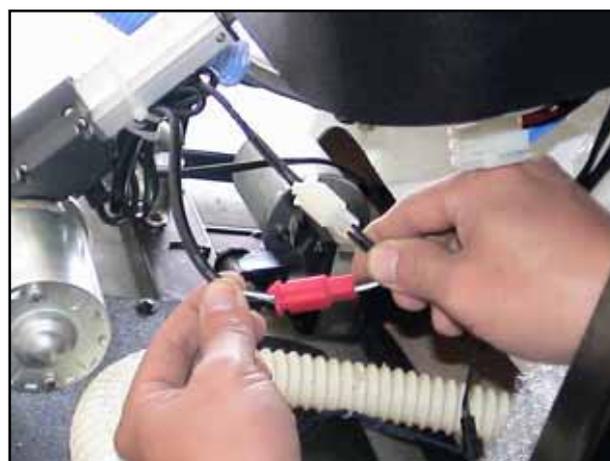

Step 10:
Connect the jacks of the wires for reclining motor and pushing motor. (Red to red; white to white)

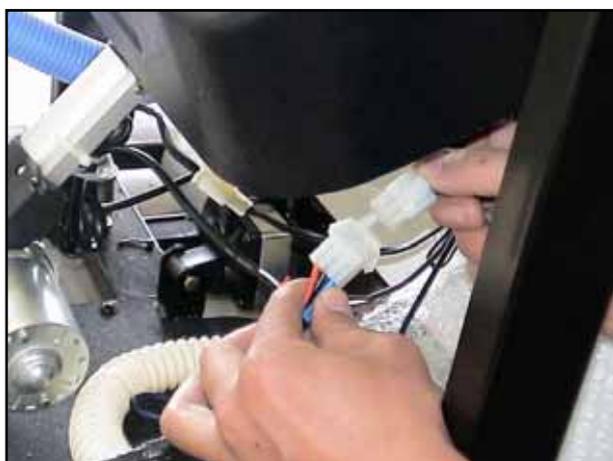

Step 11:
Connect the jacks of electric wires.



Step 12:
Plug the power cord, one end into the socket on the back cover, and the other end onto the outlet on the wall. Then, turn on the switch to "I".

ASSEMBLY INSTRUCTIONS



Step 13:
Remove the packing stuff on both sides, as shown in the pictures above. Also remove the packing carton board.



Step 14:
And then press the button on the remote controller to push out the SPA tub. See the picture above.



Step 15:
Mount the right and left armrests by inserting the metal piece into the bracket on the base. Then, push the armrests downward.



Step 16:
Fix the left armrest by inserting a short #3 screw and a washer into the front hole on the base frame. See above picture.



Step 17:
Fix the right armrest by inserting a short #3 screw and a washer into the front hole on the base frame. See above picture.



Step 18:
Fix the left armrest by inserting a long #3 screw and a washer into the front hole on the base frame. See above picture.

ASSEMBLY INSTRUCTIONS



Step 19:
Fix the left armrest by inserting a long #3 screw and a washer into the front hole on the base frame. See above picture.




Step 20:
Connect the wires from the seat cushion and backrest. Place the seat cushion onto the base nice and neat.




Step 21:
Unwrap and remove all the packing stuff. The installation is complete, and the chair is now ready to serve people.

Accessory Parts:



#1 pin



#2 pin



R Clip



Washer



#3 Screw

FUSE CHECK & REPLACEMENT

Fuse Check & Replacement:



Step 1:

Use a flat screw driver to take out the “fuse case” which is located at the middle of the power box (between the hole and the switch).



Step 2:

The fuse on the right side in above picture is in use and may blow. The fuse in the square plastic tube is a spare one.

*We wish you a prosperous business.
Thank you!*

SAFTY PRECAUTIONS

Please read this Safety Precautions thoroughly before using the chair.

- DO NOT stand on the SPA tub.
- DO NOT stop or block the SPA tub while it is moving out or in.
- DO NOT retreat the SPA tub back into the chair when it still contains water.
- Always DRAIN OFF the water when the SPA tub is outside of the chair.
- Always be aware of the drain pipe under the chair, and check it regularly for leaks or stock.
- DO NOT place and operate this massage chair outdoors, and keep away from humid, wet, hot, and dirty environments.
- DO NOT use this massage chair when it is working abnormally, such as the power switch, cord, or plug is broken, and the back cushion or the upholstery of backrest is torn. Call the seller's company for assistance.
- DO NOT attempt to repair or modify this chair without the technician's advice from the seller's company in order to prevent from potential damages and injuries.
- DO NOT let users drink or eat when using this massage chair.
- DO NOT load over-weight on this massage chair. The weight limit is 380 lbs.
- DO NOT touch the power cord when hands are wet.
- DO NOT use volatile cleaning solution or alcohol to clean the upholstery of this chair in order to prevent from damage of upholstery. Using leather cleaner is fine.
- It is normal that sometimes slight shacking or knocking sounds occur during massage. It is not a sign of damage.
- This machine has a self-protection device that automatically shuts down the machine if it is over-loaded or over-used. If that happens, please turn off the power and wait for about 20 minutes, and then re-start the massage chair again.