

IMC Vented Nail Table Installation Instructions **SpaSalon.us** wholesale



Nail Table parts included & needed for installation

- | | |
|---------------------------------------|---|
| A) Marble Top (1) | I) Trash Bin (1) |
| B) Left Leg (1) | J) Polish Chrome Grommets (2) |
| C) Table Top (1) | K) Stainless Steel Grill (1) |
| D) Right Leg (1) | L) 6 Plug Power Supply inside Right Leg (1) |
| E) Bolts (8), Washers (8), Wrench (1) | |
| F) Armrest with Velcro strip (1) | |
| G) Brake Casters (4) | |
| H) Screws (32) | |

NOTE: Require 2 persons to assemble

***This table is vented to wall, right side from technician view.**




Step 1

Remove drawer on Right Leg.



Step 2

Remove all drawers on Left Leg.

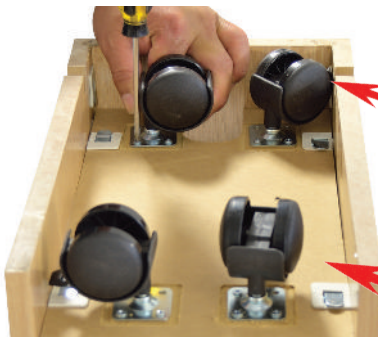


Step 3

Place flattened cardboard from shipping on floor.

Right Leg - Place Right nail table leg upside down on cardboard box to begin caster installation. Locate and position 4 caster indentations. Next, using 4 screws per caster, install 2 brake casters in front and 2 non-brake casters on rear for Right table leg. (see images of brake and non-brake casters)

Left Leg - Install casters same as Right Table Leg.

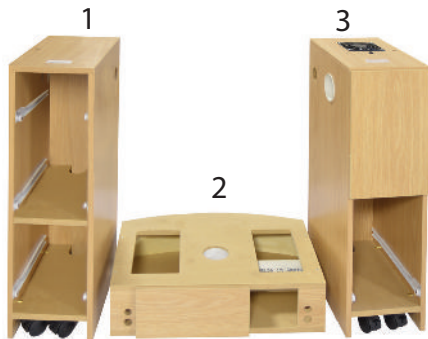

Step 4

Carefully position nail table legs and place the table parts in order. 1) Left leg 2) Table top in middle and 3) Right leg.




Step 5


Lay Right leg table on cardboard box with piece of wood (about 2 inch thick) padding the top of leg (as shown).



IMC Vented Nail Table Installation Instructions

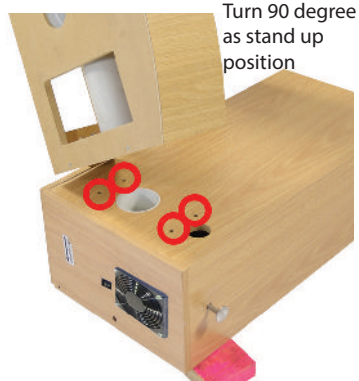

6a)

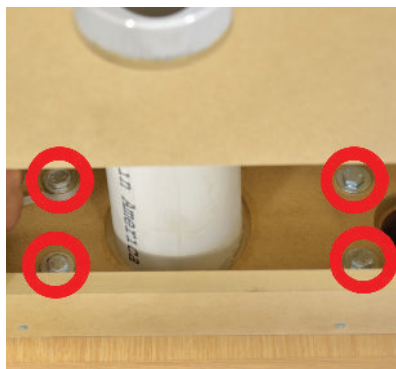

6b)




6c)

Step 6


Start Right table leg installation with 2 people. 6a) Aligning Table Top (turn 90 degree as stand up position) pre-drilled holes to Right leg pre-drilled holes. 6b) While one person is holding the Table Top in position, second person will insert 4 bolts and 4 washers into pre-drilled holes. 6c) Tighten bolts with wrench.



7a)

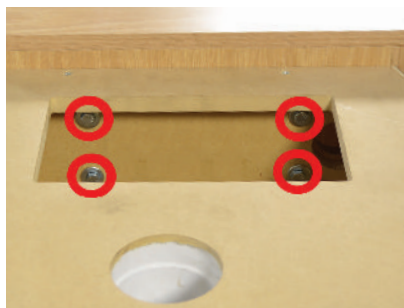

7b)

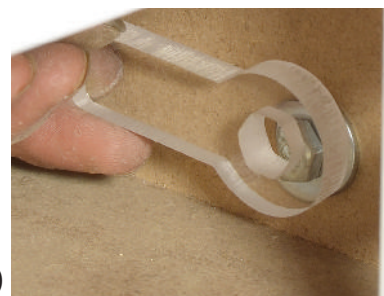

7c)

Step 7

7a) With 2 people, install Left leg by aligning Table Top pre-drilled holes to Left leg pre-drilled holes. 7b) While one person is holding the Table Top in position, second person will insert 4 bolts and 4 washers into pre-drilled holes. 7c) Do not tighten bolts completely (will do after install marble top in step 8).

Step 8

Carefully install marble top on nail table. Complete tighten bolts that attached Right leg to Table Top.



9a)



9b)



9c)

Step 9

Wipe off dust from marble top and armrest. To begin armrest installation, measure and align your armrest location.

9a) Peel off protective paper on one side of velco and place velcro on armrest. 9b) Once placed the velcro on armrest, remove the remain protective paper. 9c) Next, place armrest to marble top.

Step 10

Place Stainless Steel Grill in marble top pre-cut hole.



Step 11

Place grommets in pre-cut holes located on both sides of table legs.



IMC Vented Nail Table Installation Instructions



Step 12

Place back all drawers.



Step 13

Installation is complete!