



RedDragontm
Sauna Steamer Pedicure System

Owner's Manual

Please read this manual carefully before installation

Table of Contents

Introduction	3
Warning and Safety Instructions	3 - 4
Before Assembly	4
Specifications	4
Identified Parts	5
Steam Generator TS-3 & Remote Control	6
Assembly Instructions	7 - 8
Maintenance and Sanitation	8 - 9
Warranty	9

The Next Generation of Pedicures



Introduction

The Nail Superstore would like to thank you for your purchase of the Red Dragon Sauna System (patent pending), the world's first sauna pedicure chair. The Red Dragon Sauna System will take the pedicure experience to a whole new level.

To take full advantage of all the functions provided by the Red Dragon Sauna System, please read through this manual carefully. Please follow the instructions carefully for assembly.

Warning and Safety Instructions - READ BEFORE USE

Risk of electric shock:

- Connect only to a circuit protected by a ground fault circuit interrupter.
- Do not permit electric appliances such as a hair dryer, lamp, telephone, radio, television, or cell phone near the steam barrel.
- Only operate on a standard 110 Volt, exceeding this voltage may cause injury and damage to property.
- When not in use, always turn the power OFF.
- Do not operate unit if it has been damaged.
- Do not operate if the power cord or plug has been damaged.
- In the event of a power failure, always turn the power switch to its OFF position.
- Keep the power cord away from heated surfaces.

Risk of severe burn:

- All parts can be extremely hot.
- Check the steam temperature before each use. Steam temperature could exceed 160°C.
- Turn off and let the barrel and steamer cool down before opening the essential oils hold compartment.
- Turn the system off and let it cool down before touching any parts.
- Only place the essential oils in the system once the system has completely cooled down.
- Keep the hose that connects the steam generator to the barrel at a place that customer would not touch.
- Lower the temperature before stepping into the barrel.

Risk of injury:

- Do not allow children to use this unit.
- Be careful when lifting or carrying the barrel and massager chair; items are heavy.
- Do not stand or allow anyone to stand in the barrel.
- Close supervision is necessary when children are nearby this unit.
- Have the client enter and exit the unit slowly and carefully.

Health risk warning:

- If there is severe discomfort during the service, discontinue use and consult a physician.
- For health-related concerns and product use for diabetics, please consult a physician first.
- Do not use if the client has any cuts or open wounds.
- Do not use if the client has high blood pressure.

Maintenance warning:

- When not in use for an extended period of time, pour 1 cup of water inside the barrel to keep the wood from drying out.
- Never use ammonia or harsh chemicals.
- Only use EPA approved disinfectants to wipe the barrel.
- Disinfect the foot massager after each use with an approved cleaner.
- Do not attempt any repairs without consulting the manufacturer first.

Before Assembly

Check the shipment and confirm the number of items shipped match the number of items received. Look for visible damage to cartons such as cuts, holes, dents and take pictures of damaged areas. Please call 847-260-4000 to claim damaged or missing items within **24 hours** of receiving the shipment.

Unwrap all items carefully and check all packets before throwing away the boxes. Read the owner's manual carefully before assembly.

Specifications


Barrel base:	16 in dia
Barrel top:	20 ½ in dia
Barrel height:	23 ½ in
Barrel weight:	27 lbs
Steam Generator weight:	5 lbs
Power source:	110 V or 220 V for international orders



Identified Parts

1. Removable cover for heat retention
2. Wood barrel
3. Steam generator
4. Hose (not in illustration)

Barrel

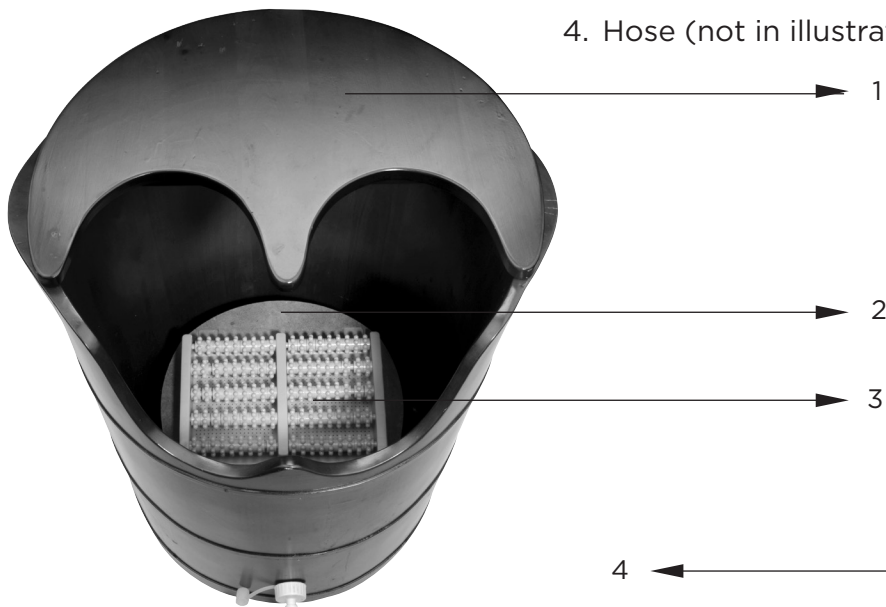

1. Barrel lid cover
2. Foot massage pedal stool
3. Foot massage pedal
4. Five rolling wheels
5. Essential oil compartment (not in illustration)




Steam Generator TS-3 & Remote Control



1. Water bottle
2. Time and Temperature display
3. **"TIME"**: Set the steamer for 1 minute to 45 minutes
4. **"POWER"**: on/off
5. **"TEMPERATURE"** setting: 9 for highest temperature and 1 for lowest
6. Main power switch

1. **"POWER"** On/Off
2. **"TIMER"** Setting from 1 minute to 45 minutes
 - a. Timer Up button: Increases the time setting
 - b. Timer Down button: Lowers the time setting
3. **"TEMPERATURE"** controls setting from 9 for the highest temperature and 1 for the lowest
 - a. Temperature Up button: Increases the temperature
 - b. Temperature Down button: Lowers the temperature
4. Battery tray: Uses 3V Lithium Coin Cell Battery

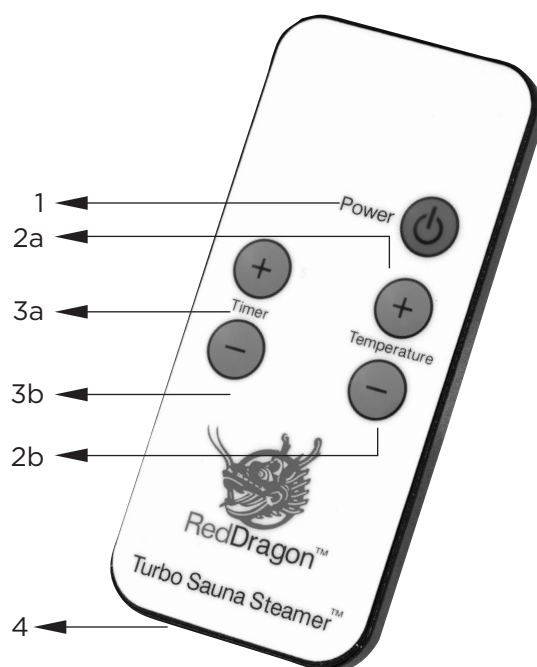

Assembly Instructions


Step 1



Step 2



Step 3

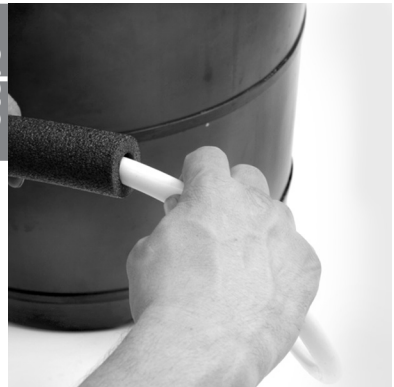

Step 4



Step 5



Step 6



Step 7




Step 8



Step 9



Step 10

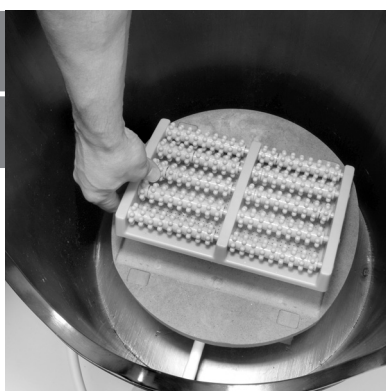

Step 11



Final



Assembly Instructions

1. Within the barrel, hook up the essential oil compartment pipe to the opening.
2. Outside the barrel, locate the pipe hose to insert into the barrel's external opening.
3. Hook the pipe hose to the barrel's external opening.
4. Hook the other end of the pipe hose to the steamer.
5. Open the steamer's water container Fill water bottle with TAP WATER up to the highest water level/neck line (see picture). **THE STEAMER SHOULD ONLY BE FILLED WITH BASIC TAP WATER.**
6. Close and lock the steamer unit.
7. Optiona:Open the essential oil compartment at the bottom of the barrel.
8. Optional: Add a few drops of client's favorite essential oil to the barrel's bottom essential oil compartment and close it. NEVER ADD ESSENTIAL OILS TO THE STEAMER CONTAINER.

Note: USE ONLY TAP WATER. DO NOT USE DISTILLED, ROSE OR ANY OTHER TYPE OF WATER. DO NOT PUT ANY ESSENTIAL OILS OR ANY OTHER SPA ITEMS INTO THE STEAMER CONTAINER. ESSENTIAL OILS SHOULD ONLY BE PLACED IN THE COMPARTMENT AT BOTTOM OF THE BARREL. Always leave about 0.5 inch of water at the bottom of the container when not in service. DO NOT ALLOW STEAMER TO RUN EMPTY/WITHOUT WATER or to fill the steamer BEFORE it is empty. Failure to follow these instructions voids product warranty.

9. Place foot massage pedal stool on the bottom of the barrel.
10. Place foot massage pedal on top of this stool.
11. Place barrel cover on top.
12. Set the desired temperature. Cover the barrel with a towel to capture steam. After the desired temperature/steam is built-up in the barrel, start pedicure.

Note: To prevent burns, ALWAYS CHECK TEMPERATURE FIRST PRIOR TO OFFERING CLIENT SERVICE.

Maintenance and Sanitation

The barrel must be kept indoors within temperature between 45°F and 100°F. When not in use for more than 3 days, add a couple cups of water inside the barrel to

keep the wood from cracking.

Red Dragon Sauna System does not require drastic cleaning or sanitation.

- Spray the pedal with disinfectant after each use.
- Use EPA approved disinfectants to wipe the barrel after each use.
- At the end of the day, set the steam generator to the highest temperature, for 3 - 5 minutes.
- Wipe off the water moisture from the barrel with a towel or deposit the water in a sink.
- When not in use for a long time, pour one cup of water inside the barrel to maintain the humidity in the wood to prevent the wood from drying out.

Warranty

Red Dragon Sauna System has a **6-month limited manufacturer warranty.**

The warranty is limited to the parts only and does not cover labor or shipping. Warranty is non-transferrable.

Proof of purchase (original receipt) is required.

Barrel: Since it is natural wood, temperature changes could cause some small cracks or imperfections to the barrel; these can be easily fixed. We will supply wood powder. Customers can fill in the cracks; use nail glue, patch and sand-down the fill-in cracks, and then retouch with the wood color.

Warranty does not cover:

- Fading, wearing and pilling of fabrics.
- Chemical spills or scratches from sharp objects.
- Natural wear and tear, staining, fading or discoloration on the surfaces due to exposure and/or use of harmful cleaning agents or chemicals.
- Any damage resulting from improper installation, unauthorized repairs or modifications, and improper use of electrical equipment.
- Overuse or abuse of the product.