

Florence

OWNER'S MANUAL



**IT IS IMPORTANT THAT YOU READ AND FOLLOW THESE INSTRUCTIONS.
PLEASE KEEP THIS MANUAL IN A SAFE PLACE.**



IMPORTANT!

BEFORE USING THE SPA PLEASE READ AND FOLLOW INSTRUCTIONS CAREFULLY.

Please keep this manual in a safe place.

Important Safety Instructions

When using this unit, make sure to follow basic safety measures, including the following:

Warning!

To reduce the risk of burns, fire, electrical shock, or other bodily harm:

This unit should only be plugged into a circuit protected by a ground fault circuit interrupter (GFCI). Test the GFCI periodically per manufacturer's instructions.

The plug of this item can only be connected to a suitably grounded socket. Please refer to grounding instructions. The plug should be completely inserted and accessible after installation.

Please unplug the chair when not in use.

If the supplied cord is damaged, it must be replaced by the manufacturer or an authorized service representative to avoid damage or injury.

Please do not stand on the inside of the basin or on the spa.

Please keep this unit safely away from heat sources, humidity, sharp objects, corrosive chemicals, and flammable objects.

If the chair becomes damaged, splashed with or dropped into water, or fails to operate for any other reason, please contact the dealer and send it to an authorized service center for repairs.

This unit is for indoor use only.

To avoid risk of electric shock or bodily harm, please do not open or disassemble any part of this item.

Pregnant women, people of poor health, and those who experience pain in their neck, back, waist, or hips should consult with their doctors before use. People with pacemakers or other personal medical devices should consult the manufacturer of the device and doctors before use.

Disabled people or those who cannot express themselves must be strictly and continuously supervised while using this chair.

Please do not allow small children to use or play around the chair.

Do not use if you are diabetic, have poor circulation, or if any area of your feet or legs are inflamed or have open wounds. Consult a physician before using if you have any kind of fungal infection, swelling, fracture, or persistent pain.

Receipt & Inspection

Thoroughly inspect each shipment immediately upon arrival. It is important that you notify the delivery driver of any damage and insist on a notation directly on the face of the freight bill. Failure to note damage on the face of the freight bill may impede and/or prevent any claims that you may have against the carrier.

If concealed loss or damage is found, you must notify the carrier at once and request an inspection. **DO NOT DISCARD THE SHIPPING CARTON.** If you give the carrier a clear receipt for goods that have been damaged in transit, you do so at your own risk and expense.

Grounding Instruction

To reduce the risk of electric shock, proper grounding is required for the chair. This item is equipped with a grounded plug; insert the grounded plug into a grounded socket with proper installation and suitable local voltage.



Dangerous!

Incorrect grounding may cause electrical shock. If you have any questions about this item, please consult a licensed electrician. If the plug sent along with the chair does not match your socket, please do not modify the socket. Ask technicians to install a suitable one. Modification from the original manufactured specifications will void all warranties expressed or implied. Please do not use a plug adapter.

Changing the Fuse

In cases of an electrical shortage the fuse may burn out. The user can open the fuse cap with a screw driver and replace it with an appropriate fuse and put the fuse cap back on. If there are any questions please consult a licensed electrician.

Important Precautions

AYC Group requires that you contact a local, qualified plumber to install your new AYC Group pedicure spa. It cannot operate properly or safely unless it is provided with adequate electrical power, sufficient water pressure, proper water temperature and the required drain facilities. Information on these important subjects is contained in this manual. We urge you to read it carefully to make sure these requirements are met.

1. Excessive water temperature is dangerous and should be checked before use. Maximum operating water temperature should not exceed 100 F° (38 C°) and the maximum supply water temperature should not exceed 125 F° (65 C°).
2. Always enter and exit the pedicure spa slowly and carefully.
3. Never bring and/or operate any electrical devices into or near the spa.
4. Do not stand in the whirlpool tub!

Installation Summary

The installation must comply with all plumbing and electrical codes. A licensed plumber should complete the plumbing of the spa.

Note: Failure to comply with federal, state or local codes and ordinances will result in the warranty being considered null and void.

Select a level location where the floor is capable of supporting the weight of an occupied spa. For the seat back to fully recline, the spa base must be placed a minimum of 16-20 inches from the wall.

Connect the water supply lines with cold and hot inputs.

Connection: Cold ½ NPT
 Hot ½ NPT

Connect the floor drain connection to the P-trap (if you are using a wall drain you will need to install a discharge pump).

Connection: P-trap 1½-inch drain pipe

Place the drain plug into the drain from the top (the drain plug may need to be adjusted so that it forms a tight seal around the drain).

Install the faucet handle by inserting it into the faucet in front with the red and blue indicator facing up. Then, tighten the lock screw with a small flathead screwdriver.


Attach the sprayer to the sprayer hose (be sure to cut the zip tie around the sprayer hose).

Plug the power cord into a GFCI outlet.


Specifications

Shipping Dimension & Weight	Pedicure Spa & Massage Chair	60"L x 40"W x 48"H	250 lbs.
Net Dimension & Weight	Pedicure Spa & Massage Chair	56"L x 23.5"W x 56"H	194 lbs.
Capacity of Tub		4.5 Gallons (approximate)	
Switch		On/Off Air Activated Switch	
Power Source	Dedicated 15Amp Wall Outlet Required		
	Pipeless Jet motor	120V, 0.4 A, 60Hz	
	Discharge Pump (Optional)	115V, 3.2 A. 60Hz	
	Massage System	120V, 60Hz	
Plumbing Source	Hot Water	½" (fitting provided)	
	Cold Water	½" (fitting provided)	
	Drain	3/4" or 1 ½ " (See Plumbing Instructions)	
Warranty	1 Year (See Warranty for covered parts)		

Floor Drain

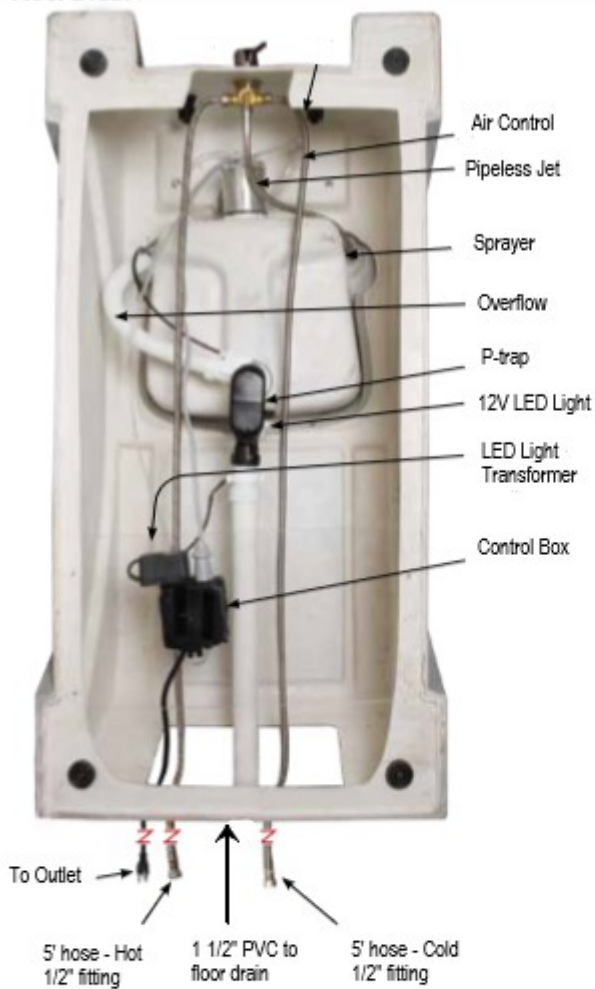

Wall Drain

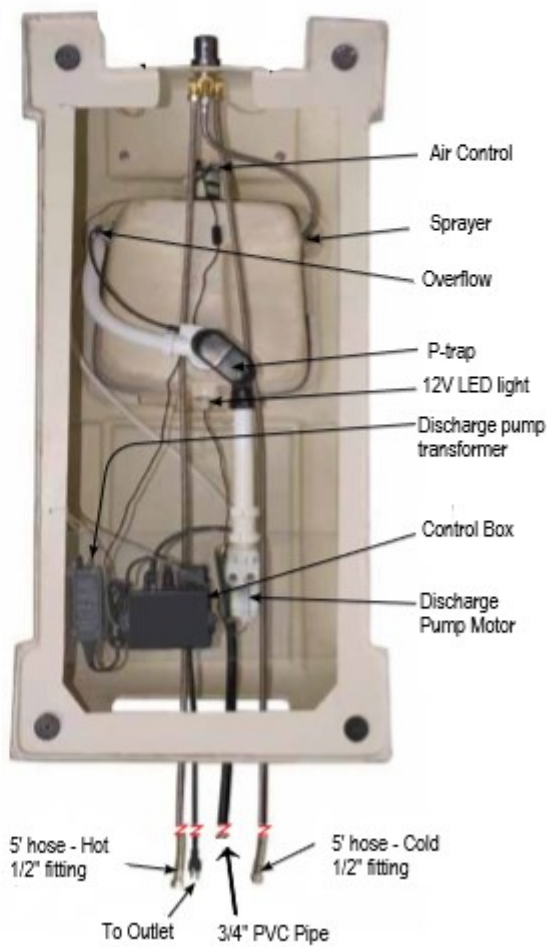

Operating the Pedicure Spa

After the spa has been installed and the plumbing and electrical connections have been completed, clean the tub and wipe dry with a clean towel. Follow these instructions to test the pedicure spa:



1. Turn the "drain handle" (2) to open/close the drain. ***Note:** If drain will not open, check the water stopper and tighten/loosen the adjustment screw as needed.
2. Fill the tub until the pipeless jet is completely submerged in water by lifting the faucet handle (1).
3. Press the left button (3) to turn on/off the pipeless jet.
4. Press the right button (4) to turn on/off the discharge pump (if unit is equipped with one).

Note: If the discharge pump is not used, the water will drain out automatically.

Cleaning and Disinfecting the Pedicure Spa

Please follow these instructions to clean and disinfect the spa:

Between Each Customer

1. Drain all water and remove debris from the spa.
2. Clean the spa with soap or detergent and water.
3. Spray the surfaces and walls of the spa using the attached sprayer.
4. Wipe the spa dry with a clean towel.

Daily Flushing of the Pipeless Jet System

The spa must be thoroughly cleaned after the last pedicure of the day in the following manner:

1. Remove the jet cover by turning counter-clockwise.
2. Remove all debris trapped behind the cover and/or impeller.
3. Clean all parts with a mild soap, vinegar solution, or detergent and water.
4. Do not run the pipeless jet without the jet cover/magnetic head and impeller in place.
5. Fill the tub basin with about 5 gallons of water.
6. Turn the pipeless jet on.
7. Add 3 teaspoons of low-foaming dishwasher detergent and 2 ounces of bleach to the tub basin.
8. Run pipeless jet for 10-15 minutes and drain the tub basin.
9. Clean the exterior of the pedicure spa with a soft cloth and mild detergent.

Biweekly Cleaning of the Pipeless Jet System

In addition to the daily cleaning, the follow cleaning procedures must be performed every other week:

1. Fill the basin with 5 gallons of water.
2. Turn the pipeless jet on.
3. Add 3 teaspoons of low-foaming dishwasher detergent and 2 ounces of bleach to the tub basin.
4. Run pipeless jet for 10-15 minutes. Let the water sit overnight in the tub (6-10 hours).
5. Run the pipeless jet for 5 minutes and drain the tub basin.
6. Follow the instructions in "Daily Flushing of the Pipeless Jet System."