



**Katai™**  
pedispa



**EVEREST I™**  
Pedispa



**EVEREST II™**  
Pedispa



**JAGUAR™**  
PEDISPA



**Ella™**  
pedispa



**Milan™**  
pedispa



**IT IS IMPORTANT THAT YOU READ AND  
FOLLOW THESE INSTRUCTIONS.  
PLEASE KEEP THIS MANUAL IN A SAFE PLACE**



**IT IS IMPORTANT THAT YOU READ AND  
FOLLOW THESE INSTRUCTIONS.  
PLEASE KEEP THIS MANUAL IN A SAFE PLACE**



**DANGER:** Risk of Electric Shock. Connect only to a circuit protected by a ground fault circuit interrupter

**GROUNDING IS REQUIRED.** The unit should be installed by a qualified service representative and grounded.

Install to permit access for servicing.

**CAUTION:** Risk of electric shock. Disconnect electric power before servicing.

**WARNING:** Risk of accidental injury or drowning; children should not use hydro massage bathtub without adult supervision.

**WARNING:** Risk of accidental injury or drowning; do not use hydro massage bathtub unless all suction guards are installed to prevent body and hair entrapment;

**WARNING:** To avoid injury, exercise care when entering or exiting the hydro massage bathtub;

**WARNING:** Risk of accidental injury or drowning: do not use drugs or alcohol before or during the use of a hydro massage bathtub equipped with heater to avoid unconsciousness and possible drowning

**WARNING:** Risk of fetal injury; pregnant or possibly pregnant women should consult a physician before using a hydro massage bathtub equipped with heater;

**WARNING:** Risk of hyperthermia and possible drowning; do not use a hydro massage bathtub equipped with heater immediately following a strenuous exercise

**WARNING:** Risk of electric shock; do not permit electric appliances (such as a hair dryer, lamp, telephone, radio, or television) within 1.5M (5 feet) of this hydro massage bathtub;

**CAUTION:** Test the ground fault circuit interrupter protecting this appliance periodically in accordance with the manufacturer's instructions

**WARNING:** Risk of hyperthermia and possible drowning; water temperature in excess of 38° C (100.4° F) may be injurious to your health. Check and adjust water temperature before use.

**WARNING:** Risk of hyperthermia; people using medications and/or having an adverse medical history should consult a physician before using a hydro massage bathtub equipped with heater.



# IT IS IMPORTANT THAT YOU READ AND FOLLOW THESE INSTRUCTIONS.

## PLEASE KEEP THIS MANUAL IN A SAFE PLACE

Thank you for purchasing our spa.

You have made the right choice. Our spas are designed to meet your needs. This pedicure spa is only one in a full line of spas, which include the Katai™, Everest™, Milan™, Jaguar™, and Ella™ pedicure spas. With proper care, you can enjoy your T<sup>4</sup> pedicure spas for many years to come.

One of the most remarkable features of this spa is the HT-135-PS chair, designed especially for salon professionals. The chair is a state-of-the-art product that embraces the latest technology while applying the ancient healing art of massage. This revolutionary system duplicates the latest techniques used by massage and chiropractic professionals for back and spine care.

Before installation and use of your pedicure spa, please read the entire manual thoroughly. If you encounter any questions or problems in regards to your pedicure spa, **please contact our Technical Support Department at 1-866-556-2372**, Monday through Friday 9 AM to 5 PM CST. After hours calls are recorded and will be responded to the following business day.

### Important Requirements

All outlets connected to pedicure spas must include a GFCI device (Ground Fault Circuit Interrupter) This will reduce the risk of electric shock.

It is important that you contact a local, licensed plumber and licensed electrician to install your new pedicure spa. Installation must be in compliance with all your local and state building codes.

Your pedicure spa cannot operate efficiently or safely unless it is provided with adequate electrical power, sufficient water pressure, proper water temperature, and required drainage capabilities.

Contact your local building inspector for information and local code compliance procedures that need to be followed when having your pedicure spa installed.

Subsequent inspections and approvals that may be required are the responsibility of the purchaser.

### Table of Contents:

Safety Information	4-5
Installation Information	6-7
Plumbing Installation	8
Chair Installation	9
Cushion Installation	10
Tray Installation (optional)	11
Basin Operation	12
Cleaning Instructions	13
Remote Features	14-15
Use, Care, & Maintenance	16-17
Specifications	18
Warranty Information	19
Parts	20-23

*Please take the time to record your spa information here.*

Serial Number: \_\_\_\_\_

W/O Number: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

# Safety Information

**Before using your new pedicure spa, please read and observe these safety instructions carefully to reduce the possibility of fire or injury. For additional questions, please call our Customer Service Representatives at (866) 556-2372.**

**WARNING:** It is very important that you carefully follow the basin cleaning procedures on page 13 to ensure that the spa is sanitized after each use. T4 is not liable for any infections or disease that may result from improper cleaning or failure to adhere to sanitation requirements.

- This pedicure spa unit should only be operated in a room temperature between 40°F (4°C) and 100°F (38°C).
- Do not use unit outdoors or in excessively humid or dusty environments.
- Do not use unit where aerosol (spray) products are being used or oxygen is being administered.
- Do not operate unit if it has been damaged.
- Always connect this unit to a properly grounded electrical outlet.
- This unit is designed only to operate on a standard 110 Volt 60Hz house current. Exceeding this standard may cause injury and damage to property.
- Do not use this unit if noise above normal sound is heard.
- To reduce the risk of burns, fires, and electrical shock, never leave this unit unattended if plugged in and always unplug when not in use for an extended period, before installation, cleaning, or removal of parts.
- Keep the power cord away from heated surfaces.
- Do not operate unit if the power cord or plug has been damaged.
- If this unit is operating abnormally or malfunctioning, immediately turn off the power and disconnect the power cord from the outlet; do not operate unit if it is not working properly.
- In the event of a power failure, always turn the power switch to its OFF position.
- When not in use, always turn the power switch to its OFF position.
- To disconnect unit, turn all controls to OFF position and remove power cord from the outlet.
- Keep all electrical devices away from this unit.
- This unit only has a weight capacity of 250 pounds (113.4kg).
- Enter and exit the unit slowly and carefully.
- Never drop or insert any object into any opening of the unit.
- Close supervision is necessary when this unit is used by, on, or near children, invalids, and disabled persons.
- Do not stand or allow anyone to stand in the spa basin.
- Please be aware that a spa basin filled with water is a potential drowning hazard.
- Check the water temperature before each use; water temperature should not exceed 105°F (41°C) and water temperature in heater should not exceed 150°F (65°C).
- Disinfect the spa basin and jets, after each use with an approved cleaner.
- Do not massage any area of the body that is swollen, inflamed, or covered with skin eruptions.
- Before operating the massage chair, make sure the chair arms are down.
- If there is severe discomfort during the massage, discontinue use and consult a physician.
- Do not use the massage chair for more than 15 minutes at one time.
- Do not put hands or fingers near massage mechanism or rollers while the chair is operating; touching the mechanism can result in injury from the rollers squeezing together.
- Keep the massage chair and its air openings clean and free of lint, hair, and dust; never operate the massage chair if the air openings are blocked.

## **Health Risk Warning**

Use of the pedicure spa unit should be pleasant and comfortable; there is any pain or discomfort, stop use of the pedicure spa immediately.

A physician should be consulted before use of the massage chair by anyone with the following conditions: Malignant tumor, Heart disease, Pregnancy, Conditions requiring rest, and Back disease or trouble from an injury or accident.

A physician should be consulted before use of the spa basin and jets, by anyone with diabetes, swelling, fracture, or persistent pain.

Anyone with inflamed legs or feet, open wounds, or fungal infections should not use the spa basin and jets.

## **WARNING - GROUNDING INSTRUCTIONS AND METHODS:**

This unit must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electrical current to reduce the risk of electric shock. All outlets connected to pedicure spas must include a GFCI device (Ground Fault Circuit Interrupter) This will reduce the risk of electric shock.

This unit is for use on a normal 110-volt circuit .

This unit is equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

If you are in doubt as to whether this unit is properly grounded, check with a qualified electrician or serviceman. Fatal electric shock and fire could occur with improper connection of the equipment-grounding conductor. Do not modify the plug provided with the product for any reason; if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

## **WARNING: THERMAL RESETTING PROTECTION DEVICE**

The massage chair is equipped with a thermal resetting protection device. This is a safety feature to protect it from overheating. If the chair should suddenly stop and will not start, turn the main power switch off, and do not operate the chair for at least 30 minutes. Failure to turn the chair off may result in the chair starting unexpectedly when the device cools.

## **SAVE THESE INSTRUCTIONS**



# Installation

## Important Installation & Utility Information

### Electrical Service:




A 110V, 60 Hz, 15 Amp GFCI protected grounded circuit must be used to supply power to the pedicure spa.

### Water Supply:

- Observe and follow all local codes in regards to plumbing connections.
  - 30 to 80 PSI water pressure is needed to correctly fill the basin a correct level.
  - The hot water supply temperature must not exceed 150° F (65° C); exceeding this temperature may cause damage to your unit and injury. If the temperature is higher than this, then please lower your water heater to the correct and acceptable temperature.
  - Carefully connect the incoming water supply lines to the appropriate fittings located on the back of the pedicure spa. For hot and cold water supply fittings (see figure 3) below. For power drain/floor drain fittings location, page 8.
  - Shut-off valves are recommended.
  - To prevent the water supply contamination, our shower head includes a back flow preventer. (see figure 1)
- We also highly recommend you to install a Reduced Pressure Back Flow (RPBF) for each hot & cold water supply line. Please check with your local plumbing code requirements.

T4 recommends Watts 909 RPBF for each main supply line (see figure 2). Installation must be done by a licensed plumber, and installation procedures must comply with all state and local codes.

***You are responsible for your valves, connections, and compliance to local codes.***

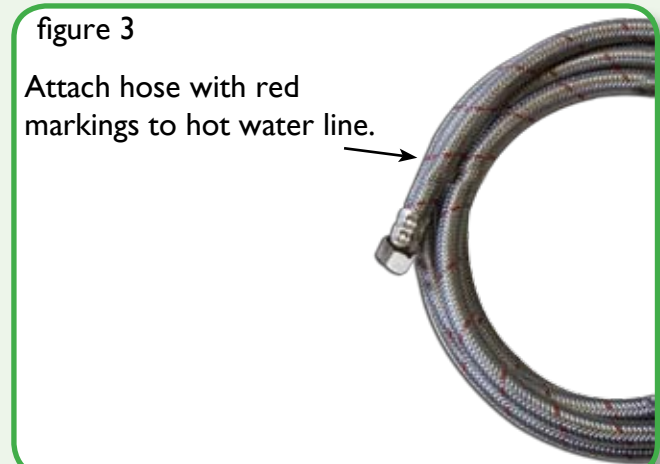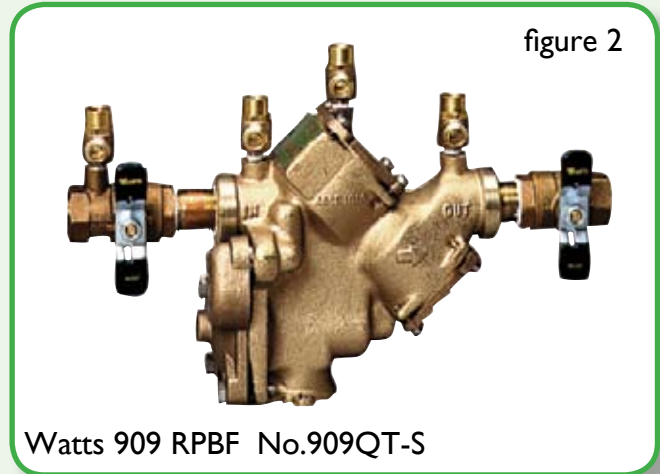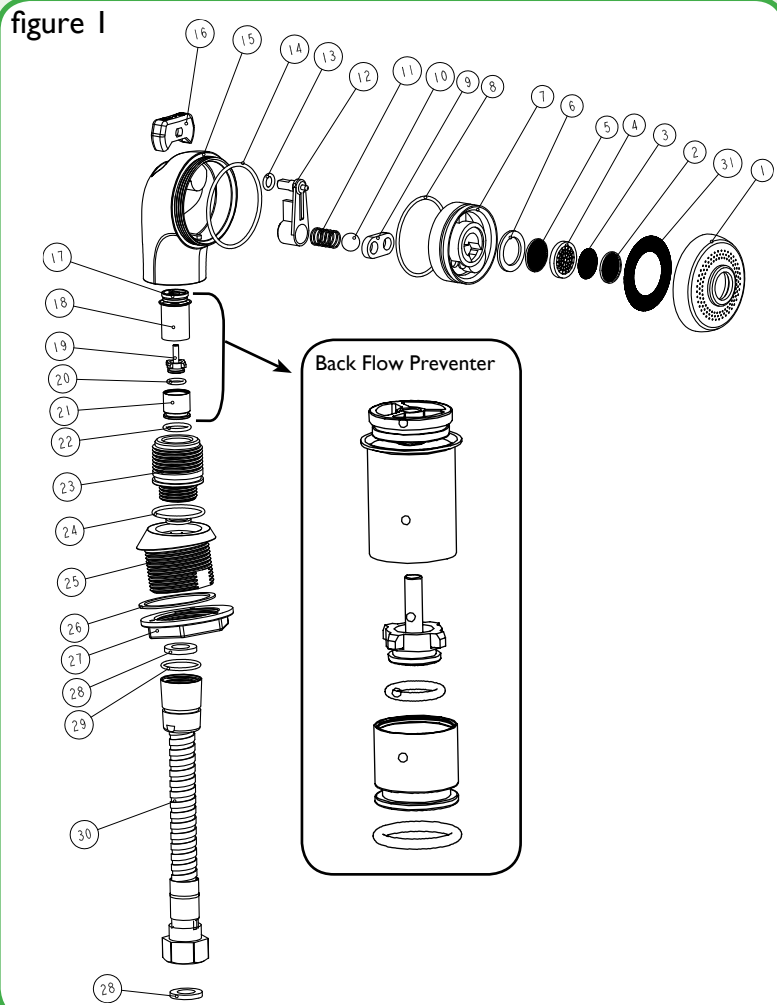

## Location and Support

The pedicure spa must be on a level location. The floor structure of that location must be capable of supporting both the pedicure spa and its occupant at the same time.

To fully recline the pedicure chair, the base of the unit must be positioned to a minimum of 25" from the wall.

Minimum installation dimensions:

Everest.....W 34" x L 80"

Ella.....W 30" x L 69"

Milan.....W 30" x L 69"


Jaguar.....W 30" x L 69"

Katai.....W 30" x L 69"

## Licensed Installation Required

Please check your local plumbing and electrical codes. Installation of this pedicure spa must comply with both. You must hire a licensed plumber and a licensed electrician to complete the applicable connections to your pedicure spa.

NOTE: Failure to comply with federal, state, or local codes will result in the warranty being null and void.

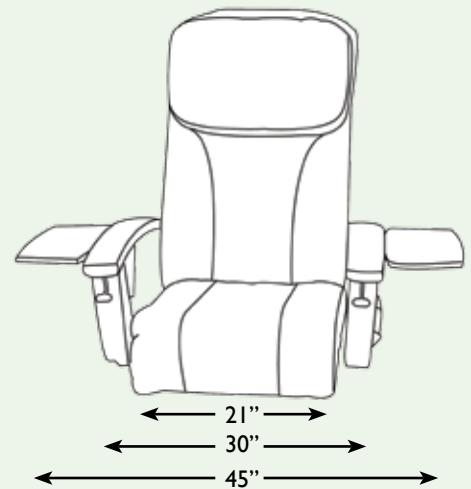


### Parts Included:


5 bolts




1 Allen Wrench

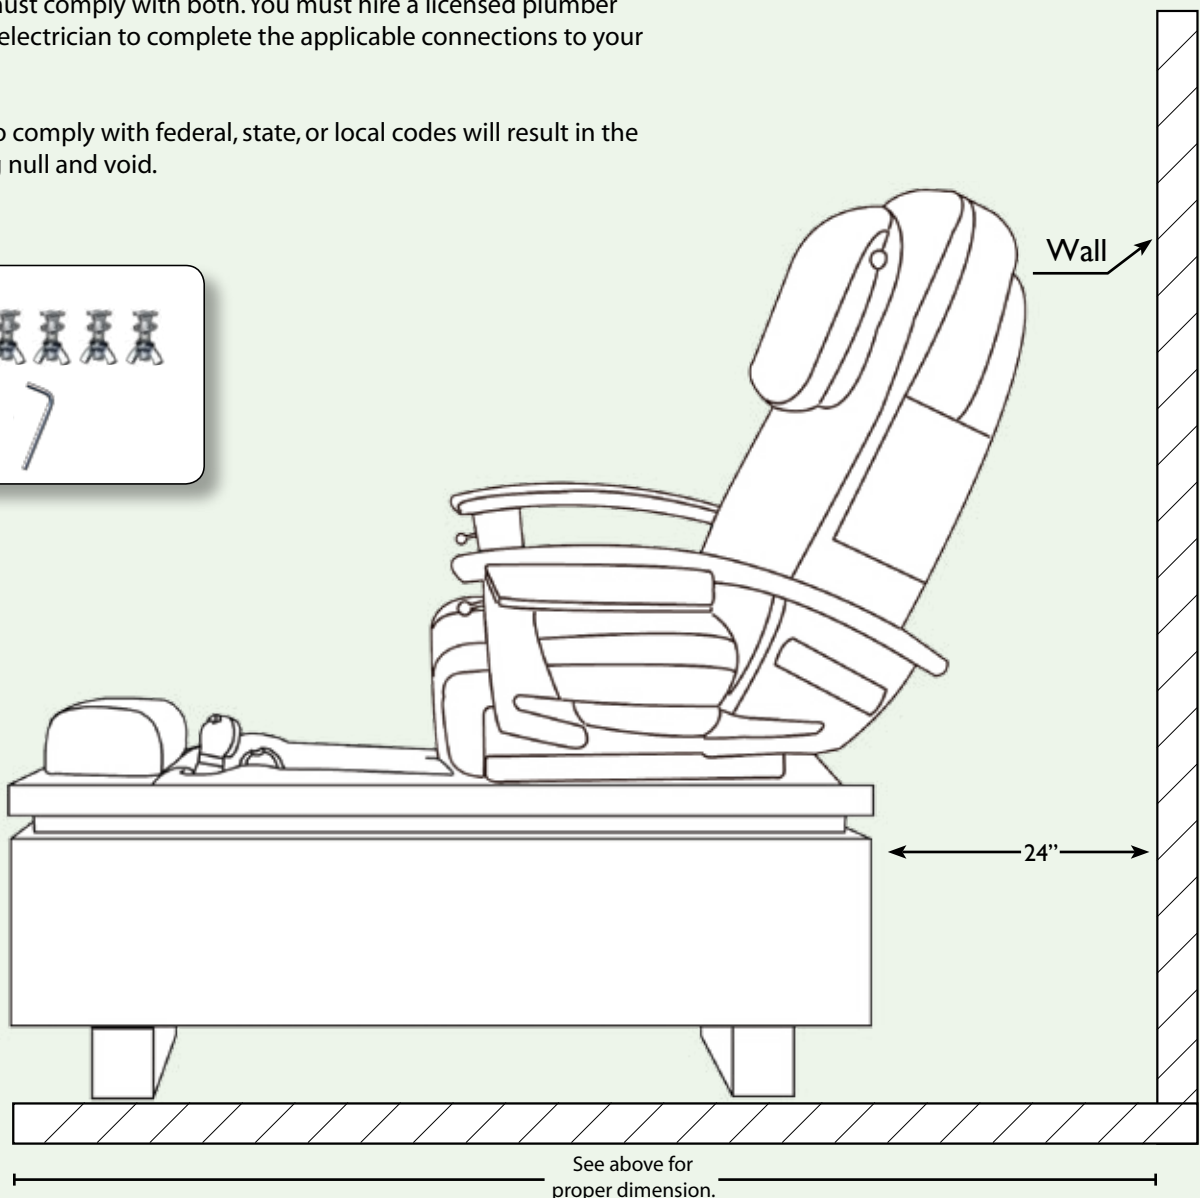

# Wall Drain Installation

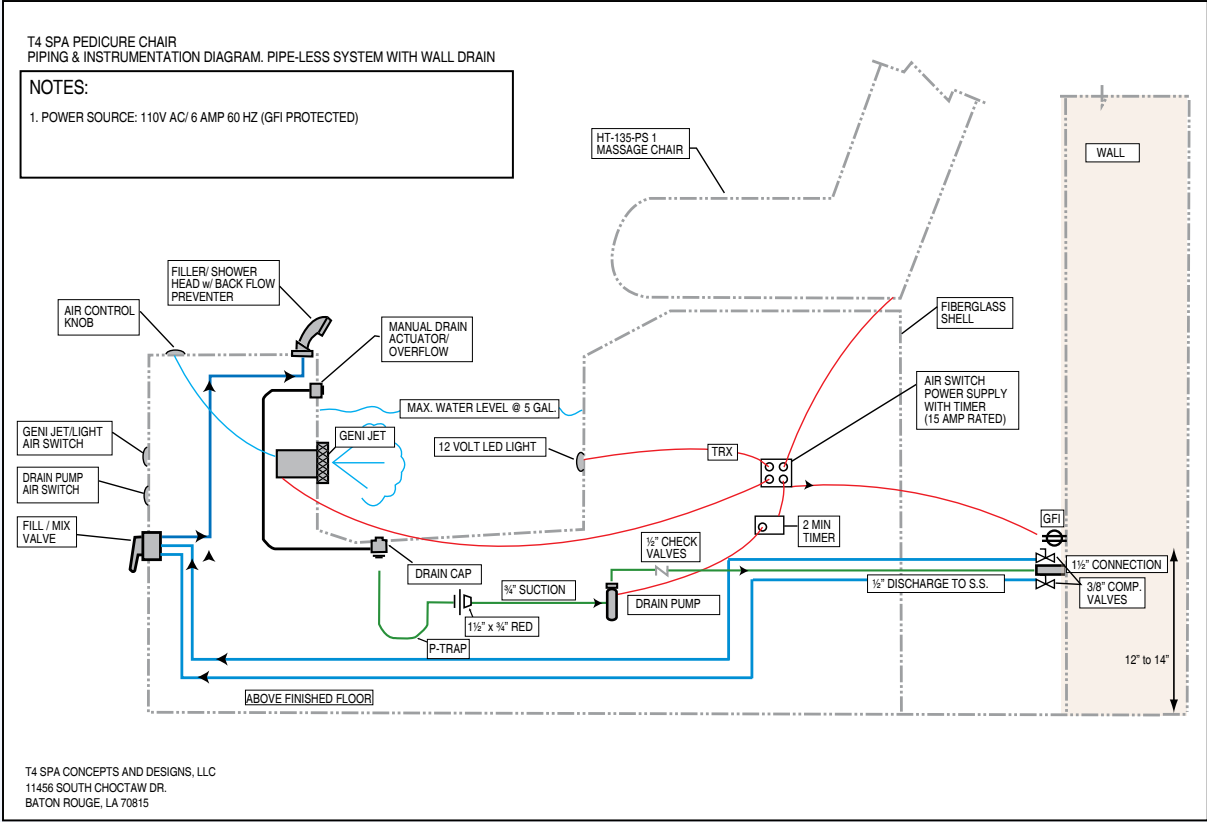

# Gravity Drain Installation

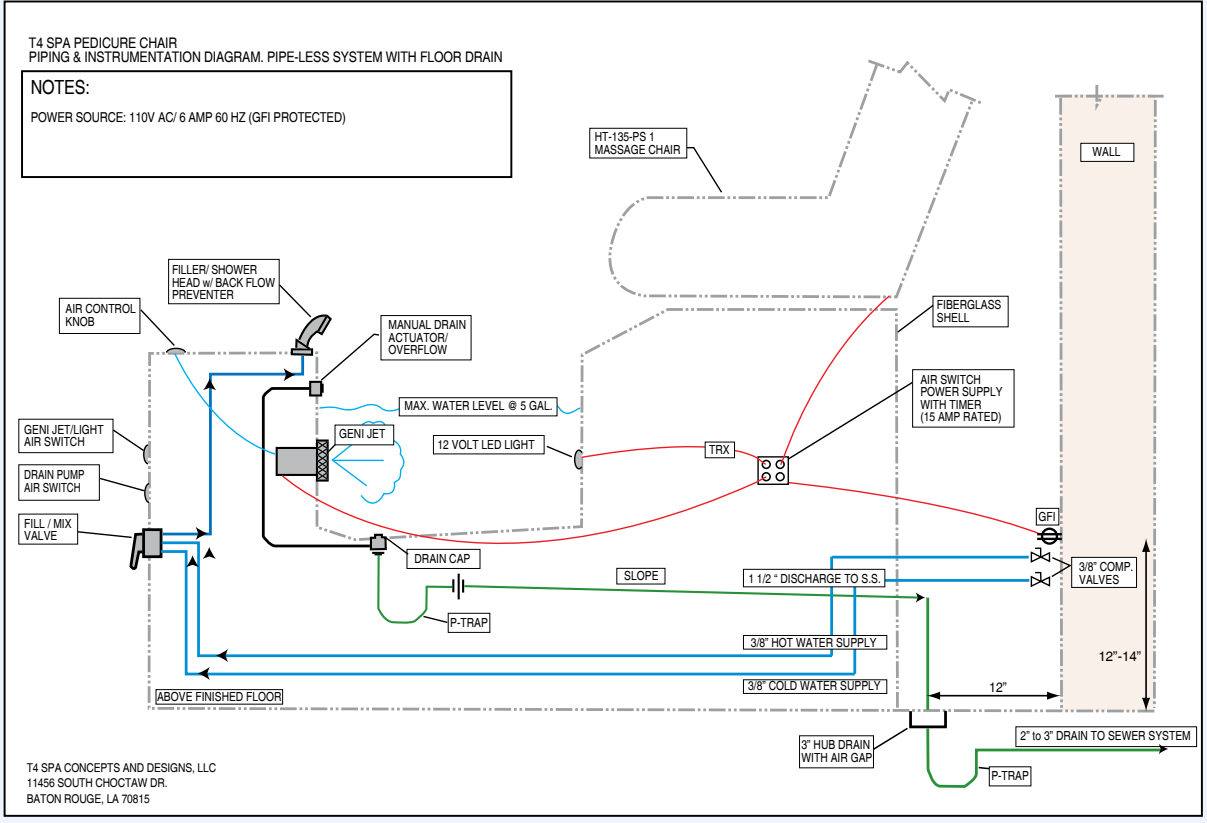



# Chair Installation

NOTE: 2 people are required to attach the chair to the spa basin. Please do not attempt to do it by yourself.

1



First, write down all of your information & serial # on page 3 in this manual.

2



Remove chair out of the box carefully, make sure that you do not grab the armrest.

3




Place chair on the tub.

4



While one person holds the chair in place, the second person flips up the bottom cover.

5

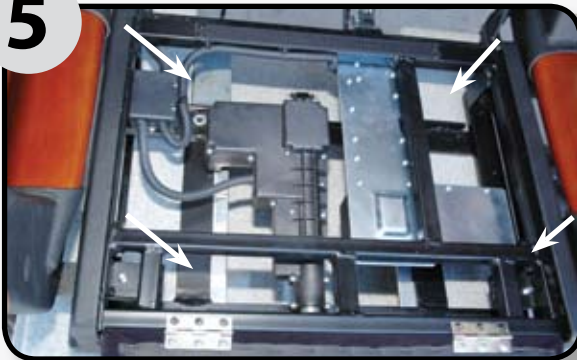


Lift the bottom cover. Plug chair in. Move chair forward/backward with remote control to clear the holes. Align bolt holes in chair with holes in spa.

6



Place the four bolts into the holes. Add the washers according to the following drawing (figure 7)

7

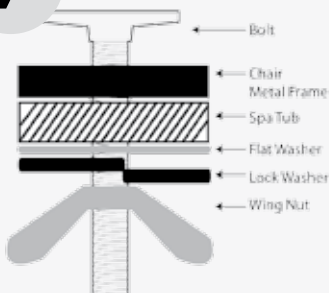

Install bolt and washers in order shown here. Tighten bolts by reaching underneath the chair. Bolt is not tight until lock washer is fully flat. This will prevent the chair vibration from unscrewing bolt.

8



After placing the screws, lock the backrest of chair by pushing the back until it locks. To unlock the chair, pull down lever.

# Cushion Installation

1



After attaching the chair to the pedicure tub, simply flip back the bottom cover to install the seat covers.

2



Place the back cushion first.

3



Attach all the velcro areas in the correct location.

4



Your chair should resemble image number 4.

5



Place the bottom cushion next.

6



Your chair should resemble image 6.

7



Place the headrest cushion last.

8



Attach the two straps into the correct areas.

9



Install the provided back softening pad for a softer massage. Unzip very top zipper and insert pad.



# Side Tray Installation

1



Remove trays from protective packaging. Trays are universal, each will fit on right or left side.

2



Lift the chair arm to begin installation of the side tray.

3



Unscrew the bolts under armrest with the Allen Wrench tool that is included with chair.

4



Align holes on tray with holes on armrest.

5




Replace bolts and hand tighten.

6



Secure the bolts tightly with the Allen Wrench tool that is included with chair.

7

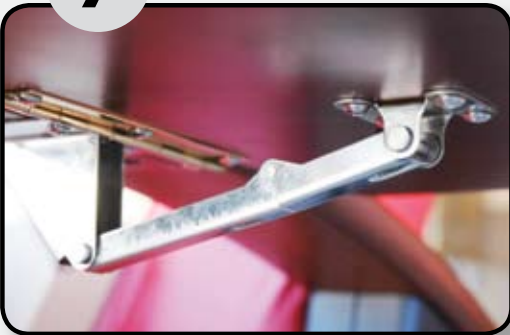

To lock trays, simply lift the side tray up.

8



Pull the lever underneath the tray down to unlock.

## **Please note:**

*Technicians must fold down the manicure trays after each use.*

*This will prevent any accidents caused by customers using trays for support when entering or leaving chair.*

# Spa Basin Operation

## **Preparing the Pedicure Spa for Operation:**

Clean and disinfect the basin following the instructions on page 13 before initial use.

## **Operating the Pedicure Spa:**

### **Add Water to the Pedicure Spa Basin:**

1. Turn the overflow knob counter-clockwise until it stops to close drain.
2. Lift upward on the hot & cold control mixer to add water to the basin. Turn the handle in a counter-clockwise direction for cold water or clockwise for warm water as indicated by the red (hot) and blue (cold) markings under the handle. Continue to add water until the fill line is reached. The fill line is indicated by the wavy (~~~~) line in the basin.  
CAUTION: Always check water temperature before use; hot water can burn skin. Water temperature should not exceed 105° F (41° C).
3. Turn the off water by pushing the handle downward.

**Start or stop the whirlpool by pressing the silver On/Off button.**

### **Remove water from the Pedicure Spa Basin:**

Make certain the whirlpool jets are turned off by pressing the silver on/off button.


For use with a floor drain, simply open the drain by turning the overflow knob in a clockwise direction until it stops. You should see the water level lowering as water exits the basin.

For use with the optional drain pump feature, open the drain by turning the overflow knob in a clockwise direction until it stops. Press the silver button marked "Drain" on the front panel. The water level will lower as water is pumped out of the basin. Turn the pump off by pressing the "Drain" button on the front panel once the basin is fully drained (NOTE: the drain pump will automatically shut off after 2 minutes.) We recommend turning off the pump manually if all water has drained before automatic shut-off. Drain pump may overheat if operated more than 10 minutes.


**NOTE: If you are using a wall drain, it is very important that you close the drain cap for each use.**

**Failure to do so will result in contamination of the system.**

## **Front View**

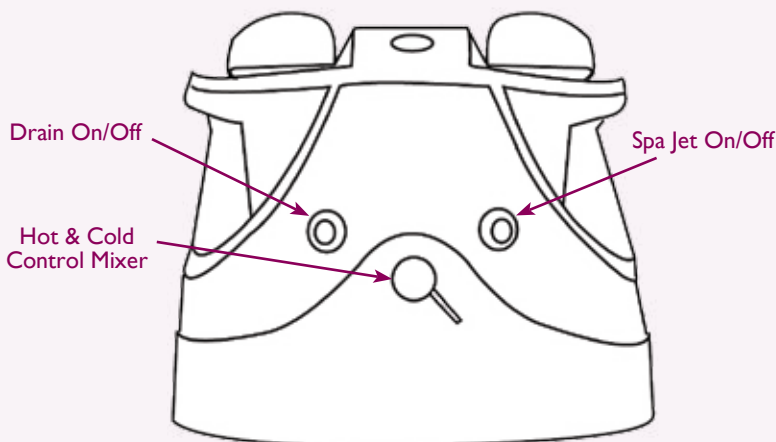

## **Tub Top View**

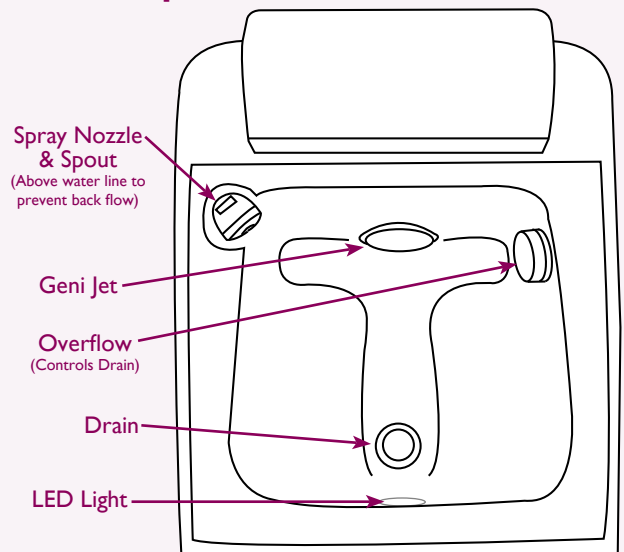

## **Warning:**

It is extremely important to follow the cleaning instructions located on page 13. Failure to clean the pedicure spa adequately can result in serious health issues for your clients as well as the nail technician. Failing to clean your pedicure spa may also cause the pedicure spa to not work properly. Please consult your local and state codes concerning pedicure chair cleaning for further requirements.

# Basin Cleaning Procedures

**WARNING: It is very important that you carefully follow the basin cleaning procedures below to ensure that the spa is sanitized after each use. T4 is not liable for any infections or disease that may result from improper cleaning or failure to adhere to sanitation requirements.**

**Please check with the state board code in your area for specific spa disinfectant procedures.**

## After Each Customer

1. Remove suction cover by turning counter-clockwise. Remove any debris present with water spray.
2. Spray Sanitex disinfectant on impeller.
3. Spray Sanitex disinfectant on both sides of suction cover.
4. Thoroughly clean inside surface of spa tub, foot rest, and arm rest with Sanitex disinfectant wipes.
5. Thoroughly clean rest of the spa basin surface with Sanitex disinfectant wipes.
6. Allow 10 minutes for disinfecting time to complete.



Remove suction cover by turning counter-clockwise.



Spray impeller.



Spray suction cover on both sides



Replace suction cover by turning clockwise. Clean inside basin with disinfectant wipes



Clean the rest of the spa tub, footrest, and armrest with disinfectant wipes.

## Every Night

1. Remove suction cover by turning counter-clockwise.
  2. Use a soft brush and water to clean suction cover.
  3. Use a soft brush and water to clean impeller. Put suction cover back in its place by turning clockwise.
  4. Add 1 level scoop of Pedi-Clear disinfectant crystals. Circulate for 10 minutes and let it soak overnight.
  5. The next morning, drain water and thoroughly clean inside surface of spa basin with Sanitex disinfectant wipes.
  6. Thoroughly clean rest of the spa tub surface with Sanitex disinfectant wipes.
- The unit is now ready for the first customer of the day.



## Recommended EPA Approved Hospital Grade Items:

Available from Alfalfa Nail Supply, Inc: 1-800-572-9938

### Sanitex Spray

EPA Approved & Hospital Grade



### Sanitex Wipes

EPA Approved & Hospital Grade



### Pedi-Clear Disinfectant Crystals

EPA Approved



# Massage Chair Remote and Features



## • Master Power Switch



Before starting, please read all Safety Warnings and Cautions at the beginning of this manual. Plug the massage chair into a grounded 110 VAC power source and turn on the master power switch located on the back side of the backrest, next to the power panel.

## • Stop Button



Use Stop/Park to cancel all massage sessions and park rollers at the top of the back rest.

## • Restore Button



Auto Restore functions the same as Stop/Park plus resets backrest to normal upright position.

## • Seat Power Recline Buttons



Use the "back" buttons to recline seat.



Use the "seat" buttons to move seat forwards and backwards.

## • Auto Massage Programs



Choose from 3 different fully automatic massage programs, which concentrate on certain areas of the back. Programs run for 15 minutes each. (See next page for details.)



## • Shoulder Height



Adjusts chair to proper shoulder height.

## • Width



Focus or diffuse massage pressure by adjusting the width of the precision massage rollers. Select narrow, standard, or wide roller setting while in Percussion, Roll Full Back and Roll Partial Back massage modes.

## • Location:



Use with manual massage buttons. Allows you to customize the massage for your individual needs. Fine tune the position and focus of your massage with finger tip control. Select custom massage functions, and pinpoint the massage anywhere on your back.



## • Zone



Concentrates massage in a 5" spot wherever you hit this button.

## • Roll



Use with manual massage modes. Press roll for full back massage.



## Stationary Massage Modes



### **Compression :**

Alternating strokes along the back that press on both spinal muscles and spinal joint areas. Feels like the heels of the hand firmly pushing on muscles along the side of the spine, and then inward toward the spine. Alternating “hands” also deliver a soothing rolling motion for the body. Aids in muscle and joint repair due to strain from exercise, long hours spent bent over a desk, or high stress levels; can improve mobility and overall posture.



### **Kneading :**

Massage nodes moving in small, circular motion on both sides of spine simultaneously. This second phase of massage is slightly more intense than the rolling and is considered to be a more deep muscle massage. Feels like the thumbs or heels of the hand pressing firmly in a circular motion on both sides of the spine. Relieves tension and soreness by lifting and stretching muscles; improves circulation and helps bring vital nutrients to spinal area.



**Percussion:** Alternating strokes along the spine that stimulate both spinal muscles and spinal joint areas. Feels like fists or length of hand rapidly tapping on back muscles. Flexes spinal joints and relieves pressure on spinal column. Invigorates entire back area.



### **Knead + Percussion :**

The same feel and benefits as described in “Up-Down Kneading” that can be applied in a single area. Use the Manual Position up & down buttons to apply the massage in the desired area. Feels like the thumbs or heels of the hand pressing firmly in a circular motion on both sides of the spine. Relieves tension and soreness by lifting and stretching muscles; improves circulation and helps bring vital nutrients to spinal area.



## Automatic Massage Programs



These functions run pre-programmed combinations of signature massage modes for 15 minutes. Choose a full back massage, an upper back massage, or a lower back massage.



## Neck Massage Softening Pads

The neck and back softening pads allow you to fine tune the massage experience around your head, neck and back. Experiment with various massage settings before removing the pad.



### **Removing the neck softening pad**

1. Pull back the back cushion. Open the horizontal zipper located just below the top zipper.
2. Grasp the Softening Pad firmly, and pull it completely out of the pocket.
3. Close the zipper and resume massage.

# Use & Care

## ***Chair Maintenance:***

Lubrication is required on the drive shaft every 6 months. Yellow or white grease sold at auto part stores can be used. Please refer to the page 17, "Greasing Drive Shaft" for further instructions.

Remove dust on the backrest or armrest with a vacuum.

Do not use benzene, thinner or any other solvents on your massage chair.

If the backrest or armrests become soiled, wipe with a damp cloth, then a dry cloth.  
(Common vinyl cleaners may be used for tough stains.)

Use a dry cloth only to clean the controller and around the power switch.

Foreign objects should not be inserted between the massage nodes or the unit housing.

Cover the chair when not in use for a long period of time.

If chair will be out of use for a long period of time, unplug and coil the power cord and cover the chair or place in an environment free for dust and moisture.

Prolonged exposure to direct sunlight can cause fading or damage.

## ***Pedicure Product Guidelines:***

Please follow these guidelines when choosing products to use in your pedicure spa.

Always use pedicure products and cleaning solutions in accordance with each manufacturer's directions. Understand and follow your state regulations regarding proper product use and disinfecting requirements. This is solely your responsibility.

- Avoid products that contain a foaming agent; this will cause excessive foam.
- Products containing non-dissolving abrasives (such as sand and sea salts) will not harm the internal component structure of your pedicure spa as long as the spa cleaning requirements are followed after each use and each night. Refer to page 13.
- Oil based products may be used in your pedicure spa as long as the cleaning requirements are followed after each use and each night. Refer to page 13.

If you follow the operating, cleaning, and maintenance procedures, this pedicure spa can give you many years of service.

If you experience problems with your spa, please contact our Technical Support line at 1-866-556-2372

# Greasing Drive Shaft

We recommend greasing the drive shaft every 6 months - more if in dusty conditions.  
Failure to follow this procedure will void warranty.

1



First, remove chair cushions.

2



Locate zipper pull on bottom of chair. Carefully cut off plastic zip tie blocking zipper.

3



Unzip cover to expose roller mechanism

4



suggested item:



Use white or yellow colored grease.  
DO NOT use black.  
Grease can be bought at any hardware or auto parts store.

5



Apply grease along coiled pole and at the very bottom of pole. Use remote to move mechanism down, and grease top of pole.

6



Also apply grease at the joints of robotic arms.

Top view:



7

Replace mechanism cover, and cushions.

# Specifications

## ***Chair Specifications***

Massage Robot: 2 Motor/ 4 Roller

Operating Voltage: 110 V

Power Consumption: 70 Watts

Size: Chair (reclined) 28"W x 61"L x 34"H

Weight: Chair 144 Lbs

Shipping Weight Chair - 184 lbs

Recline Angle: 145 Degrees

Number of Massage Functions: Four (4)

Programmed Function: 4 Steps (Repeating)

Massage Head Storage: Auto at Top

Automatic Timer Shut-Off: 15 minutes

Total Massage Stroke Length: 18.0 Inches

Full Length Travel: 43 seconds (25 - 35 - 45 In/Min)

Rolling: 25 - 35 In/Minute

Kneading: 50 - 35 - 20 Cycles/Minute

Compression: 70 - 50 Cycles/Minute

Percussion: 135 - 110 Cycles/Minute

Up/Down: 25 - 35 - 45 In/Minute

Cover Fabric Material: Polyurethane

Accessories: Massage Softening Pads

\*Specifications are subject to change without prior notice.

## ***Basin Specifications***

Hot and cold water supply lines required (hot and cold shut offs may be installed under or behind pedicure spa basin) see pg 6

Drain installation: Reference note on page 8; can be installed with optional drain pump for wall drain or a gravity drain.

Shipping dimensions: 55" (140cm) L x 33" (84cm) W x 41" (105cm) H\*

Empty weight: 100 lbs

Shipping weight: 160 lbs

Capacity of basin: 5 U.S. Gallons (18.9L) = Traditional Whirlpool (with Jets)\*

Power source: 110V AC / 15 Amp, 60 Hz (GFCI Protected)

Caution: Pedicure spa must be installed by a licensed electrician and a licensed plumber, conforming to all local and national electrical codes.

Jet System: Pipe Less whirlpool pedicure spas: built-in air control, (1 or 2) Geni jets, LED lights, optional drain pump.

Drain Pump Motor: Little Giant - Model # 3E-34N, 115V, 60 Hz, 2.5A, UL Listed #23H1

Geni Jet Motor: 120V AC, 60Hz, 1.2A, ETL Listed. #3097259

LED Light: Model # DA-20-12G; 12V AC, 60 Hz, 1.67A, UL Listed #E149474-3G58

Electrical switches: On/Off air switch for Geni Jet & Led Light. On/Off air switch for drain pump.

Hand-held low voltage remote control for massage chair.

Limited warranty: One (1) year from date of purchase.

Due to our policy of continuous improvements, all specifications are subject to change without notice.

\*Note: All dimensions and weights are approximate

T<sup>4</sup> manufactures the pedicure spas and HT-135- PS Chairs (herein called “pedicure spas”) with the highest standards for quality materials and workmanship. Accordingly, T<sup>4</sup> warrants its products as follows:

To the original owner of the T<sup>4</sup> pedicure spas, T<sup>4</sup> may repair or replace at its option any pedicure spa deemed to be defective in material or workmanship upon inspection by an authorized representative of T<sup>4</sup>. This warranty covers only the listed components for the following time periods:

- Recirculating Pump: One (1) year from date of shipment
- All other components: One (1) year from date of shipment
- There are no other warranties, express or implied.

Owner must pay all labor and shipping charges necessary to replace or repair the pedicure spa. T<sup>4</sup> will not be liable for any consequential, incidental, or contingent damages.

If a pedicure spa needs to be exchanged, it will be limited to supplying a replacement pedicure spa of comparable style and size.

T<sup>4</sup> may at its own discretion use refurbished parts or pedicure spas for repair and replacement purposes.

This warranty is null and void if the pedicure spa is removed from its place of initial installation or is not installed in accordance with federal, state, or local codes and ordinances. Furthermore, this warranty does not apply if the pedicure spa has been subject to misapplication, misuse, improper installation or maintenance, negligence, improper cleaning, or other circumstances beyond T<sup>4</sup>'s control.

The following are examples of what is not covered by the warranty:

- 1) Natural wear and tear
- 2) Staining, fading, or discoloration of the vinyl seat, armrests, or footrest.
- 3) Damage resulting from standing in the basin.
- 4) Damage to pump parts and/or motor parts due to obstruction in plumbing lines, etc.
- 5) Staining, fading, or discoloration of plastic surfaces due to exposure and/or the use of harmful cleaning agents or chemicals.
- 6) Staining, fading, or discoloration caused by improper or poor water additives not related to maintenance of proper water.
- 7) Malfunctions or damage caused by improper installation, including not meeting local and state plumbing, electrical, and building codes.
- 8) Freight damage, misuse, neglect, abuse, and natural disaster
- 9) Unauthorized repairs.

Should service be required for defect or malfunction during the warranty period, please contact:

T<sup>4</sup> Spa Concepts and Designs, LLC  
Technical Support  
11488 South Choctaw Drive  
Baton Rouge, LA 70815  
Toll Free: 1-866-556-2372  
Fax: 888-257-0426  
[Http://www.t4spa.com](http://www.t4spa.com)

By using this pedicure spa, Owner agrees that the obligation of T<sup>4</sup> shall not extend to indirect or consequential damage, or injury, which may result from pedicure spa use. Owner agrees that the obligations of T<sup>4</sup> are limited to those set herein and that there are no other obligations except those expressly agreed to in writing by T<sup>4</sup>. No dealer or other person has any authority to bind T<sup>4</sup> to changes or additions to this warranty or its products; accordingly, T<sup>4</sup> is not responsible for any such warranties or representations.



# Parts

## jet



### Geni Jet 110 V

Powerful pipe free  
motor pulse jet.  
Air venturi.  
Easy to clean.

T4-GJ

## drain pump & accessories



### Little Giant Drain Pump Assembly

Includes check valve  
& P-Trap  
110V 2.5A

T4-DP

## check valves



### Dual Check Valve

Some cities require a  
backflow preventer to be  
installed on hot/cold water  
line.

CSA approved.

T4-DCV

1/2" NPSM



1/2" NPSM

1/2" NPSM

### 1/2" Diverter Tee

Allows 1 direction  
flow to spray nozzle  
or filler spout.  
(for older spa designs)

T4-DT



### 1/2" Check Valve

Use with  
drain pump.

T4-1/2 CV



### 1 1/2" Swivel P-Trap

Eliminates odors  
from drain.

T4-SPT



## timer



**Timer 2 min.**

For use with drain pump.  
Activate with air switch.

T4-2MT

## power supplies



**Floor Drain  
Power Supply**

3 on/off,  
1 continuous

Activate by air switch.

T4-3S1C



**Wall Drain  
Power Supply**

2 on/off,  
2 continuous

Activate by air switch.

T4-4P

## overflow



**Overflow  
Assembly**

Flexible Tube.

T4-OF

## hoses



**8' Stainless  
Steel Braided  
Hoses**

1/2 NPSF x

3/8 compression

T4-BHH - Hot

T4-BHC - Cold

# Parts

## shower head



**Shower Head Complete**

*Includes shower head, angle holder & stainless steel hose.*

T4-SH2



**Shower Head Only**

T4-SH2HH



**Stainless Steel Hose Only**

T4-SH2H

## led lights



**LED Light set**

*Set includes:  
18 LED bulbs, AC 12V transformer, reflector housing, nut & gasket, light holder*

T4-L18

**18 LED light bulb only**

T4-L18 (b)



**AC 12V Transformer Only**

T4-L18 (t)

## air control



**Silent Air Control**

*For use with Geni Jet. Controls air mixed with water jet.*


T4-AC



**Air Control Tube**

3/8"  
100' roll

T4-ACT

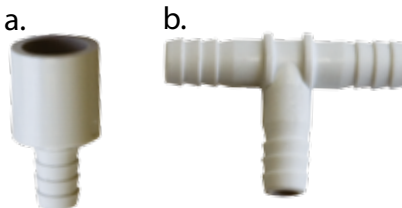

**Air Control barbs**

a. 3/8 barb x 1/2 spg  
b. 3/8 barb tee

T4-ACB½

T4-ACBT

## push button



**Metal Push Button**

Low Profile

T4-PBM



**Push Button Tube**

Clear tubing  
500' roll  
1/8"  
T4-PBT

## control mixers



**Control Mixer Single lever**

1/2" NPSM Connections

T4-LCM



**Single Lever Replacement Cartridge**

T4-LCMc



**Control Mixer Clockwise**

1/2" NPSM Connections

T4-CCM



**Clockwise Replacement Cartridge**

T4-CCMc

# Parts Identification

## Floor Drain



## Wall Drain

